



Please keep this instruction sheet for future reference,
as it contains important information.

Requires four "C" batteries (included) for
aquarium operation and two "AAA" (LR03)
alkaline batteries (not included) for remote operation.

 
Adult assembly is required.

Tool required for battery installation:
Phillips screwdriver (not included).

Wipe with a clean cloth dampened with a mild soap and water solution.
Do not immerse.

This toy has no consumer serviceable parts.
Do not take this toy apart.

Battery Replacement (Aquarium)

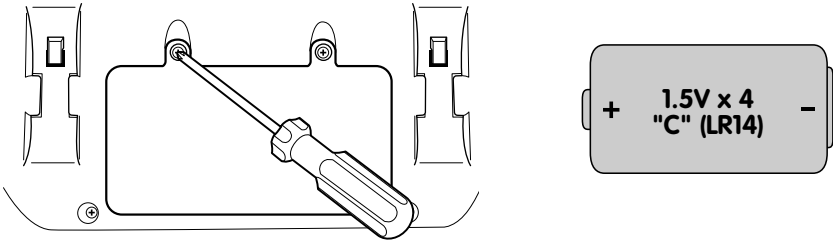

For best performance, we recommend replacing the batteries that came with the aquarium with four, new “C” (LR14) alkaline batteries.

 
 
- Locate the battery compartment on the back of the aquarium.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door. Remove the exhausted batteries and throw them away.
- Insert four new “C” (LR14) **alkaline** batteries.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- If the aquarium begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.

IMPORTANT! Under normal use conditions, the batteries in the aquarium will require replacement more often than the batteries in the remote. When sounds, lights or motions from the aquarium become faint or stop, it's time for an adult to replace the batteries in the aquarium.

Battery Installation (Remote)

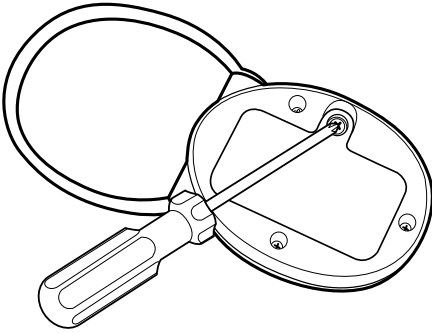

- Locate the battery compartment on the back of the remote.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert two "AAA" (LR03) **alkaline** batteries.

*Hint: We recommend using **alkaline** batteries for longer battery life.*

- Replace the battery compartment door and tighten the screw.
- If the remote begins to operate erratically, you may need to reset the electronics. Remove the batteries and replace them.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

 
Crib Attachment

WARNING

Prevent Entanglement Injury

This product may not attach to all crib designs. Do not add additional strings or straps to attach to a crib or playpen. Use **ONLY** attached to crib.

IMPORTANT! Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to a crib or playpen according to the instructions. Do not add additional strings or straps to attach to crib. Check frequently.

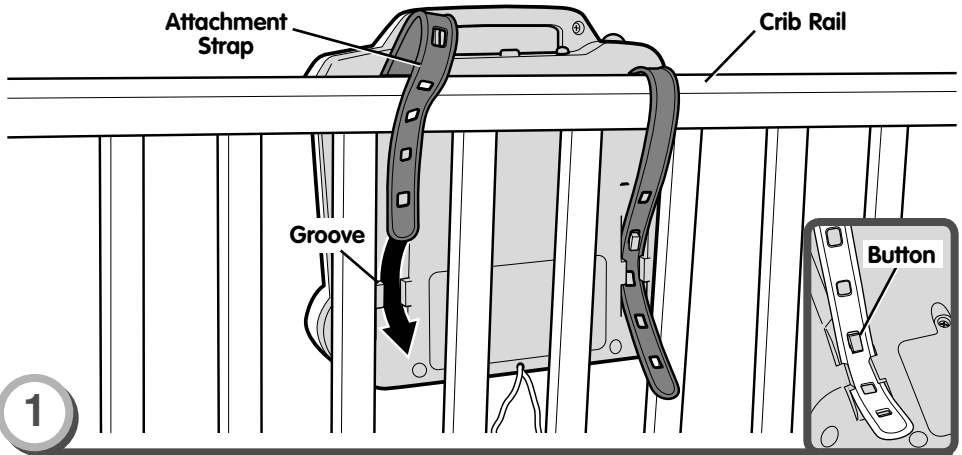


Note: If you are attaching this toy to a crib side rail that can be lowered and raised, make sure the crib side rail is in the raised (locked) position whenever a child is in the crib.

- Position the toy inside the crib.
- Wrap one of the toy's attachment straps around the crib rail.
- Slide the strap through the groove on the back of the toy. Pull the attachment strap up slightly to fasten it to the button on the back of the toy.
- Repeat this procedure to secure the other attachment strap.

Note: This toy should be snug against the crib rail and spindles. Use the strap slot that provides the tightest fit.

 
Crib Attachment

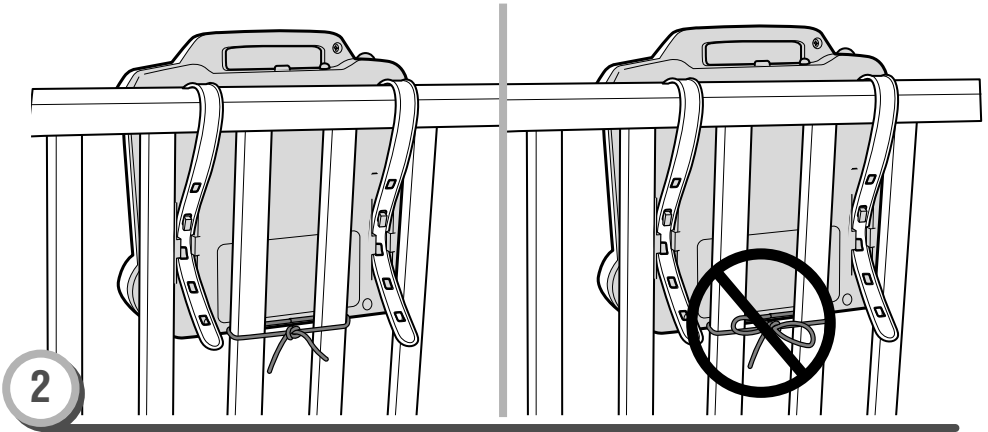

- Tie the toy's strings to the crib spindles.


Note: It is better to tie the strings in a knot than a bow, since a bow may be easily untied.

 Crib Removal

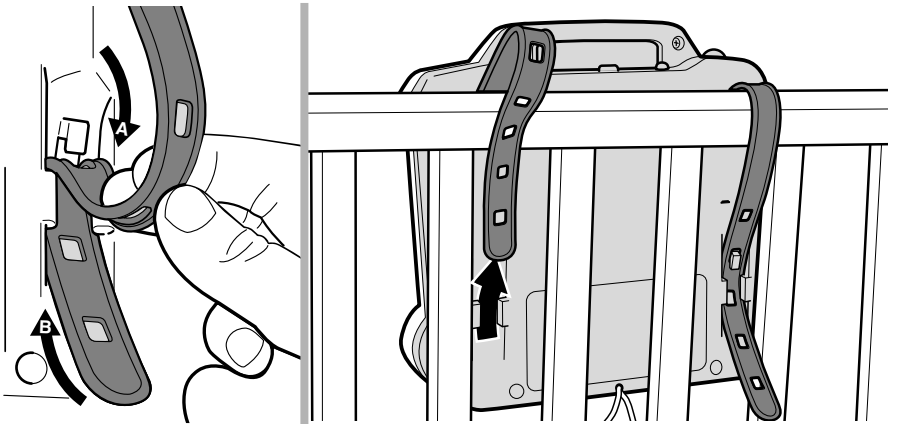

- Untie the toy strings.
- Pull the attachment strap out and down to remove it from the button **A**.
- Then, push the strap up and pull from the groove **B**.

 Use

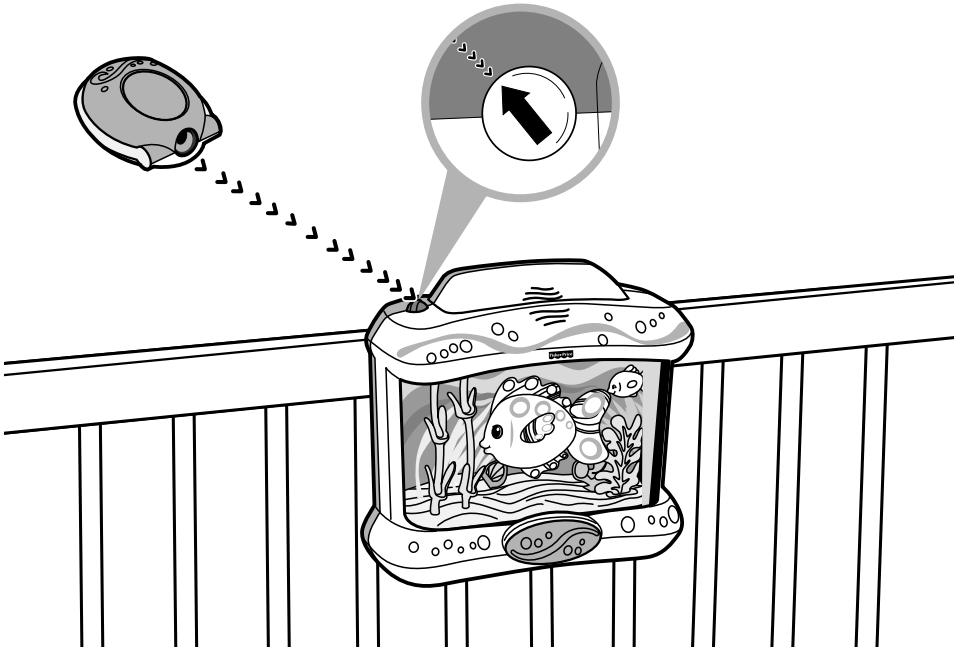


Note: A plastic tab was attached to the toy for in-store demonstration purposes. While the tab may have already been removed, check the back of the toy to be sure. If the plastic tab is still attached, pull and remove the tab. Throw the plastic tab away.

 - When using the remote, make sure the arrow on the aquarium dome is pointing towards the transmitter window on the remote. **For best results, make sure the path between the transmitter window on the remote and the dome on the aquarium are in a direct line and free of obstacles.** Rotate the aquarium dome so that the arrow points to the area where you are most likely to use the remote. For example, if you will often be using the remote from the doorway of the nursery, make sure the arrow on the aquarium dome is pointing towards the doorway.


 


IMPORTANT!

- In the unlikely event that use of the remote interferes with normal use of other remote controlled equipment, such as televisions and stereos, or use of other electric or battery powered appliances interfere with operation of the aquarium, do not use both appliances at the same time.
- For best performance avoid using the remote in areas with bright light. In bright natural or artificial light, you may notice a loss of range. Move the aquarium or reduce the amount of light in the room.

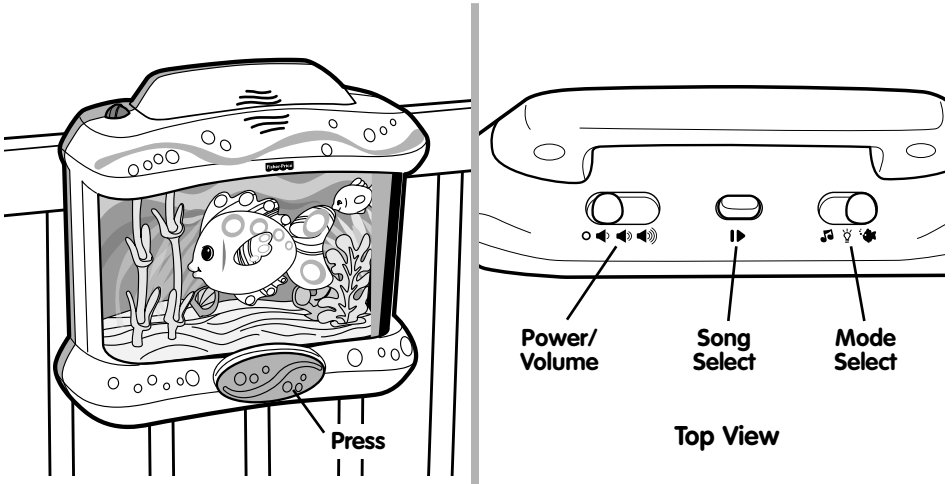
Soothing Music and Soft Lights



Power/Volume Switch




- Slide the switch to ON with low volume , ON with medium volume  or ON with high volume . When finished using the aquarium, slide the switch OFF .

Song Select Button

- Press this button  to change song selections.

Mode Select Switch

Slide the switch to:

-  Music, sounds, lights and swimming motion
-  Music, sounds and lights
-  Music and sounds only



- Press the button on the remote to activate the aquarium. Press again to stop.

Note: The remote will remain active for about one hour. After an hour, you will need to slide the power/volume switch on the aquarium off, then on again to reactivate.

Consumer Information



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)

1300 135 312 (Australia)



service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.

Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,

Maidenhead SL6 4UB. Helpline: 01628 500303.

www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.