 


Please keep these instructions for future reference as they contain important information.

BATTERY INSTALLATION:

Unscrew and lift cover away from bottom of product.
 Replace batteries as indicated inside the battery compartment.
 Batteries included are for demonstration purposes only.
 For longer life use only alkaline batteries.
 Requires 3 "AA" (LR6) batteries.



Required tool: Phillips screwdriver (not included)

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product).

To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this toy in a fire. The batteries inside may explode or leak.

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

CONSUMER ASSISTANCE
 Call toll free: 1-800-432-5437 (U.S. & Canada only)
 Mail: 9AM to 7PM, 7/24/08 to 9PM (EST)
service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
 636 Grand Avenue, East Aurora, New York 14052.
 Hearing-impaired consumers using TTY/TDD equipment,
 please call 1-800-362-7476.

©2008 Viacom International Inc.
 All Rights Reserved. Nickelodeon, Nick Jr., Dora the Explorer and all related titles,
 logos and characters are trademarks of Viacom International Inc.
 Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
PRINTED IN CHINA.
 Manufactured for Fisher-Price. ©2007 Mattel, Inc. All Rights Reserved.
 ® and ™ designate U.S. trademarks of Mattel, Inc., unless otherwise indicated.
 For countries outside the United States:
 Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.
 Great Britain: Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303.
 www.service.mattel.com/uk
 Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria. 3121 Australia.
 Consumer Advisory Service - 1300 135 312.
 New Zealand: 18-18 William Pickering Drive, Albany 1331, Auckland.
 Asia: Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

L7231



 
Dora Magical Welcome House™

INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.


BEFORE YOU BEGIN

Make sure the ON/OFF switch is turned on. The ON/OFF switch is located on the bottom of the dollhouse, next to the battery compartment. There are two volume settings for the ON/OFF switch – LOW and HIGH.

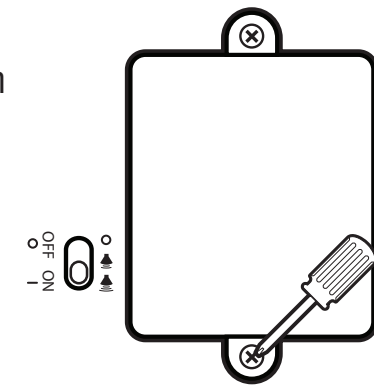

OPENING THE DOLLHOUSE

 When you remove the dollhouse from the package, it will be in the closed position. To open the dollhouse, press down on the chimney and the rooms will automatically spring open.

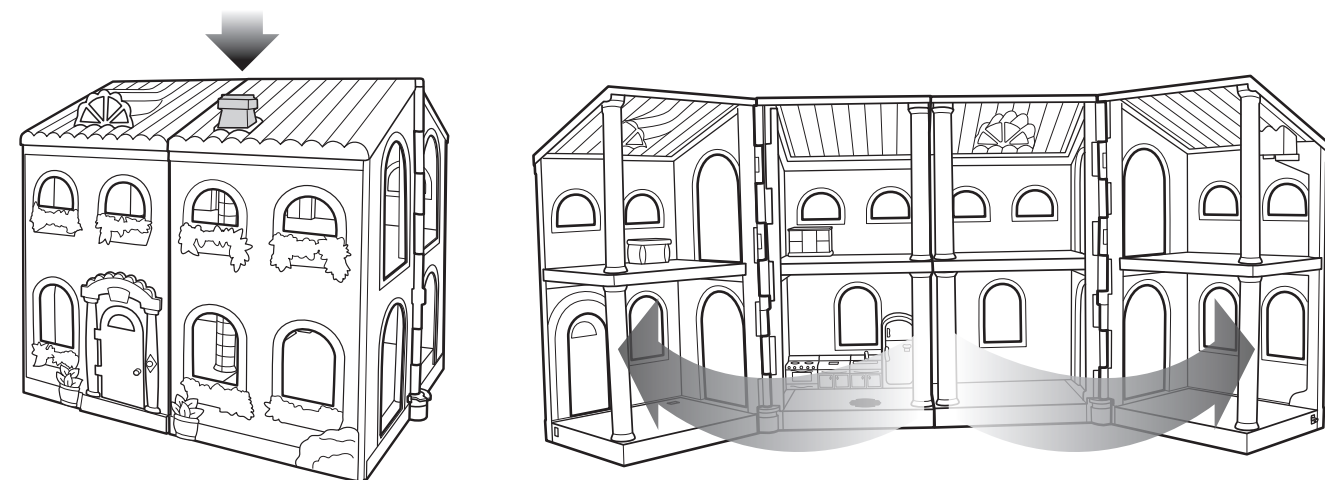


NOTE: Make sure the dollhouse is on a hard, flat surface. The "spring open" action will not work on an uneven or carpeted surface.



Back

Front

You can configure the house in any way, depending on how many rooms you open.

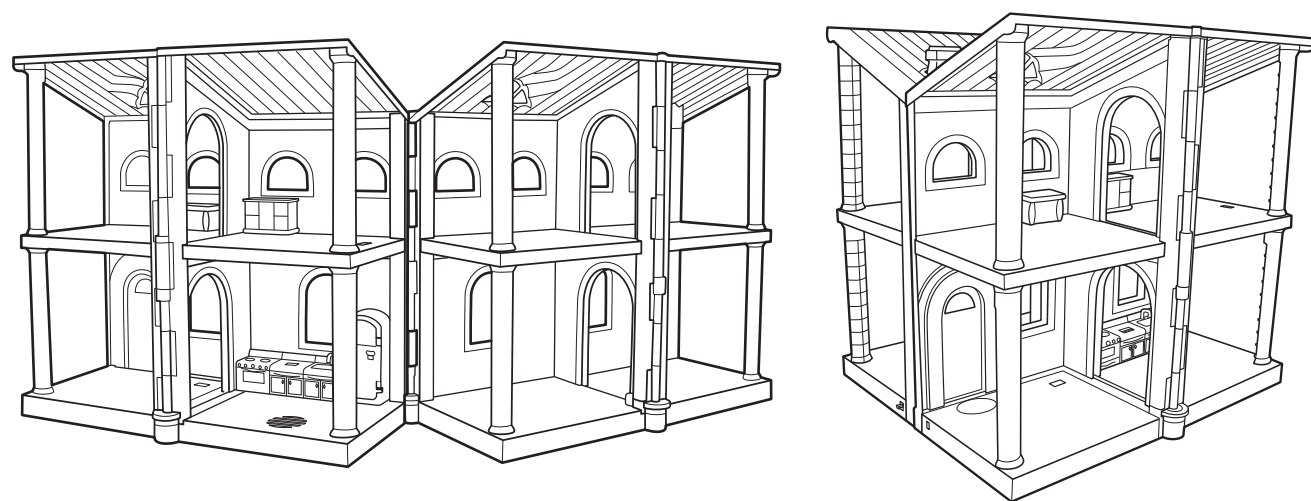


  Lock each room into a 90-degree or 180-degree position by turning the **HINGE LOCKS**. (see diagram).

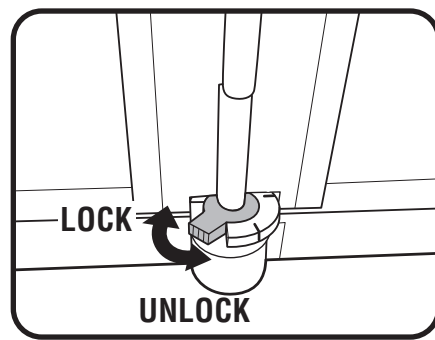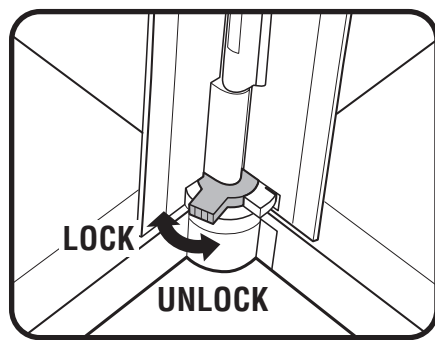

FOLDING THE DOLLHOUSE

 
Fold all 8 rooms closed until the entire house is again in the closed position and you hear the lock operated by the chimney switch snap shut.

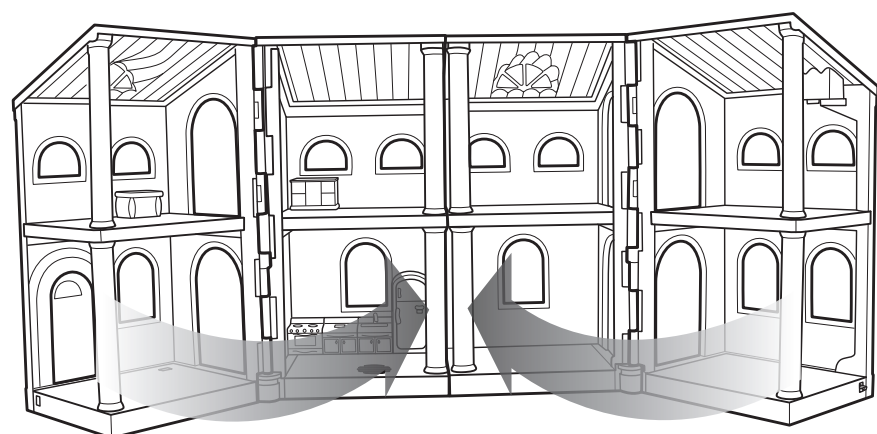

ACTIVATING SOUNDS, PHRASES & LIGHTS

Once the house is opened, there are several places where you can activate sounds, phrases and lights:




- Press the doorbell
- Open the refrigerator door

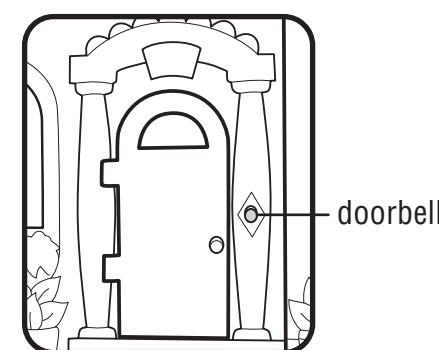

"HOT SPOTS"


There are also three "hot spots" located in the house where you can plug in various electronic accessories:

   - **PLAYROOM** – located on the floor
- **KITCHEN** – located on the counter
- **LIVING ROOM** – located on the floor

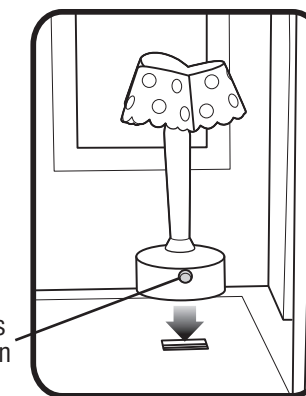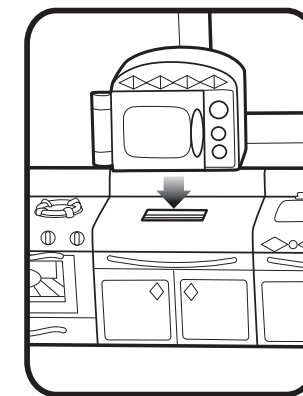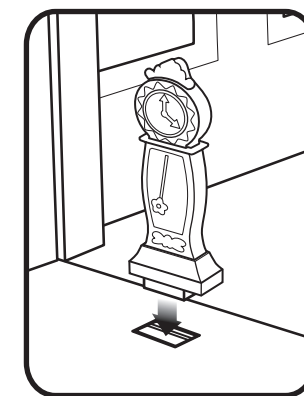

Plug in the lamp (included) into any of the 3 "hot spots" and press the button on the lamp and it will light up for 30 seconds.

 Plug in any of the other electronic accessories that come with Dora's Design and Surprise™ Furniture and other "hot spot" furniture accessories (sold separately) for lights or sounds.

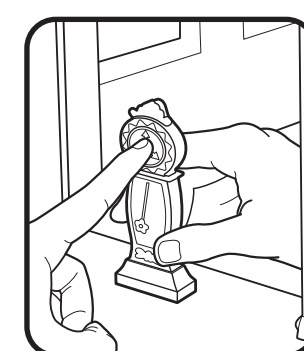

Press button on clock and hold steady with other hand, as shown.