



Prance & Fly Pegasus™



INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

BEFORE YOU BEGIN

- Remove and discard the “Try Me” pull-tab located under the pouch on Pegasus’ neck. Once the pull tab is removed, the toy will perform its full play pattern as described below.
- Be sure the ON/OFF switch is in the ON position. The ON/OFF switch is located next to the battery compartment on the horse’s tummy.

HOW TO PLAY

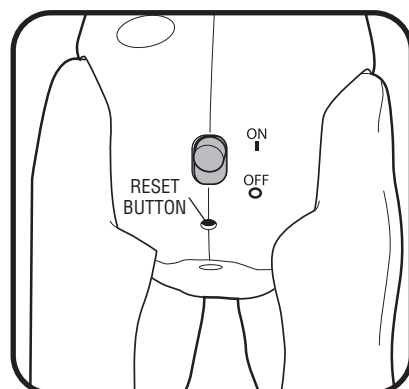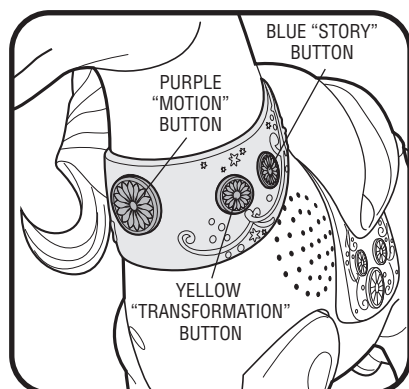

There are two ways to play with Dora Prance & Fly Pegasus:

1. Dora seated on Pegasus
2. Pegasus alone without Dora


Pegasus alone

- Press the BLUE “**STORY**” BUTTON to hear sounds and phrases.
- Press the YELLOW “**TRANSFORMATION**” BUTTON to transform Pegasus from a horse into a flying horse. Press the YELLOW “**TRANSFORMATION**” BUTTON again to change her back.
- Press the PURPLE “**MOTION**” BUTTON to make Pegasus’ legs move. Place her on a hard, flat surface and she will walk, or you can pick her up and pretend she is flying.

NOTE: Make sure you place Pegasus on a hard, flat surface. Pegasus will not walk on an uneven or carpeted surface.

Pegasus with Dora

- Seat Dora on Pegasus and insert her charm into the pouch on Pegasus’ neck.
- When the charm is inserted, you will hear a special story about Dora and Pegasus. As the story is being told, Pegasus’ wings will move out and in. You can press the BLUE “**STORY**” BUTTON at any time to interrupt the story. Press the BLUE “**STORY**” BUTTON again to restart the story. If you remove the charm from the pouch on Pegasus’ neck, the story will stop.
- Dora Saves the Snow Princess™ Dolls can be purchased separately and also be seated on Pegasus. When you insert their charms, you will hear a different special story!

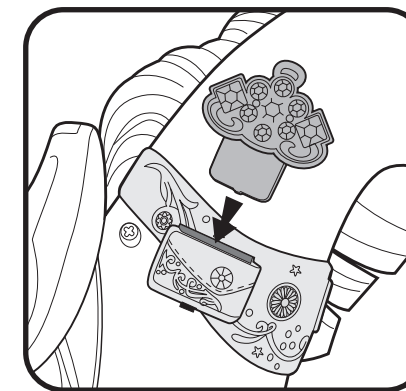


- The YELLOW “**TRANSFORMATION**” BUTTON and the PURPLE “**MOTION**” BUTTON work the same as described above.

NOTE: In the event of a malfunction, you can reset the toy by pressing the RESET BUTTON, located between the ON/OFF switch and the battery compartment. Press the RESET BUTTON using the tip of a pen or pencil.


For best performance, make sure Dora is perfectly upright and straight when seated on Pegasus. Do not lean Dora forward or backward when seated.

BATTERY INSTALLATION

Unscrew and lift cover away from bottom of product. Replace batteries as indicated inside the battery compartment. Batteries included are for demonstration purposes only. For longer life use only alkaline batteries. Requires 4 “AA” (LR6) batteries.

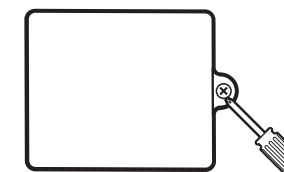

 Required tool: Phillips screwdriver (not included)



BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product).

To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this toy in a fire. The batteries inside may explode or leak.

© 2008 Viacom International Inc.
All Rights Reserved. Nickelodeon, Nick Jr., Dora the Explorer and all related titles, logos and characters are trademarks of Viacom International Inc.
Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
PRINTED IN CHINA.
Manufactured for Fisher-Price. © 2008 Mattel, Inc. All Rights Reserved.
Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.
Packaging and address should be retained for future reference.
Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-432-5437.
Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline_01628500303.
Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.
Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.
Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe,
Persiaran Tropicana Golf Country Resort, 47410 P.J. Tel:03-78803817, Fax:03-78803867.
Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-Toys.

?

CONSUMER ASSISTANCE
Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.
Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

L7236



www.fisher-price.com