 




Please keep these instructions for future reference as they contain important information.

### BEFORE YOU BEGIN

- Remove and discard the "Try Me" pull-tab, located on the back of Tigger's head, under the fabric and next to the battery compartment (see battery diagram). Once the TRY ME pull tab is removed, the toy will perform its full play pattern as described below.
- Be sure the ON/OFF switch is in the ON position. The ON/OFF switch is also located next to the battery compartment on the back of Tigger's head, under the fabric. Be sure to close the fabric opening after setting the ON/OFF switch.

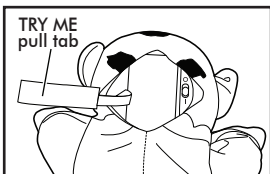

 
### HOW TO PLAY

Press Tigger's RIGHT FOOT switch to make sure he is ready to play.

There are 2 ways to play with Roll to the Rescue Sleuthin' Tigger:

#### KID CONTROL

- Press the forward and backward arrow buttons on the remote control to make Tigger do full forward and backward rolls.
- FORWARD
- BACKWARD
- "SLEUTH"

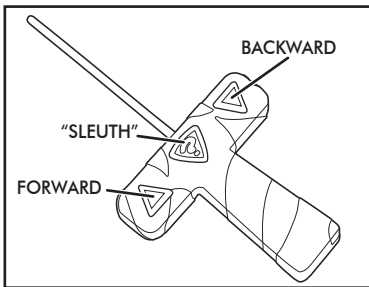


#### SLEUTH MOVES

- Press the "SLEUTH" button to unlock Tigger's secret moves. Once he starts moving, there is no need to press the forward or backward button – Tigger will perform these moves on his own!

**Note:** Tigger must be seated in his upright position before you begin play.

 If Tigger stops in the middle of a roll or falls over, he will remind you that you need to re-seat him in the proper upright position.

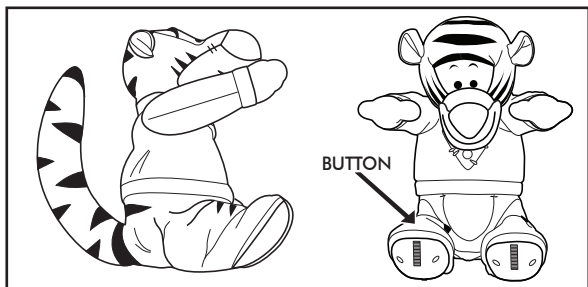

### TOY SLEEP MODE

- If Tigger is not played with for more than 2 minutes, he will automatically shut off to preserve battery life. To resume play, simply press Tigger's RIGHT FOOT switch again.

### TROUBLESHOOTING GUIDE

If Tigger is not performing properly, be sure to check all of the following:

 
- Press the RIGHT FOOT switch to make sure Tigger has not fallen asleep.
- Move the remote closer to Tigger. The remote must be within a 10 feet range in order to function properly.
- Make sure Tigger is sitting in the proper upright position before pressing any buttons.
- If Tigger is not responding to the remote, you may need to replace the batteries in the remote.
- If Tigger is not completing his moves properly, you may need to replace the batteries in Tigger.
- If you lose the remote, you can still play with Tigger by pressing his RIGHT FOOT switch a second time. The right foot button works the same as the "SLEUTH" button on the remote.
- For best performance, use on a hard, flat surface. Tigger may not perform properly on carpeting.

**NOTE:** Under certain conditions, the product can malfunction due to static electricity. If this occurs, simply reset the toy by turning the power switch off and then on again.

### BATTERY INSTALLATION


#### Tigger:

Includes 6 "AA" (LR6) alkaline batteries. Replace batteries as indicated inside the battery compartment.

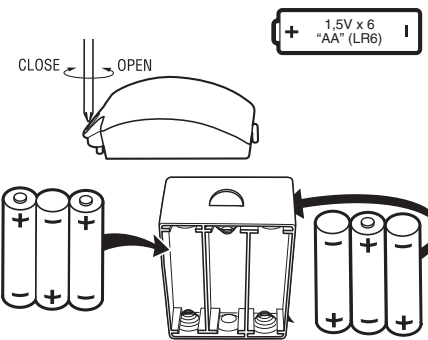

#### Remote Control:

 Requires 2 "AAA" (LR03) alkaline batteries, not included. Install batteries as indicated inside the battery compartment.

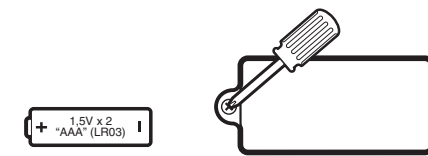

#### BATTERY INSTALLATION:

Unscrew and lift cover away from back of Tigger and remote control. For longer life use only alkaline batteries. Remote Control: Requires 2 "AAA" (LR03) alkaline batteries, Tigger: Requires 6 "AA" (LR6) alkaline batteries. Do not connect the toy to more than the recommended number of power supplies.

**Required tool: Phillips screwdriver (not included)**

#### BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product).

To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Mattel Inc. 333 Continental Blvd. El Segundo, CA (310) 252-2400. NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**RSS - 310 (Canada) (VALID FOR CANADA ONLY - VALABLE AU CANADA SEULEMENT).**

CNR-310 d'Industrie Canada (CANADA SEULEMENT) 27.145 MHz TX RF = 71.20 dBµV/m @ 3m.

• THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

• CET APPAREIL NUMERIQUE DE LA CLASSE B EST CONFORME A LA NORME NMB-003 DU CANADA.

• This Category II radiocommunication device complies with Industry Canda Standard RSS-310.

• Ce dispositif de radiocommunication de catégorie II respecte la norme CNR-310 d'Industrie Canada.

• Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

• L'utilisation de ce produit est sujette aux conditions suivantes : (1) il ne doit pas produire de brouillage, et (2) il doit pouvoir tolérer tout brouillage reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

**CE 0979 27MHZ**

Hereby, Mattel declares that the toy is in compliance with the essential requirements and other relevant provisions of Directives 99/5/EC, 2004/108/EC, 88/378/EEC. Suitable for use in all EU member states. A copy of the Declaration of Conformity may be obtained from [Mattel UK Ltd., Vanwall Business Park, Maidenhead SL6 4UB](#).

© Disney

Based on the "Winnie the Pooh" works by A.A. Milne and E.H. Shepard.

Visit the Disney Web site at [www.disney.com](#)

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

**PRINTED IN CHINA.** Manufactured for Fisher-Price. ©2008 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc., unless otherwise indicated.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2;

[www.service.mattel.com](#).

Great Britain: Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB.

Helpline 01628 500303. [www.service.mattel.com/uk](#)

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond,

Victoria. 3121 Australia. Consumer Advisory Service - 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City,

Tsimshatsui, HK, China.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).



L8894

**Fisher-Price**

Item : L8894-0920  
Version : US  
Size : A4  
Paper : Woodfree Paper 80 gsm  
Color : 1C  
Date : July. 22, 2008 (AQ)