 


Battery Replacement

Batteries included are for demonstration purposes only. Replace batteries when sound or image becomes distorted.

 
For longer life use only alkaline batteries. Toy requires 2 replaceable AAA/LR03 alkaline batteries. **When "BATTERIES LOW" shows on screen, change batteries within 3 minutes.** To replace batteries, use a Phillips head screwdriver (not included) to open battery door. Insert 2 AAA/LR03 alkaline batteries as shown. Use either AAA/LR03 alkaline batteries or equivalent. Replace battery cover and screw closed.

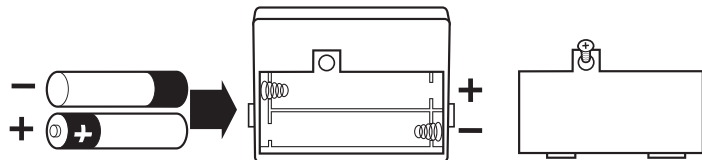

Battery Replacement

Batteries included are for demonstration purposes only. Replace batteries when remote does not work with TV device.

For longer life use only alkaline batteries. Toy requires 2 replaceable AG13/LR44 button cell alkaline batteries. **When "BATTERIES LOW" shows on screen, change batteries within 3 minutes.** To replace batteries, use a Phillips head screwdriver (not included) to open battery door. Insert 2 AG13/LR44 button cell batteries as shown. Use either AG13/LR44 button cell batteries or equivalent. Replace battery cover and screw closed.

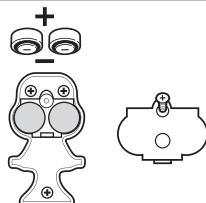

NOTE: Each time new batteries are installed, the TV reverts to TRY ME mode. Simply repeat one of the 2 steps described in the "Switching from TRY ME mode to NORMAL mode" on page 2.

For product sold in USA

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. • This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

For product sold in Canada • Pour les produits vendus au Canada

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003. • CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA. (VALID FOR CANADA ONLY • VALABLE AU CANADA SEULEMENT)

• Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. • L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes: (1) Il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

RECYCLE INFORMATION (USA ONLY)

Please recycle button cell battery(ies) contained in this product by: • Visiting your nearest recycling center. For location of the nearest recycling center, visit us online at www.service.mattel.com. • If a recycling center is not available in your area, contact us for a pre-paid mailing label. Visit us online at www.service.mattel.com or call toll-free at 1 (800) 524-8697.

Valid in the US only. • Solo válido en los EE.UU. • Valable aux États-Unis seulement.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1-800-524-8697 (US and Canada only), M-F 9AM - 7PM & SAT 11AM - 5PM, Eastern.

SERVICE.MATTEL.COM

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697. • Mattel U.K., Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303. • Mattel Australia Pty. Ltd., Richmond, Victoria 3121. Consumer Advisory Service 1300 135 312 (valid only in Australia). • Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. • Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd (993532-P) Lot 13.5, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 P.J. Tel:03-78803817, Fax:03-78803867. • Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-8697.



6+



L9508-0920G2

M2863

M2864

M2865

INSTRUCTIONS

CONTENTS

M2863 Fashion

 


M2865 Travel



M2863 / M2864 / M2865

M2864 Pets

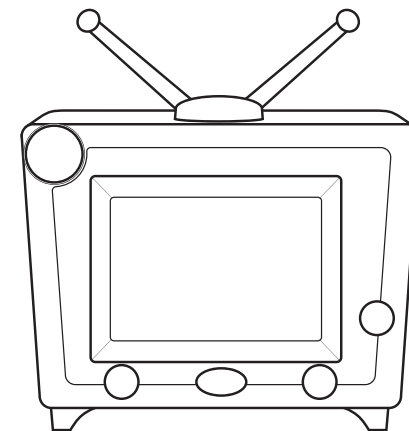

Each sold separately, subject to availability.

Batteries included are for demonstration purposes only. Requires 2 AAA (LR03) alkaline batteries and 2 AG13 (LR44) button cell alkaline batteries.

We listen to you!

We want you to have fun playing with our products.

Please give us your feedback by filling out the short on-line survey. Go to:

secure.mattel.com/surveys

Thanks for helping us make great toys even better!

English-only site. • Sitio web en inglés. • Site Web en anglais uniquement. • Site na Internet disponível apenas em inglês.

Please remove everything from the package and compare to the contents shown here.

If any items are missing, please call 1-800-524-8697.

Keep these instructions for future reference as they contain important information.

©2007 Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. All Rights Reserved.

A PIXILLION™ shows on your Pixel Chix™ TV!

On your Pixel Chix™ TV you can play games, watch programs and do activities, and earn points. The points you earn will unlock games and activities. Channel surf to see programs, shows or activities that may lead you to more activities on **pixelchix.com**. Let's play!

How to exit TRY-ME mode

There are 2 ways to exit the TRY-ME mode.

 
1. Hold down the "Yes" button on the TV for 3 seconds until the unit powers off.
2. Press any button on the TV to turn it back on (TV should now be in normal play mode).

OR

1. Point the remote control directly at the TV within a distance of 12" / 30 cm.
2. Press any button on the remote control.
3. TV should now be in normal play mode.

Note: TV will re-enter TRY-ME mode whenever it is reset or the batteries are changed.

SEE WHAT'S ON!

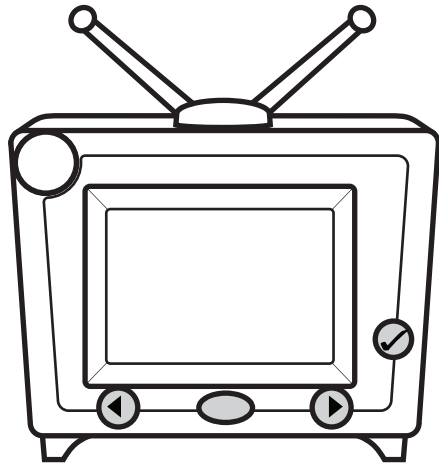

ARROWS

These are used to move characters and selection arrows. Press YES to select what you have chosen.



IR detector

This is how the remote control and TV talk with each other..



YES

Use to select an item in a menu and to play games.

I'm the REMOTE



ARROWS

These are used to move characters and selection arrows. Press YES to select what you have chosen.



YES

Use to select an item in a menu and to play games.

The remote works best when held within 12 inches of the TV.

Remote control works with all 3 Pixel Chix™ TVs.

LET'S CHANNEL SURF!

 
To turn on and start to play, press the YES button on either the TV or the remote.

Press either the LEFT or RIGHT button to switch channels. There are 5 channels plus a bonus channel that needs to be unlocked (see **EARN POINTS** to learn how to unlock). Each channel has different games and activities.

EARN POINTS

Play games to earn points. There are 3 levels of points, and each level unlocks a secret game, activity or the bonus channel. When you earn a point, you'll see a screen showing you how many points you have. (This screen goes away in a few seconds or when you press a button to return to the game.)

SEE WHAT HAPPENS WHEN SETS ARE CONNECTED!

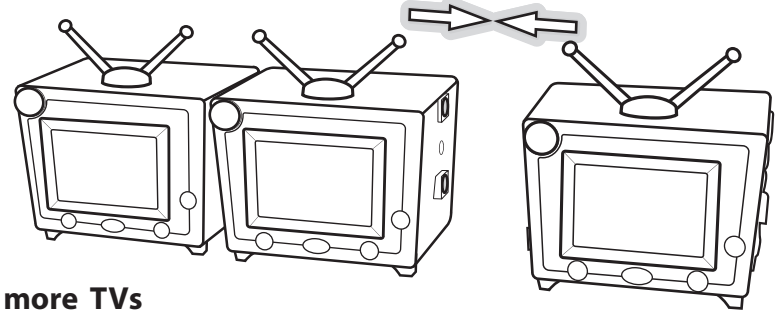

2 or more TVs

Press any button on one TV, and a character comes over from the other TV. The character may change each time! You can go back and forth between TVs.

3 or more TVs

Programs or shows automatically play. No need to press any button.

 
Hair color of characters may change when moving from one device to another. Pixel Chix™ TVs only connects to other TVs and do not connect to any other Pixel Chix™ device.

MORE ACTIVITIES ON THE WEB

Go to the **pixelchix.com** web site for more activities related to programs or shows. At the end of a show, you may see a channel number on your Pixel Chix TV screen. Go to the web site, click on the "Secret Code" link, choose "TV", and enter the channel number. You can either play a game or make your own movie by putting together movie clips in the "Movie-Maker."

STORAGE

Plug the remote control into the side of the TV as shown. That way you'll won't lose the remote control like your TV's real remote! Now, where is that remote?

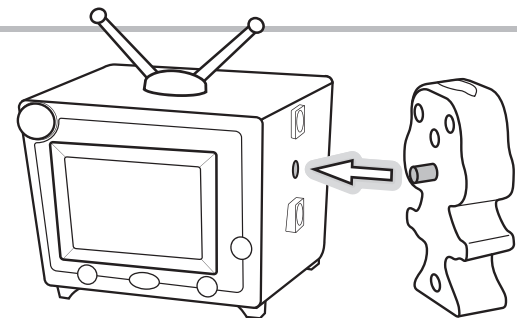

TROUBLESHOOTING

RESET BUTTON

Reset product to start a fresh game. Ask an adult to insert a metal tip, such as a bent paper clip, into the hole.

When exposed to an electrostatic source, the product may malfunction and suffer memory loss. Reset the product if this occurs.

NOTE: Holding down the YES button for 3 seconds powers down the unit.

BACK

