

Fisher-Price®



Tummy Time

Overhead Gym



Sit & Play



Consumer Information

FCC Statement



WARNING

To prevent entanglement injury, never place gym in a crib/cot or playpen. Never add strings, ties or other products to the gym.

- Please keep this instruction sheet for future reference, as it contains important information.
- Requires three "AA" batteries for operation (included).
- Adult assembly is required.
- Tool required for battery replacement: Phillips screwdriver (not included).



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: [Mattel UK Ltd. Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.](http://MattelUKLtd.VanwallBusinessPark.MaidenheadSL64UB)
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.


United States Only

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.


Parts

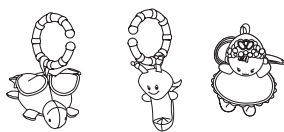


3 Soft Toys

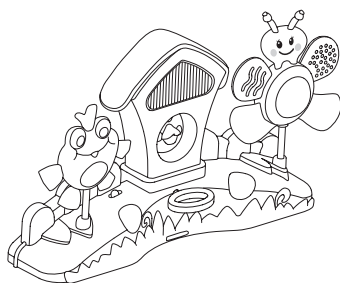

Birdhouse

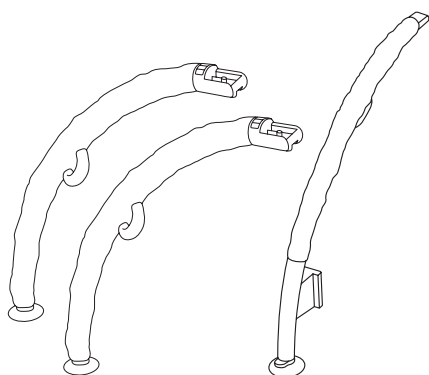


3 Arms

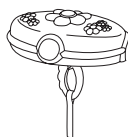


Hub



 **Support
Pillow**



Mirror

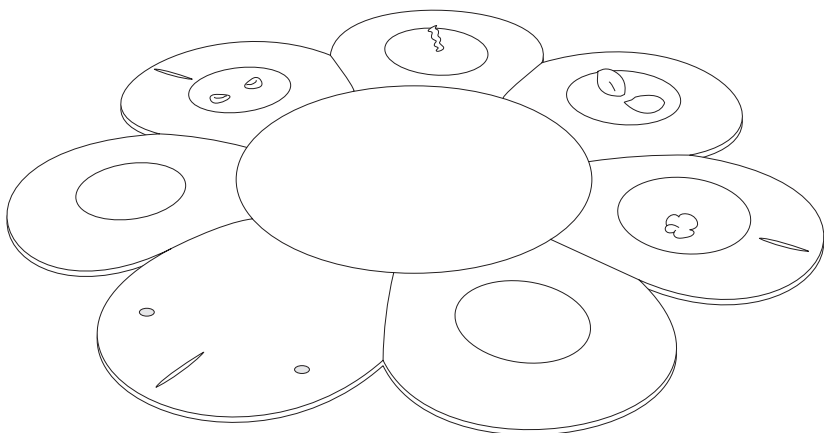


Quilt



3.5 mm x 22 mm Screw - 2

Note: Tighten and loosen screws with a Phillips screwdriver. Do not over-tighten the screws.

Battery Replacement

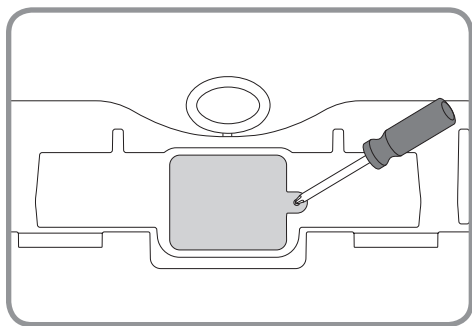

For best performance, we recommend replacing the batteries that came with this toy with three, new alkaline "AA" (LR6) batteries.

- Locate the battery compartment door on the bottom of the birdhouse.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Remove the exhausted batteries and throw them away.
- Insert three "AA" (LR6) **alkaline** batteries.


Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries!



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information

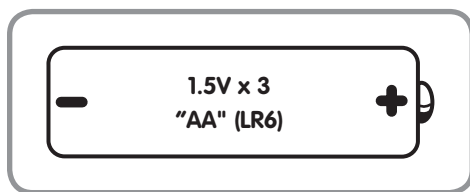


In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.


One-Time Arch Assembly

1

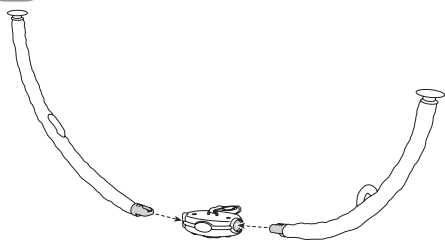

- Attach the arms to the hub, to form an arch.


2

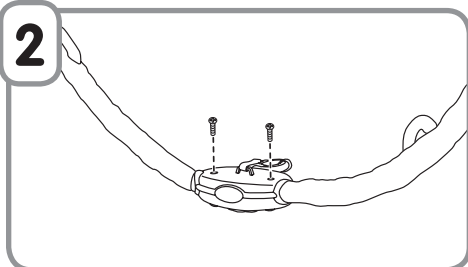

- Insert two screws into the hub and tighten, as shown.

Setup


1

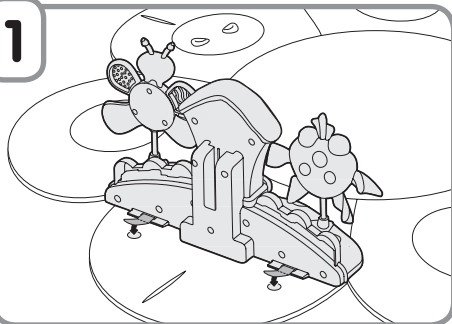

- Place the birdhouse on the quilt petal with the fasteners.
- Push the tabs on the back of the birdhouse onto the fasteners to attach to the quilt.

Hint: This toy is ready for Sit & Play fun! For Tummy Time and Overhead Gym play, continue with setup steps 2-7.


2

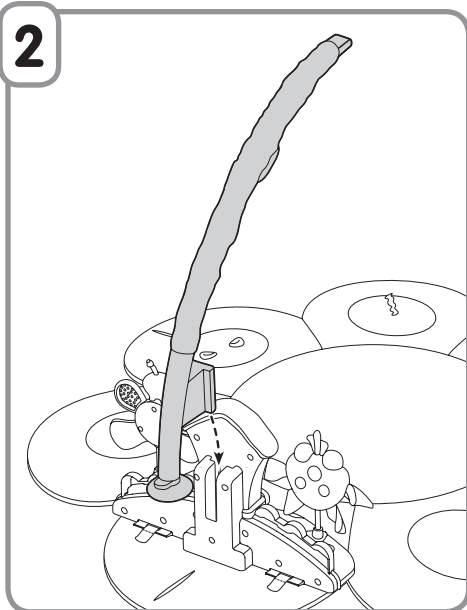

- Slide the arm tab into the groove in the back of the birdhouse.


Setup

3

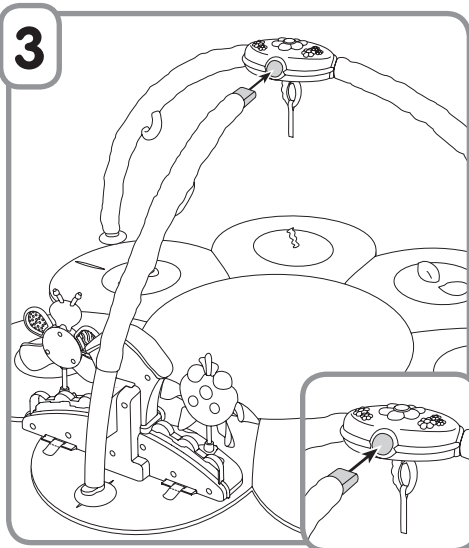


- Connect the arm into the hub on the arch.

4

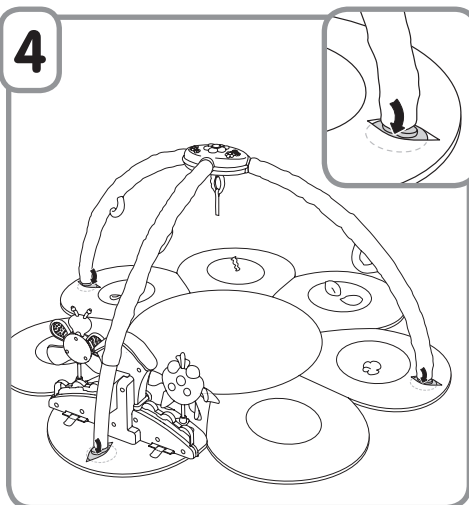

- Insert the each end of the arch into the slots in the quilt.


5

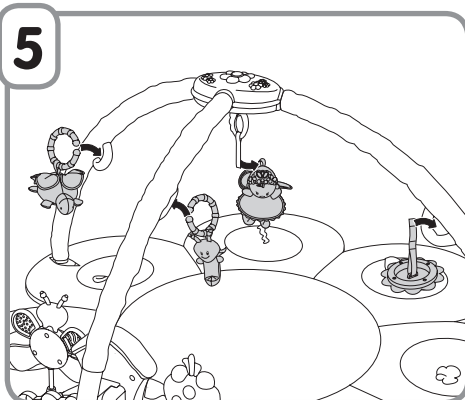

- Attach the soft toys and the mirror to the arch and arm.

Hint: Use the support pillow to prop baby up for tummy time play!

Dancing Lights, Sweet Music and Sounds!


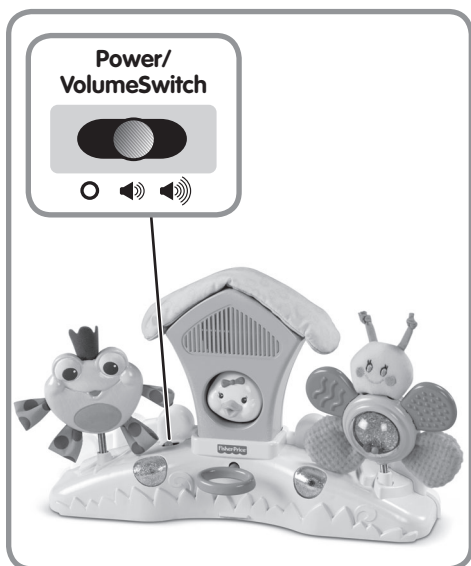


- Locate the power/volume switch on the birdhouse.
- Slide the switch to the desired position: on with low volume  or on with high volume .
- Tap the loop on the front of the birdhouse for fun tunes and lights.
- When your child is finished playing with this toy, slide the power/volume switch to the off  position.

Hint: If your child is not actively playing with this toy, it turns off automatically (sleep mode).


Storage

1

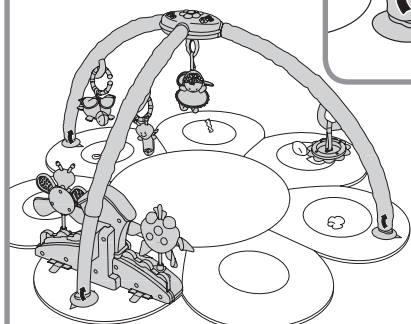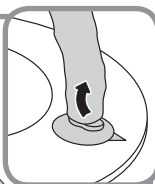


- Remove the each end of the arch from the slots in the quilt.

2

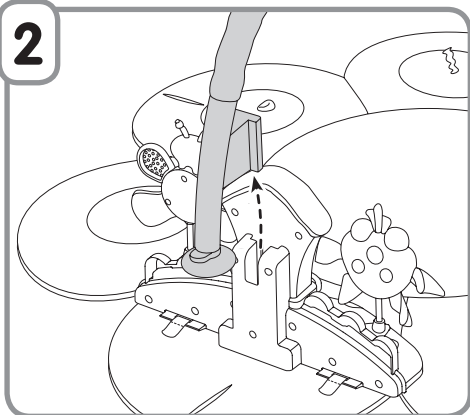

- Lift and remove the arm from the birdhouse assembly.

3

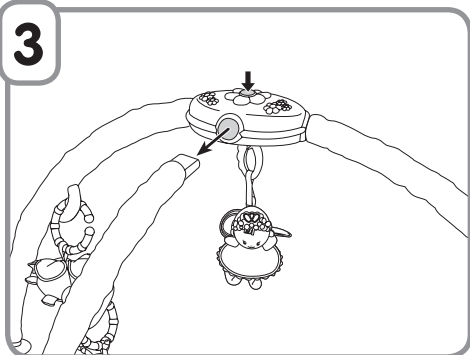

- Push the button on top of the hub to remove the arm from the arch.

Care

Soft Toys

- Slide to remove the toys from the links.
- Place the toys in a pillowcase and wash them in cold water on a gentle cycle. Do not use bleach. Line dry the soft toys.
- Slide the soft toys back onto the links.

Quilt and Support Pillow

- Remove the birdhouse, mirror, links, arch and arm.
- Wash the quilt and support pillow in cold water on a gentle cycle. Do not use bleach. Line dry the quilt and support pillow.

Birdhouse, Mirror, Links, Arch and Arm

- Wipe the surface with a clean cloth dampened with a mild soap and water solution. Do not use bleach.
- Do not immerse birdhouse.