



Consumer Information

⚠ WARNING

Possible Entanglement Injury

- Keep out of baby's reach.
- Remove mobile from crib/cot or playpen when baby begins to push up on hands or knees.
- This product will not attach to all crib/cot designs. Do not add additional strings or straps to attach to crib/cot or playpen.

⚠ CAUTION

This toy contains small parts in its unassembled state. Adult assembly is required.

- Please keep this instruction sheet for future reference, as it contains important information.
- Adult assembly is required.
- Requires four "D" (LR20) **alkaline** batteries for the mobile and two "AA" (LR6) **alkaline** batteries for the remote. (Batteries not included.)
- Tool required for assembly: Phillips screwdriver (not included).
- Age: Birth to 5 months.
- A crib/cot mobile is intended for visual stimulation and is not to be grasped by a child.
- When used on a dresser top, do not place within the reach of a standing baby.
- Always attach by all provided fasteners (clamp) tightly to a crib/cot or playpen according to the instructions. Check frequently.



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.



Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB, Helpline: 01628 500303.
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Parts

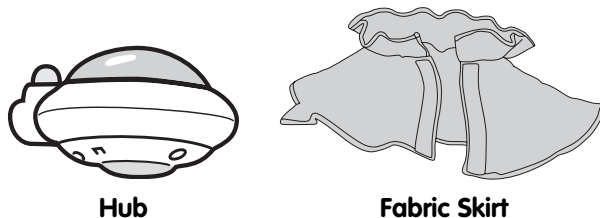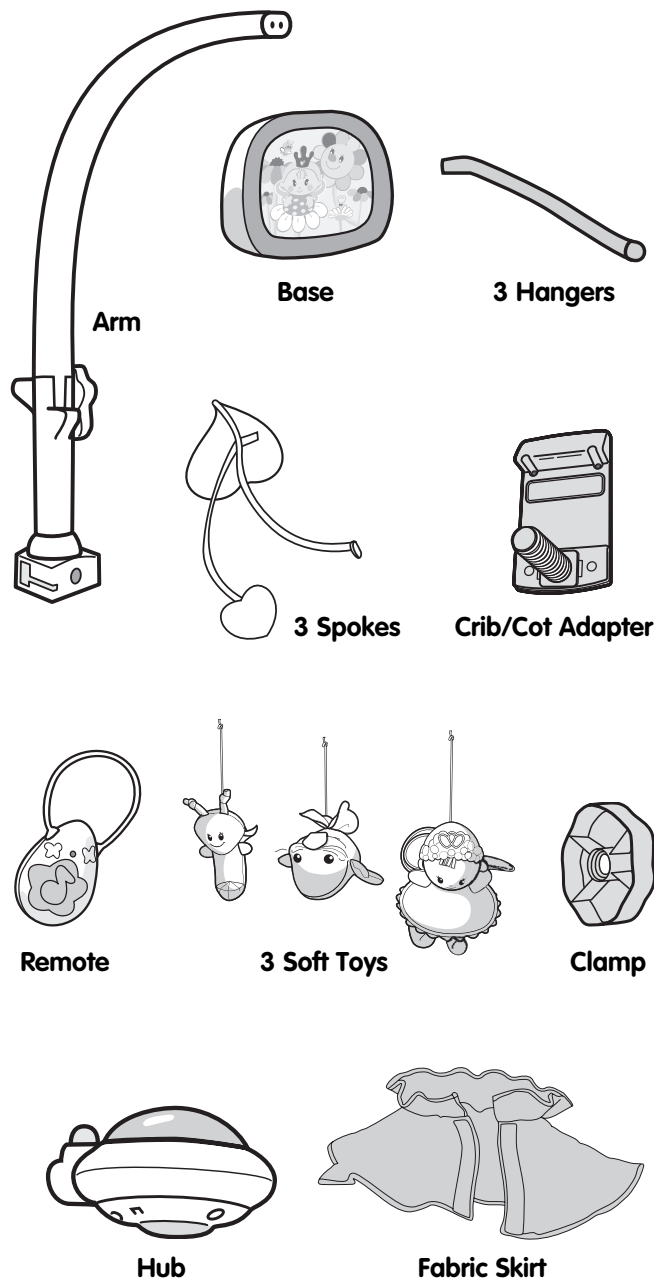

#6 x 1.6 cm Screw – 1




#4 x 1 cm Washer Head Screw – 3


Both Shown Actual Size

Note: Tighten and loosen the screws
with a Phillips screwdriver. Do not
over-tighten the screws.

Battery Installation

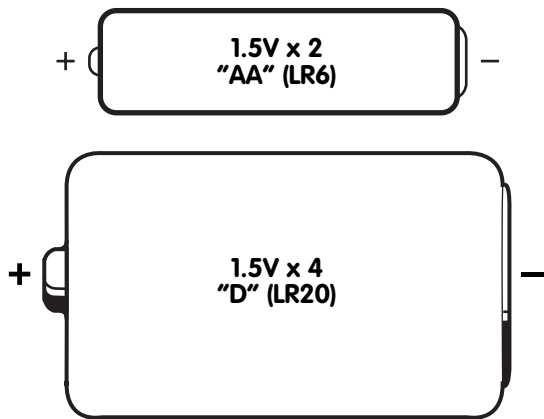

We recommend using **alkaline** batteries for longer battery life.

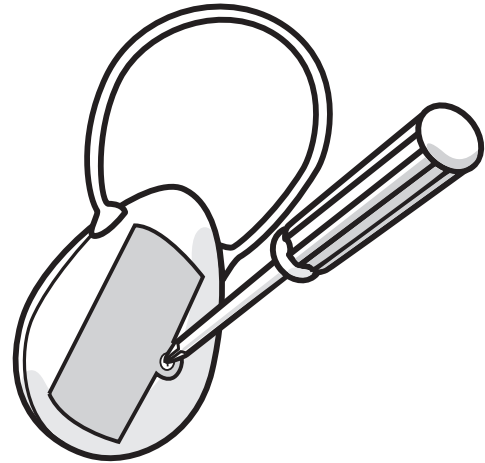


Remote

- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert two “AA” (LR6) **alkaline** batteries, as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

IMPORTANT! If the mobile does not respond to the remote, it does not mean that the battery power in the remote is low. Replace the batteries in the remote if the LED signal indicator on the remote is dim when the button is pressed. If the LED signal indicator does not light after installing new batteries in the remote, check the orientation of the batteries in the battery compartment to make sure they are properly installed.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

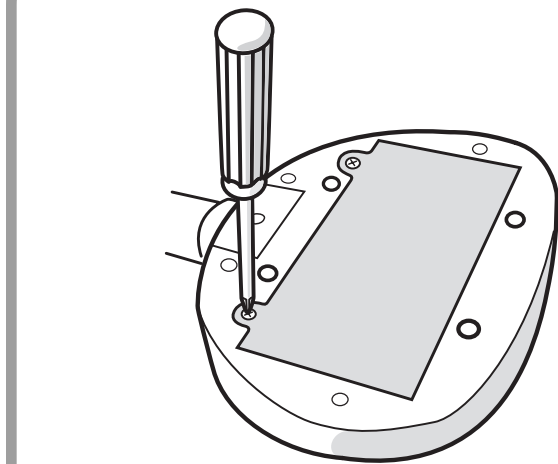

Mobile Base

- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door. You may need to use the tip of the screwdriver to lift the battery compartment door.

Hint: If the crib/cot adapter is attached to the base, loosen the screws in the crib/cot adapter and remove it first.

- Insert four “D” (LR20) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.

IMPORTANT! Under normal use conditions, the batteries in the mobile will require replacement more often than the batteries in the remote. When sounds or light become faint or movement of the mobile is sluggish, it's time for an adult to replace the batteries in the mobile base.

Battery Safety Information

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product.

To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Care

Soft Toys and Fabric Skirt

- To remove a soft toy, slide the string out of the slot in the hanger.
- The soft toys and fabric skirt are surface washable.

Mobile

Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse. The mobile has no consumer serviceable parts. Do not take the mobile apart.

FCC Statement

United States Only

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

- This device complies with Part 15 of the FCC Rules.
- Operation is subject to the following two conditions:
 - (1) this device may not cause harmful interference and
 - (2) this device must accept any interference received, including interference that may cause undesired operation.

Assembly

1

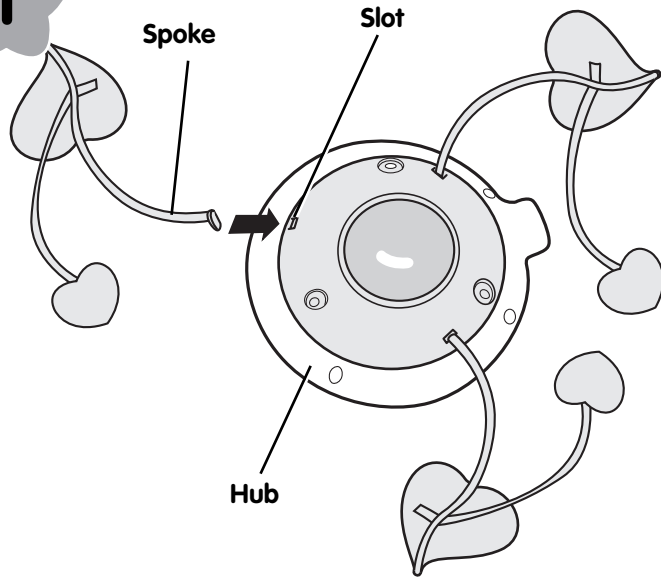


- Insert and "**snap**" the ends of the spokes into the slots in the hub, as shown.

3




- Fit a soft toy string into the slot in the end of a hanger.
- Pull down gently on the soft toy to secure the string in the hanger.
- Repeat this procedure to attach the remaining soft toys to the other two hangers.

4

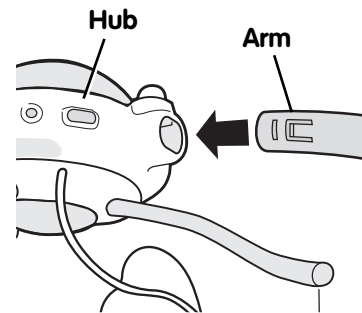

- Insert and "**snap**" the arm into the hole in the side of the hub.


2

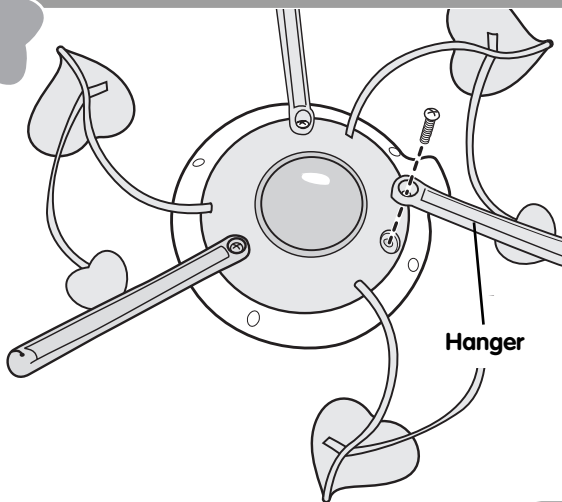

- Fit the end of a hanger into a hole in the hub.
- Insert a #4 x 1 cm screw into the hanger and tighten.
- Repeat this procedure to attach the other hangers.


Assembly

5

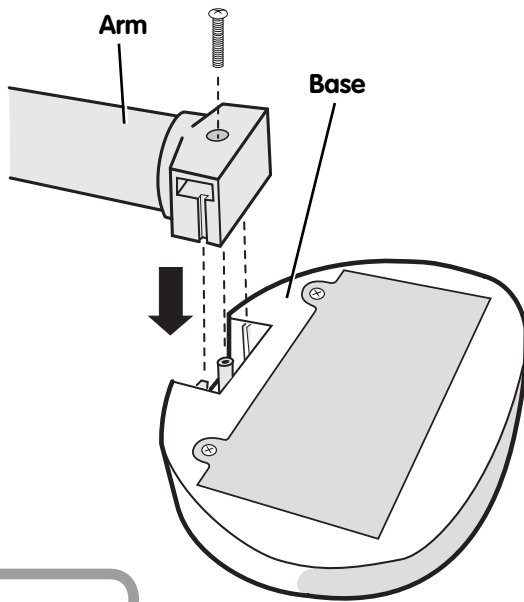

- Fit the other end of the arm into the slot in the base, as shown.
- Insert the #6 x 1.6 cm screw into the arm and tighten.

6

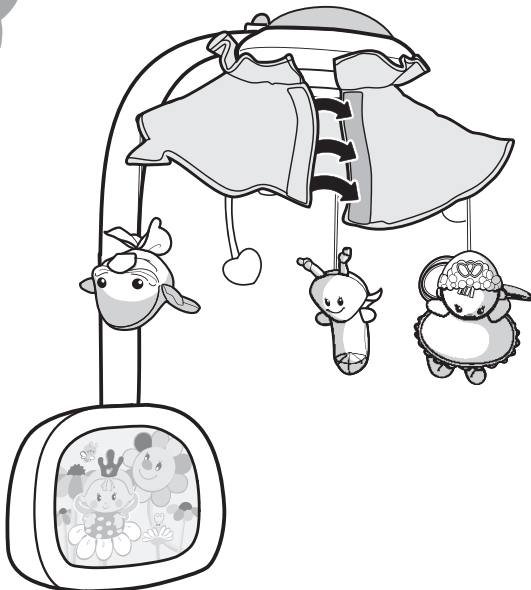


- Place the fabric skirt on top of the mobile hangers and spokes.
- Fasten the fasteners on the fabric skirt.

Crib/Cot Setup

1


Crib/Cot Adapter

Battery
Compartment
Door

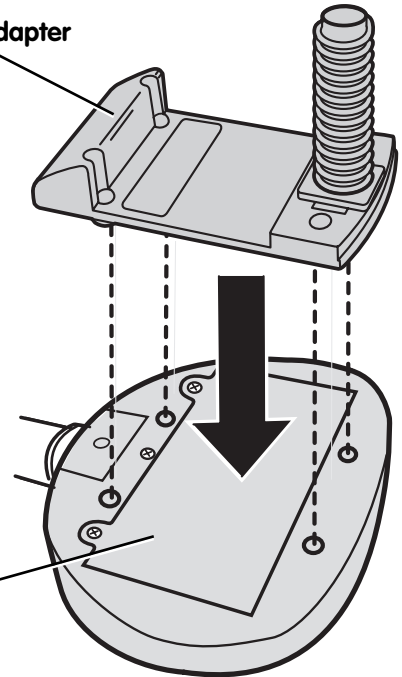

- Position the base so that the battery compartment door is facing you.
- Fit the crib/cot adapter onto the base.


2

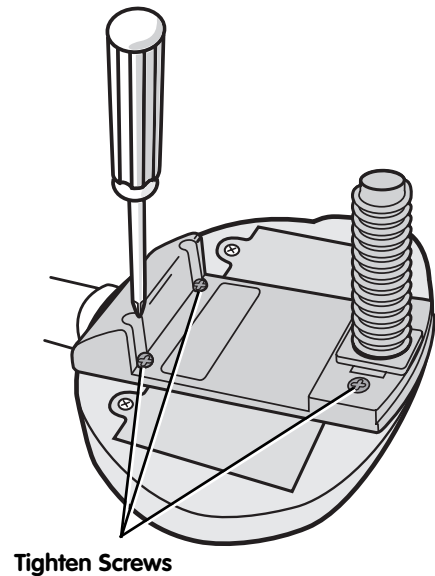

- Tighten the four screws in the crib/cot adapter.

Crib/Cot Setup


3

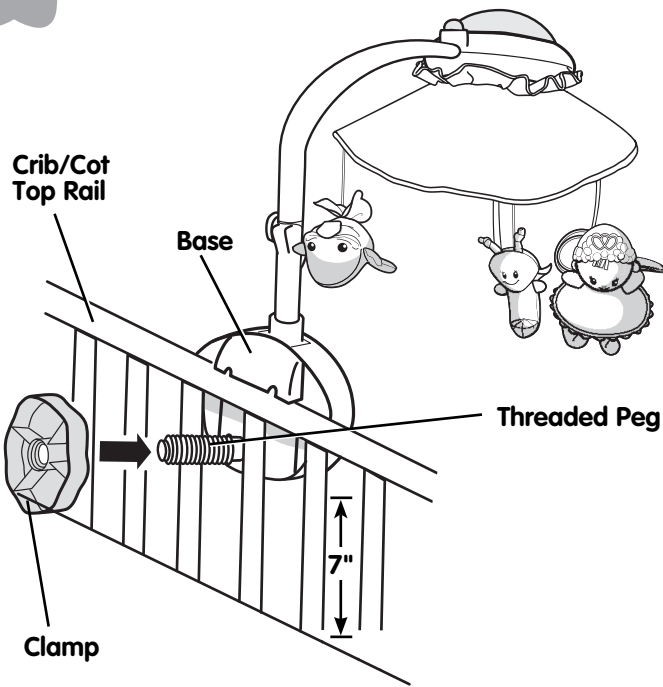

- Fit the mobile base on to the crib/cot top rail so that the threaded peg extends outside of the crib/cot.
- Fit the clamp onto the threaded peg and turn the clamp clockwise to secure the base to the crib/cot rail. Do not over-tighten the clamp.
- If the distance between the mobile and the mattress is less than 7 inches, lower the crib mattress.


Dresser Top Setup

1

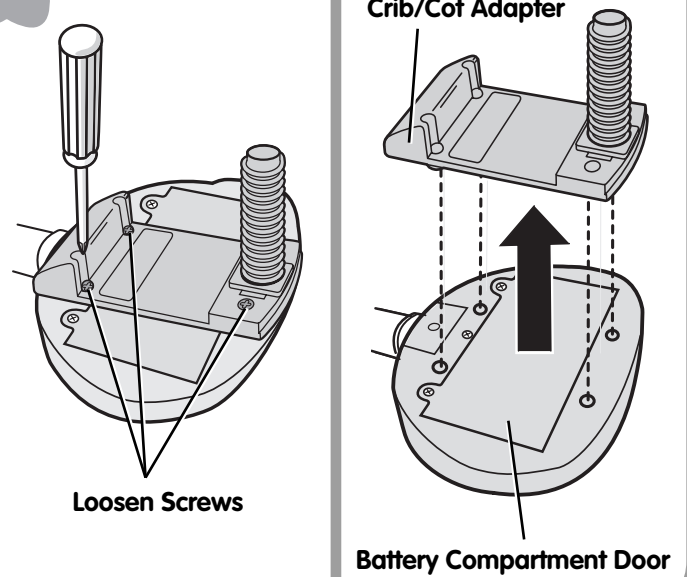

- Loosen the screws in the crib/cot adapter.
- Lift and remove the crib/cot adapter.
- Store the crib/cot adapter in a safe place for future crib/cot use.

2

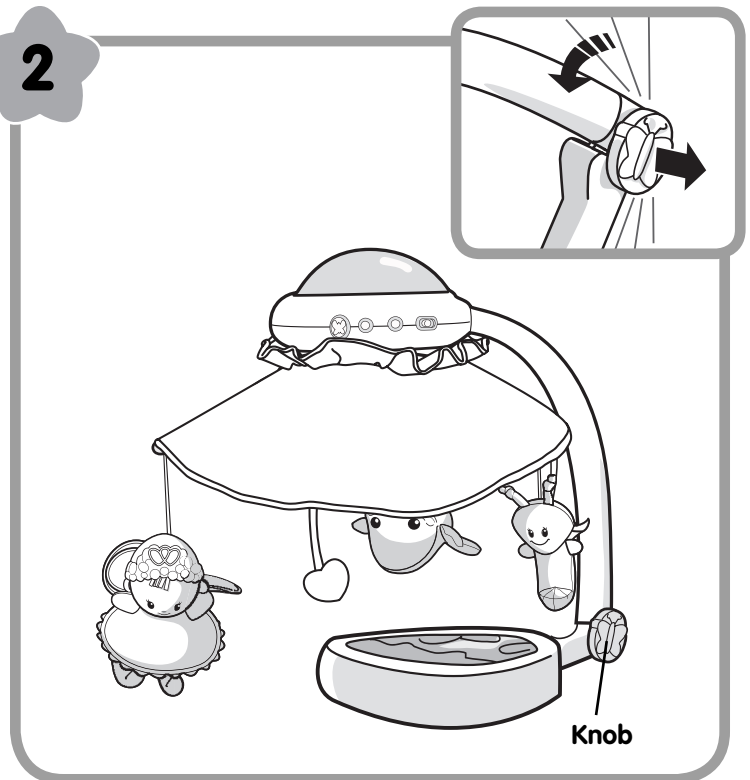


- Pull the knob on the arm out.
- Rotate the mobile portion of the arm down.
- Release the knob to lock the arm in position.
- Place the mobile on a dresser top out of reach of baby.


Use

IMPORTANT!

- In the unlikely event that use of the remote interferes with normal use of other remote controlled equipment, such as televisions and stereos, or use of other electric or battery powered appliances interfere with operation of the mobile, do not use both appliances at the same time.
- For best performance between the mobile and the remote, avoid using the remote in areas of bright light. In bright natural or artificial light, you may notice loss of range. Move the mobile or otherwise reduce the amount of light to improve performance.

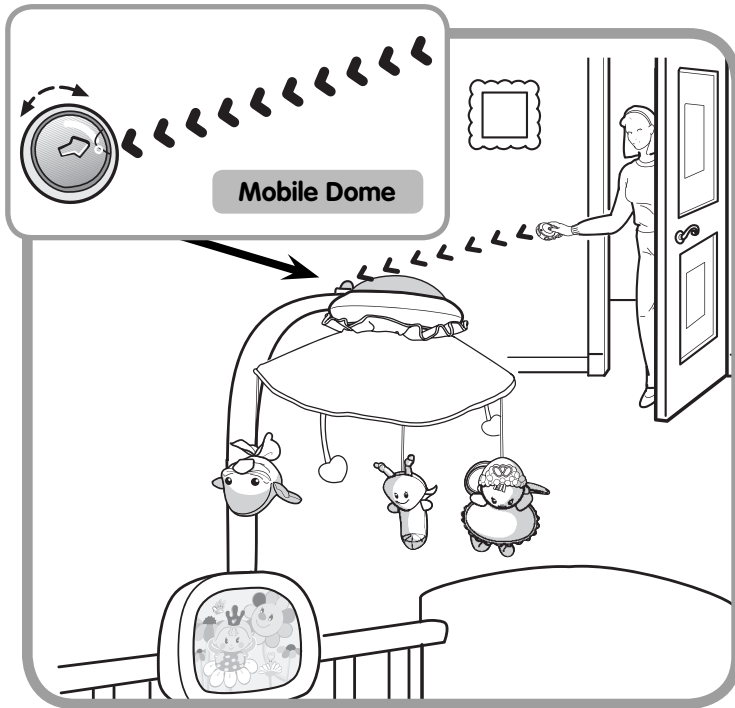


- When using the remote, make sure that the arrow on the mobile's dome is pointing towards the transmitter window on the remote. **For best results make sure the path between the transmitter window on the remote and the dome on the mobile are in a direct line and free of obstacles. Rotate the mobile dome so that the arrow points to the area from which you're most likely to use the remote.** For example, if you'll most often be using the remote from the doorway of the nursery, make sure that the arrow on the mobile dome is pointing towards the doorway and that the path between the mobile dome and the doorway is free from obstructions.

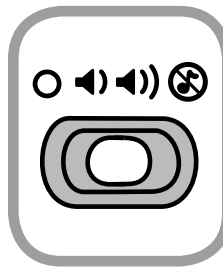


Power/Volume Switch

- Slide this switch to on with low volume ; on with high volume ; on with no sound (lights only) ; or off .

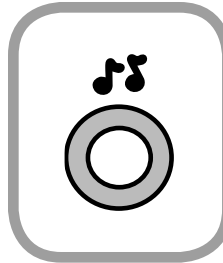

Song Select Button

- Press this button to choose a song.
- Each time you press the song select button the mobile will switch to the next song until it returns back again to the first.

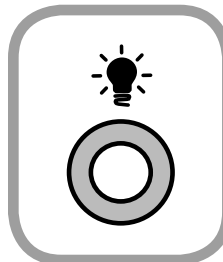

Light Select Button

- Press the button to choose from four different light modes:
 - 1 Twinkling lights around baby's room
 - 2 Glowing night light
 - 3 Twinkling and glowing lights
 - 4 No lights (music only)
- Each time you press the light select button the mobile will switch to the next of the four modes until it returns back again to the first.




Start Button

- Press the start button to activate the mobile.
- The mobile will play for about 10 minutes.
- To restart or pause the mobile, press the start button on the remote control or the start button on the mobile.

Notes:

- The remote control will activate the mobile from one foot to as far as 20 feet away.
- After approximately two hours without activation, the mobile shuts down. Turn the Power/volume switch to off and then on to restart the mobile and reactivate the start button and the remote.

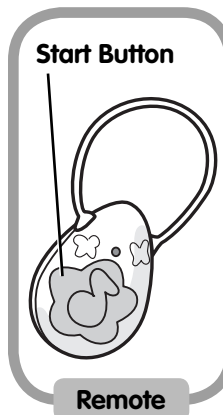

Remote