

Fisher-Price®




Please keep this instruction sheet for future reference,
as it contains important information.


Adult assembly is required.

No tools required for assembly.


Assembled Parts

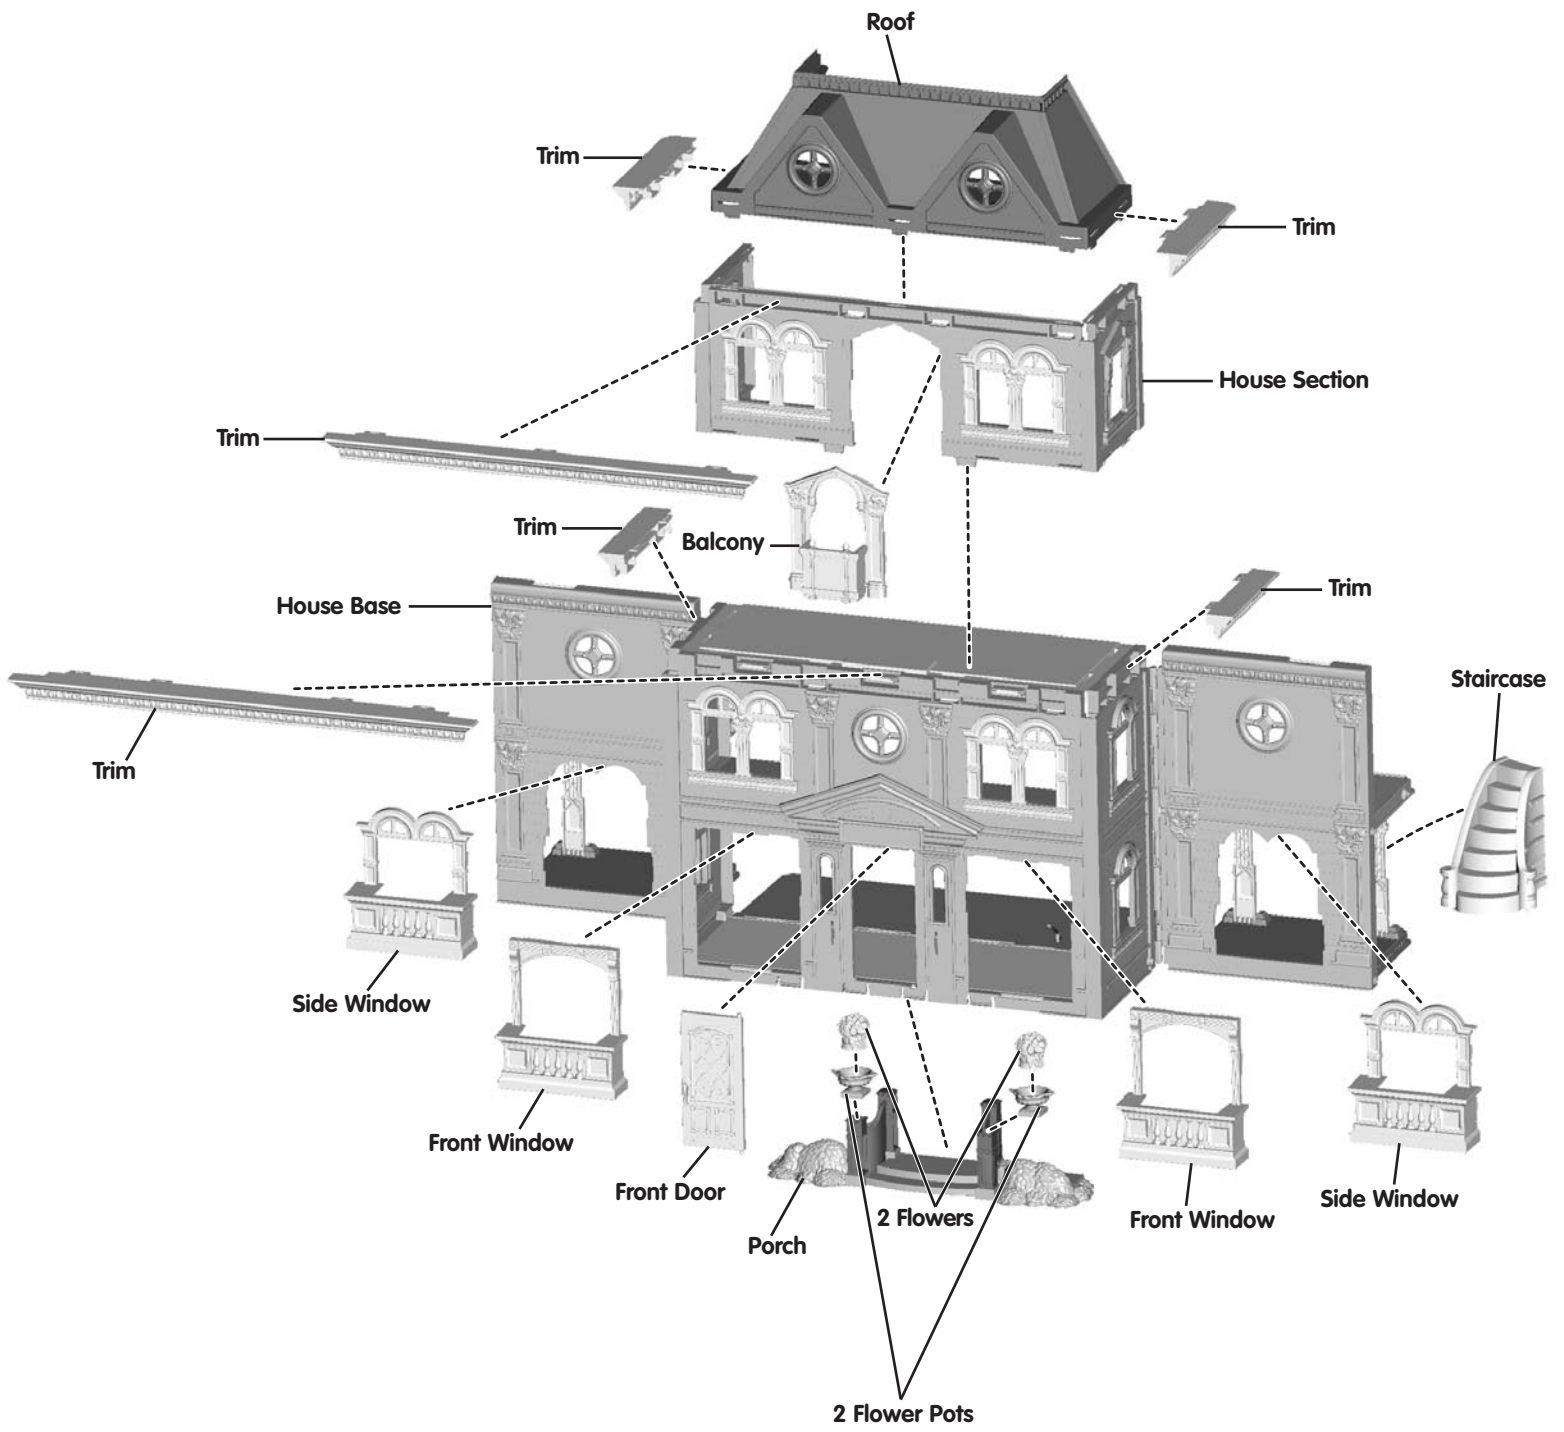


Assembly

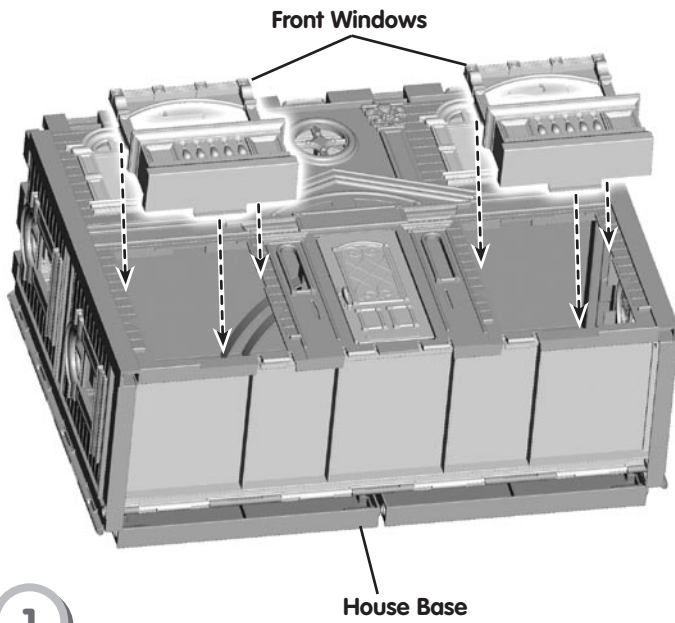


- Place the house base on a flat surface so that the front of the house faces up.
 - **"Snap"** a front window to the house on each side of the front door.
- Hint: Press down at each tab to be sure each "snaps" into place.*

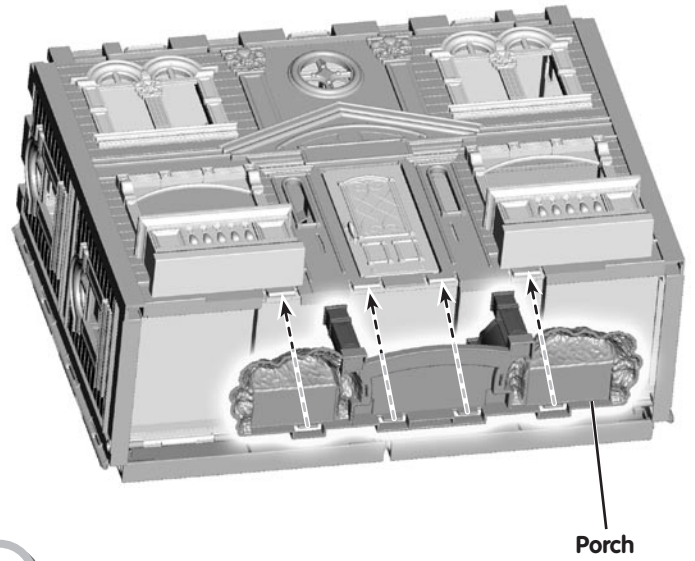

- **"Snap"** the porch to the bottom of the house.
- Hint: Press near each tab to be sure each "snaps" into place.*

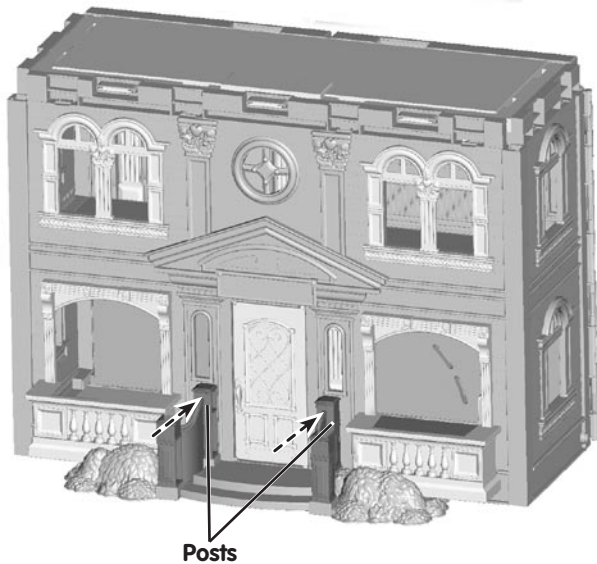


- Lift the house upright.
- Push the posts on each side of the porch until they **"snap"** into place.

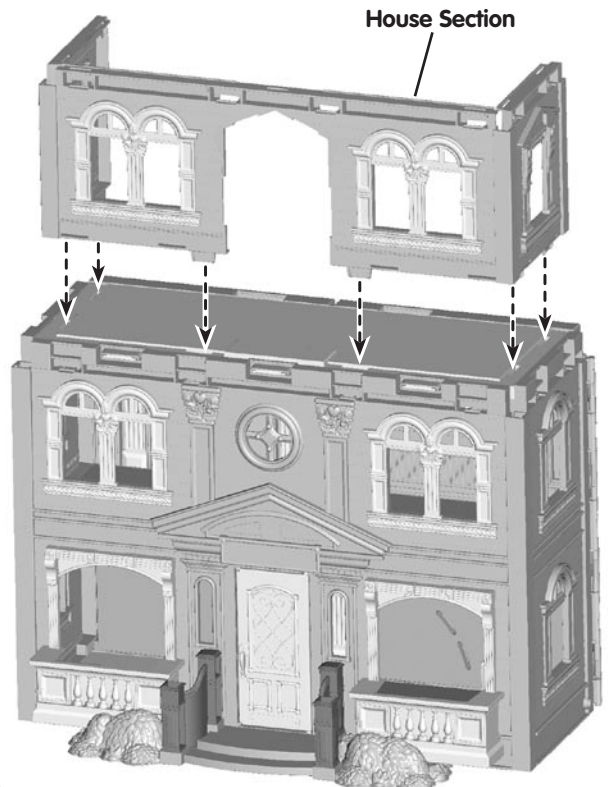


- **"Snap"** the house section onto the top of the house.
- Hint: Press down at each tab to be sure each "snaps" into place.*

Assembly

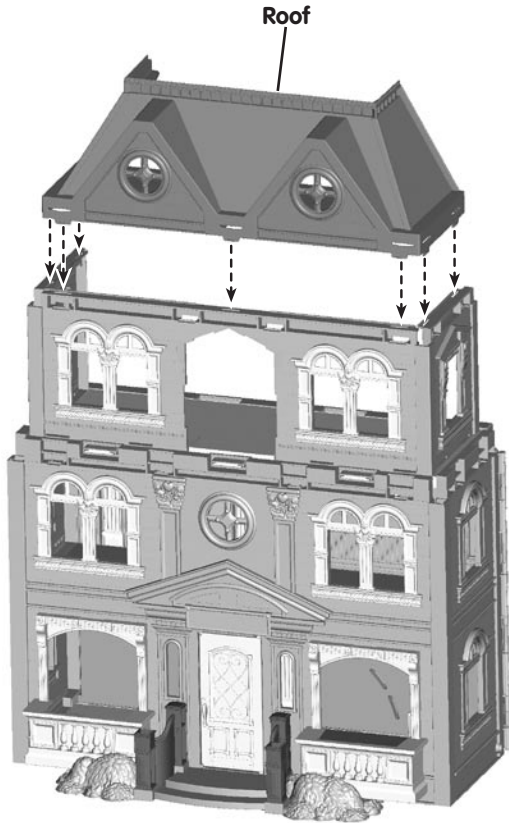


5

- **"Snap"** the roof onto the top of the house.
- Hint: Press down at each tab to be sure each "snaps" into place.*

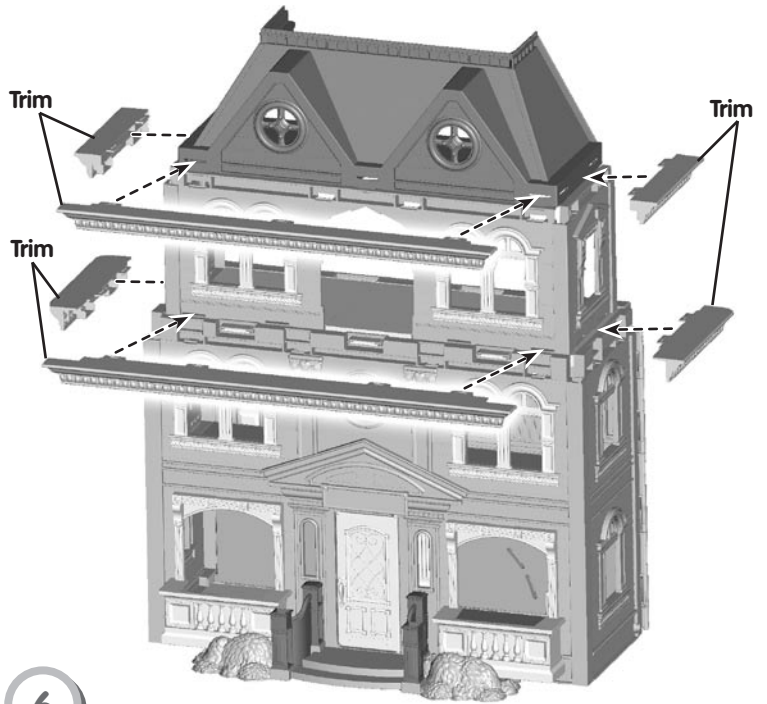


6

- **"Snap"** the trim (six pieces) onto the house as shown.
- Hint: Each trim piece will only fit on the house one way. If a trim piece does not fit, try another piece. Press at each tab to be sure each "snaps" into place.*

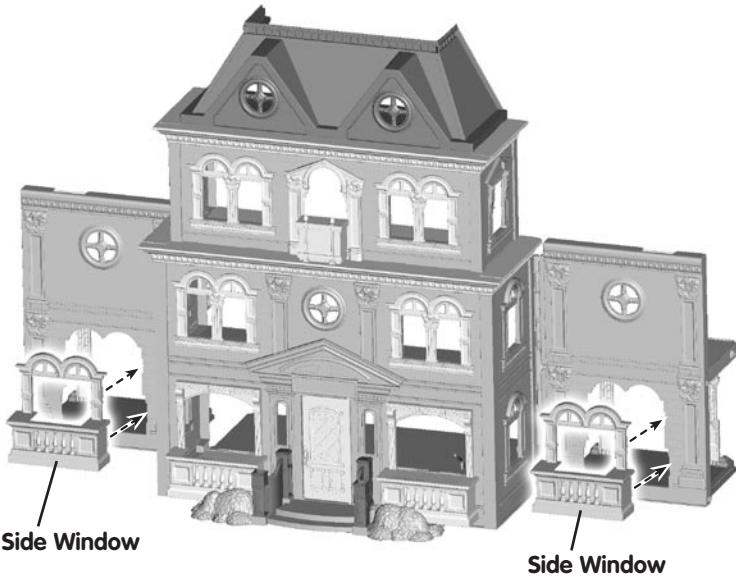

9


- **"Snap"** both side windows onto each side of the house.
- Hint: Press at each tab to be sure each "snaps" into place.*

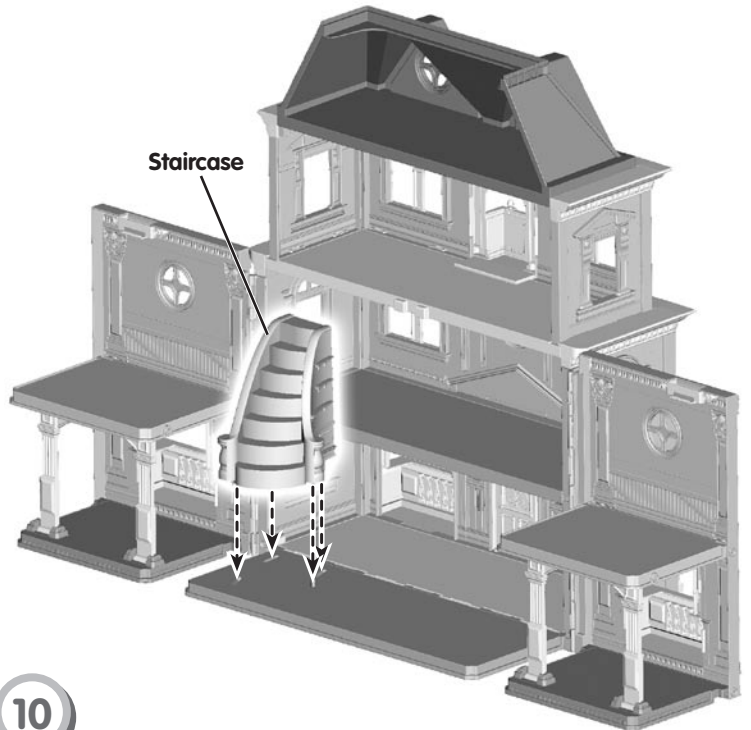

10


- **"Snap"** the staircase into the living room floor.

Assembly

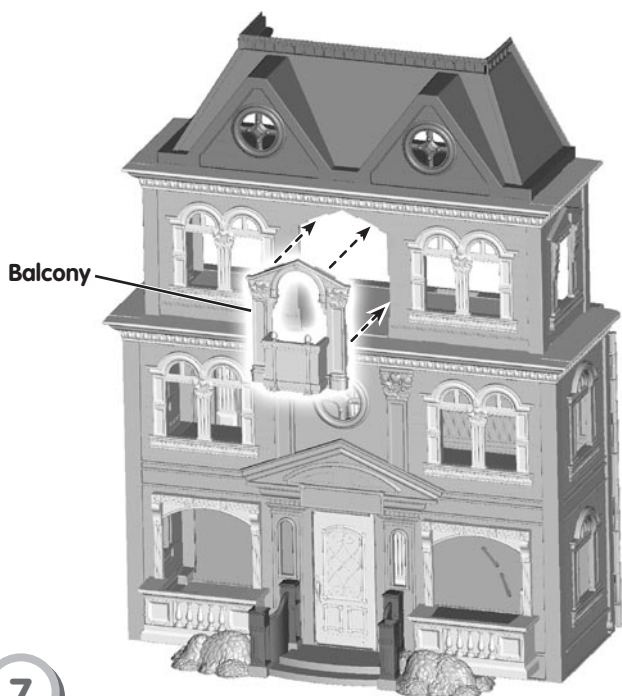


7

- **"Snap"** the balcony to the opening near the top of the house.
Hint: Press at each tab to be sure each "snaps" into place.

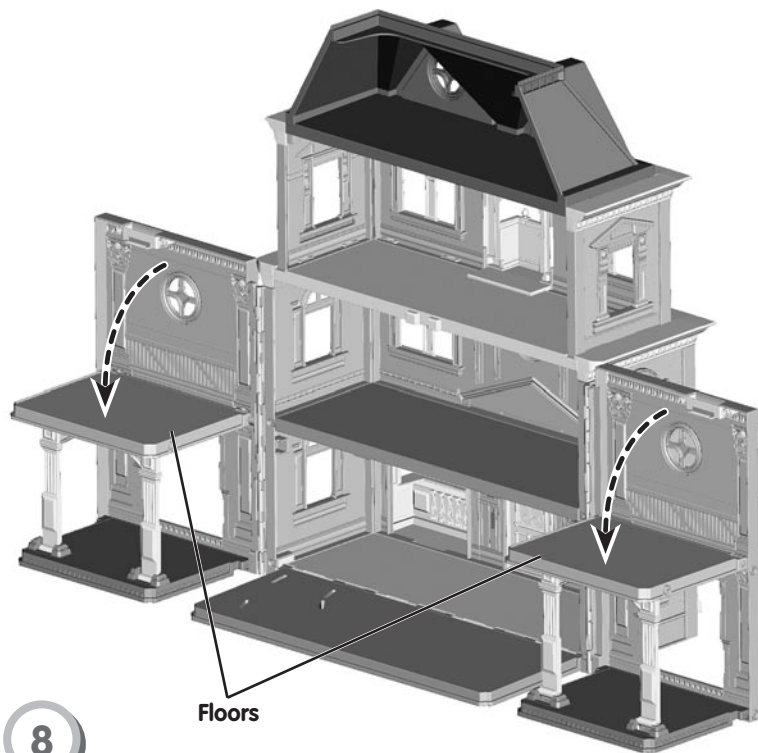

8

- Pull down the floors on the side panels of the house.

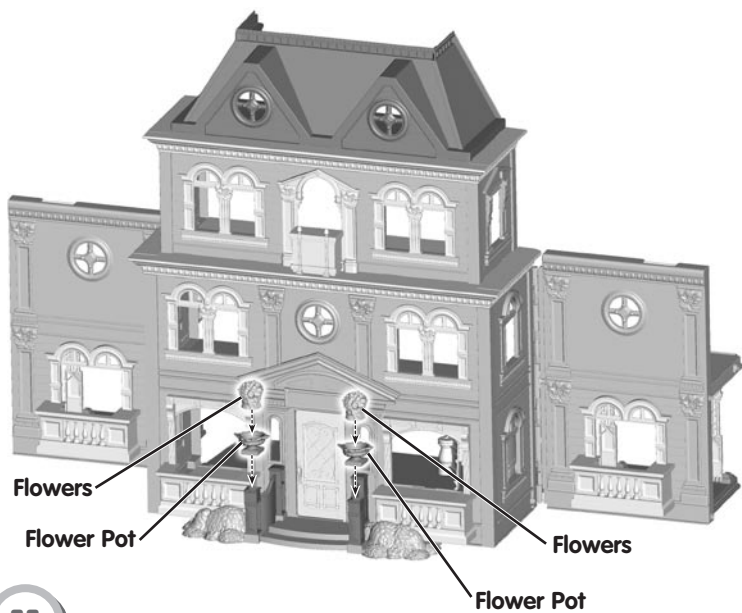

11

- Put the flowers into the flower pots. Then, place the flower pots onto the posts on the front porch.

Consumer Information



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Storage



- Place all accessories inside doll house.
- Fold up the floors on the side panels and close the doll house for easy storage.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.