




## TO PLAY

### SAW WEAPON


Press button to reveal the saw weapon! Press and hold button to activate lights.

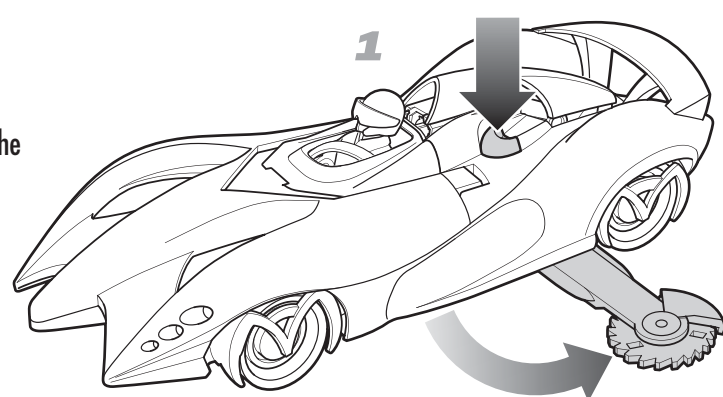

## RESET

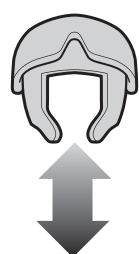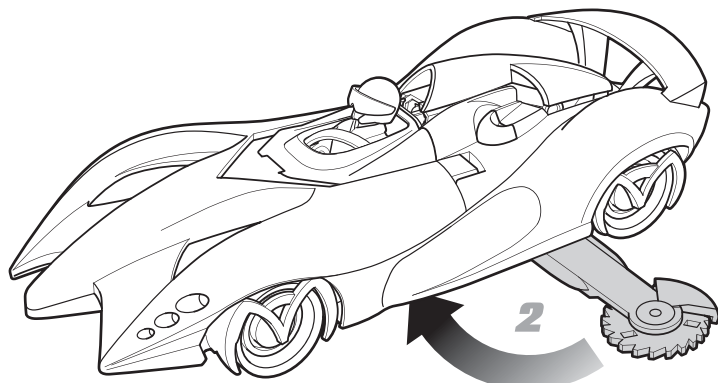


### REMOVEABLE HELMET & VISOR

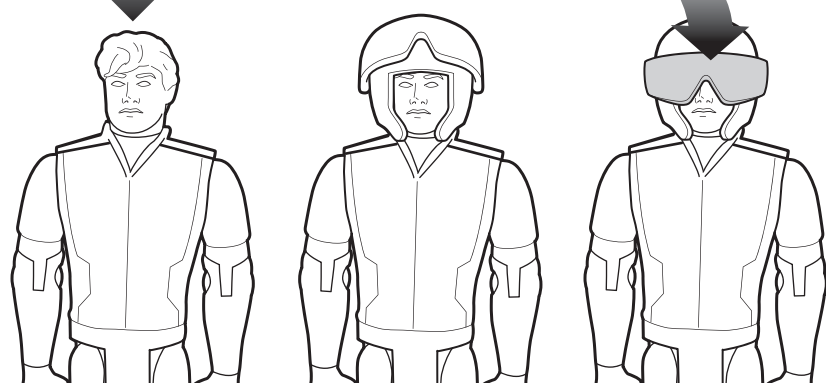

5

## PLAY WITH REMOVEABLE FIGURE

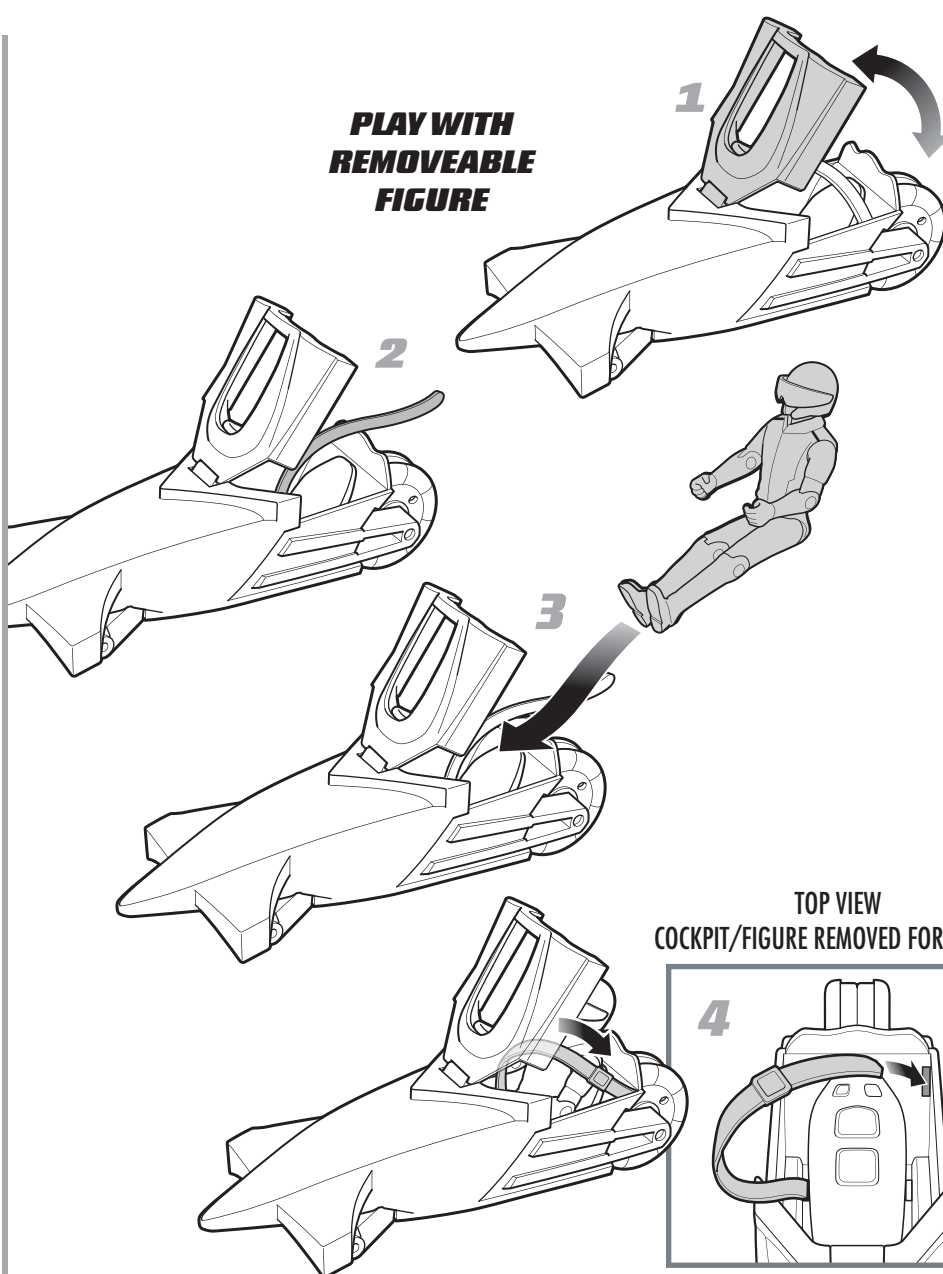

TOP VIEW  
COCKPIT/FIGURE REMOVED FOR CLARITY

SPEED RACER MOVIE: © Warner Bros. Entertainment Inc. SPEED RACER:™ Speed Racer Enterprises, Inc. (s08)  
© 2007 Mattel, Inc. All Rights Reserved.

M6830-092061  
M4205 ASST1

Mattel, Inc. 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Relations 1 (800) 524-8697 service.mattel.com • Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at/ Composez sans frais le 1-800-524-8697. • Mattel U.K. Ltd., Yarnall Business Park, Maidenhead SL6 4UB. • Mattel Australia Pty., Ltd., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312. • Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. • Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: 03-76803817, Fax: 03-76803867.




6

4+



Keep these instructions for future reference as they contain important information.

## CONTENTS

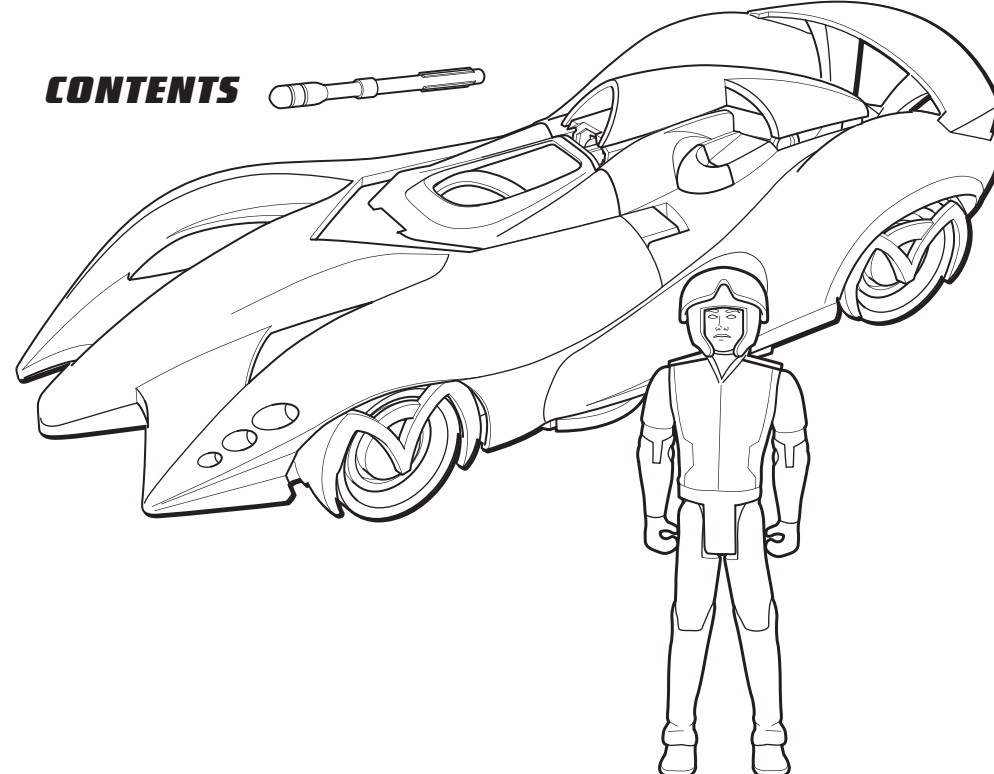

Requires 3 AG13 (LR44) button cell batteries. Batteries included are for demonstration purposes.


**WARNING:**  
CHOKING HAZARD - Small parts.  
Not for children under 3 years.

# INSTRUCTIONS


1

OUTSIDE SPREAD

## BATTERY INSTALLATION / REPLACEMENT

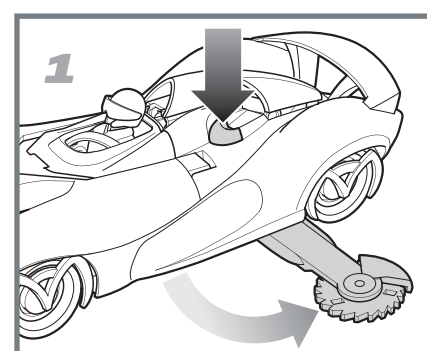

2 Remove battery cover with a Phillips head screwdriver (not included). Remove batteries included for demonstration purposes and dispose of them safely. Insert 3 new AG13 (LR44) button cell batteries in the orientation shown. Replace battery cover and tighten screw. For best performance use only alkaline batteries. Replace batteries if lights dim or do not function properly.

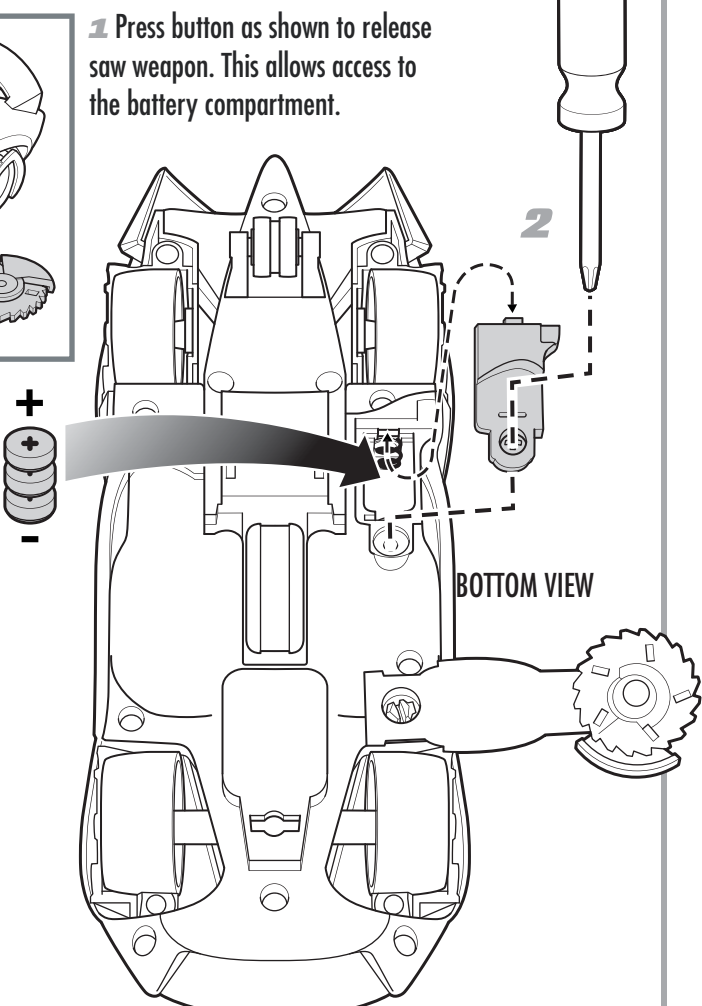

BOTTOM VIEW

### BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.

- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

### RECYCLE INFORMATION (USA ONLY)

Please recycle button cell battery(ies) contained in this product by:

- Visiting your nearest recycling center. For location of the nearest recycling center, visit us online at [www.service.mattel.com](http://www.service.mattel.com).
- If a recycling center is not available in your area, contact us for a pre-paid mailing label. Visit us online at [www.service.mattel.com](http://www.service.mattel.com) or call toll-free at 1 (800) 524-8697.


Valid in the US only • Solo válido en los EE.UU. • Valable aux États-Unis seulement.

2

## TO PLAY

### LAUNCH THE MISSILE!


Press rear button shown (1) to raise pop-up launcher (2). Press and hold button to activate lights.

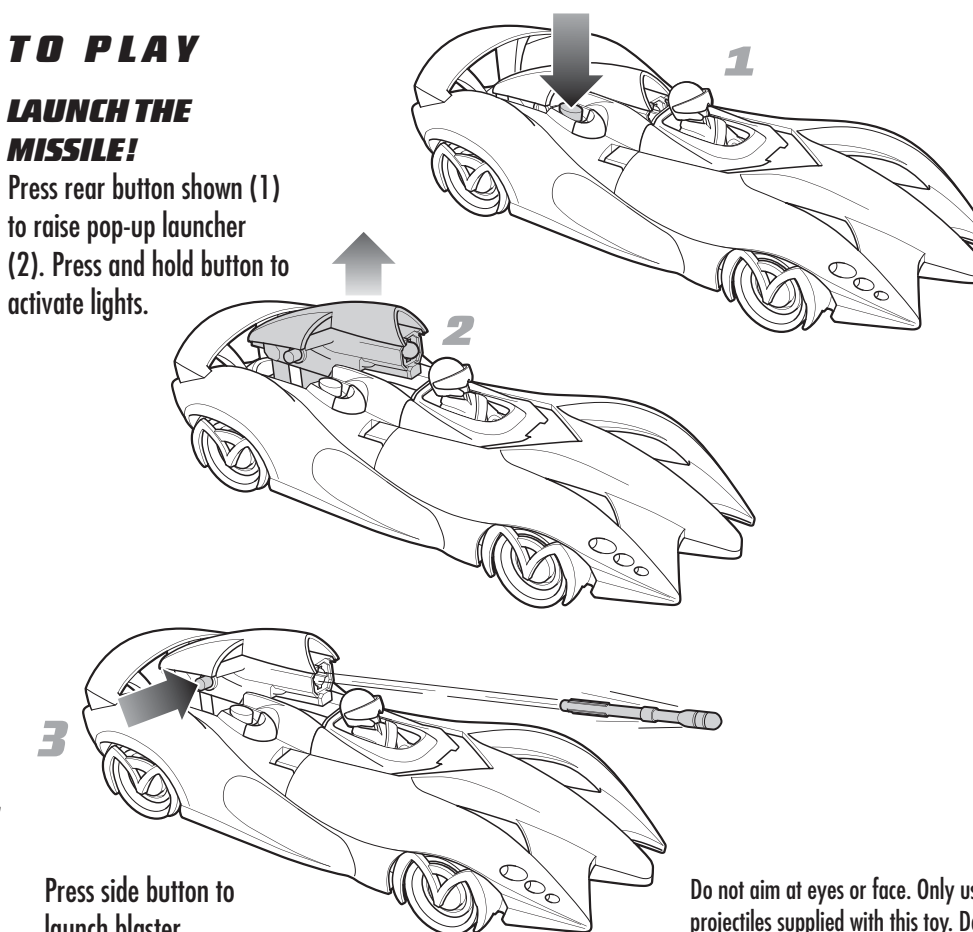


Press side button to launch blaster.

Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range.


## RESET

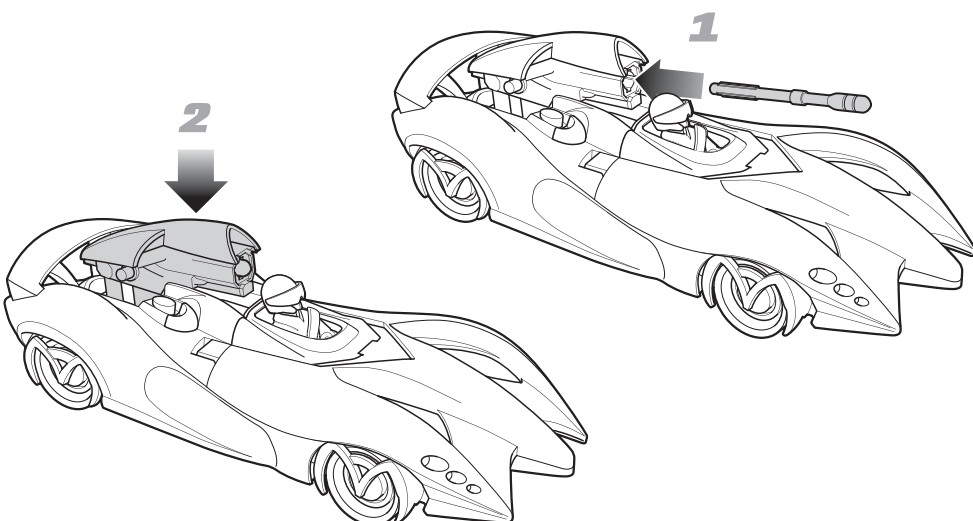

3

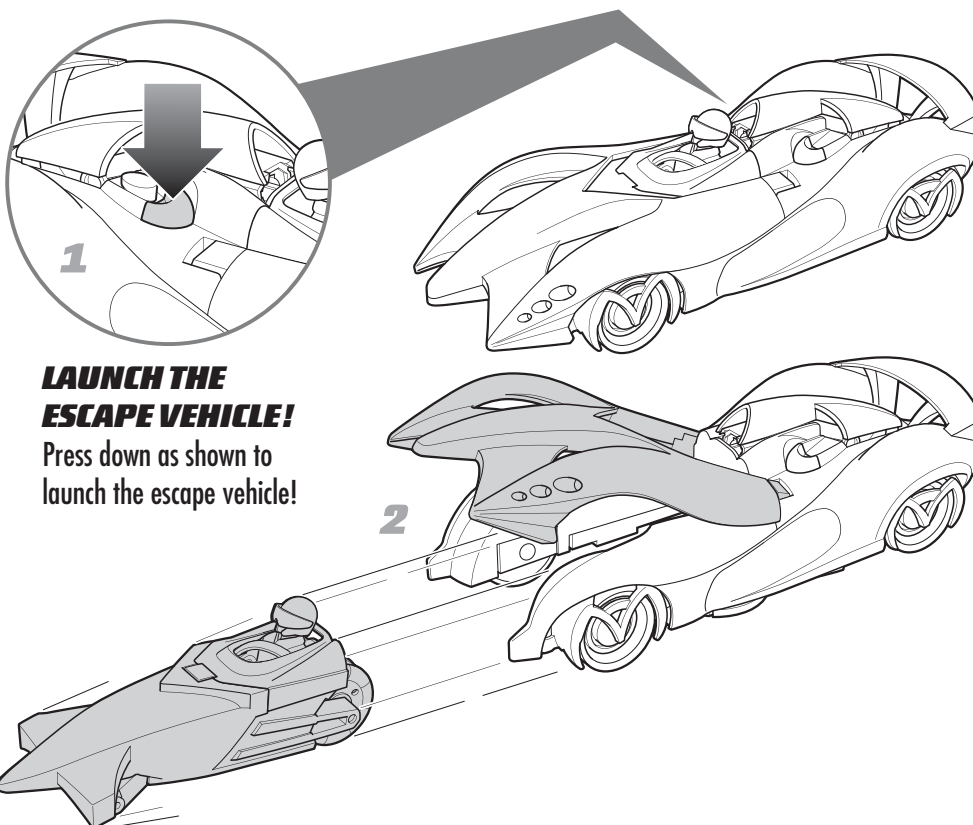

## RESET

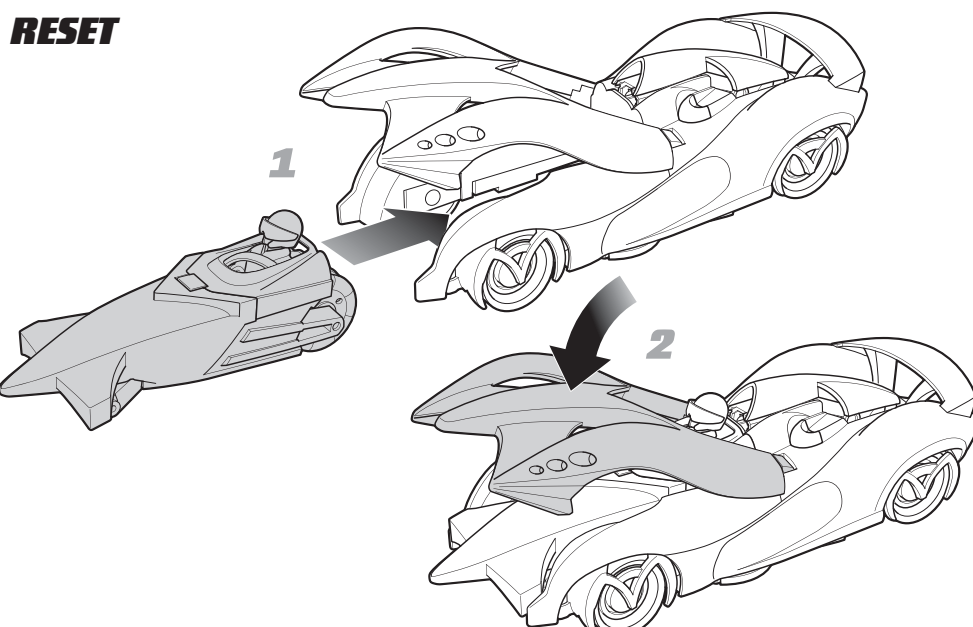

4

INSIDE SPREAD