


## Battery Pack Replacement

**IMPORTANT! NEVER** use this product without this battery pack connected.” This product will be **PERMANENTLY DAMAGED** if the power adapter is used without the battery pack connected. Only use a 4.8V rechargeable NiMH battery pack in this product.

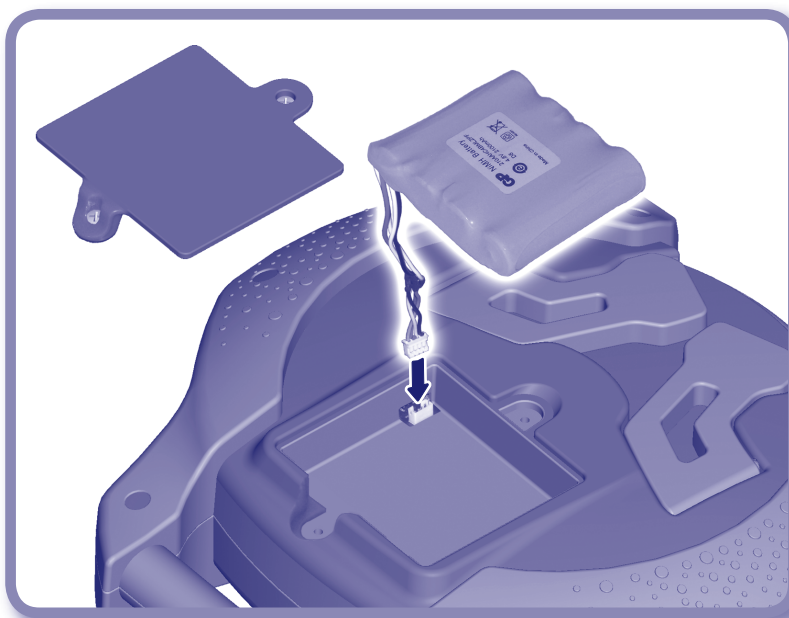

- Locate the battery compartment door on the back of the DVD player.
- Loosen the screws in the battery compartment door with the tool provided.
- Remove the exhausted battery pack and dispose of it properly.
- Insert the new 4.8V rechargeable NiMH battery pack.
- Plug the battery connector into the DVD player connector.
- Replace the battery compartment door and tighten the screws with the tool provided.
- Plug the power adapter into the DC input jack  $\text{9V DC}$  on the DVD player and into a standard wall outlet after the battery pack is replaced to reset your DVD player. Charge your new 4.8V NiMH battery pack for 8 hours before first time use.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

# Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Insert the battery pack as indicated inside the battery compartment.
- Always remove an exhausted battery pack from the product. Dispose of the battery pack safely. Do not dispose of product in a fire. The battery pack inside may explode or leak.
- Never short-circuit the battery pack terminals.
- Use only batteries of the same type, as recommended.