



M9794

For 1 player / Ages 8 and up

INSTRUCTION MANUAL

P/N 823B8800 Rev.A

Train Like Po!

You can train to be a Dragon Warrior with the help of Po! When Po calls out a move, simply move the appropriate Power Paw to perform the move. However, if Po's nemesis Tai Lung calls out a move, do not move your Power Paw. Wait for Po to call out another move. Just remember – Po is your friend, so be sure to do what he tells you. Tai Lung is your enemy, so do not react to his taunting. Train carefully with Po to receive your Fighter Ranking. Are you ready to work on becoming a Dragon Warrior?


PANDA GRIPS SET UP

Activation Switch – This one-time switch is located on the Panda Grip. Simply move the switch and press the reset button. Now you are ready to battle. Place each Panda Grip into each Power Paw pocket and secure. After 5 minutes of inactivity, the Power Paws will go into sleep mode. Wake by pressing the Sync Buttons together.

Sync Buttons – The Sync Buttons are located on the Panda Grip. While wearing the gloves, bring your palms together pressing the two

buttons at the same time. Remember to do this while bowing, as it is a sign of respect to your opponent. This will sync the Power Paws together for game play.

Power Paws – Plush gloves that hold each Panda Grip unit. Place the Power Paws on your hands, while gripping the Panda Grips, to play.

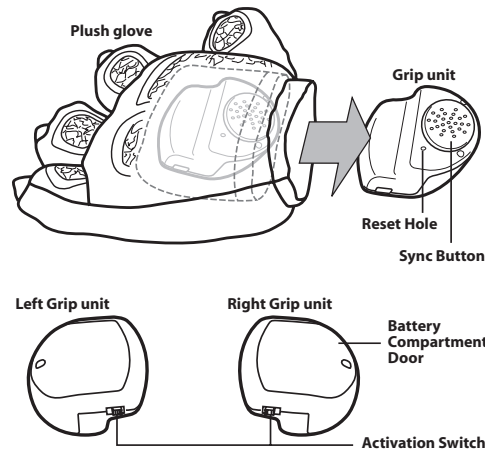

GAME MODES

Action Mode – The objective of Action Mode is to randomly practice your moves. You can practice punching, blocking and chopping your way to becoming a Dragon Warrior with encouragement from Po. Don't be distracted by Tai Lung's taunts.

Battle Mode – To set the Power Paws into Battle Mode, hold the Sync Buttons together until you hear a gong sound. The objective in this mode is to train to be a fighter by reacting to Po's voice. When Po calls out a move, move the appropriate Power Paw. If Tai Lung says a move, do not move your Power Paw. As the game gets faster, so must you...

FIGHTER RANKING

Both Power Paws will give you a score based on how well you follow the moves called out by Po. There are different Fighter Rankings that you can achieve, ranging from Goofy Noodle to Legendary Dragon Warrior.

HOW TO PLAY

Place Po's Power Paws on your hands and grip the Panda Grip handles. The Power Paws are initially in Action Mode, where you can practice

your Kung Fu moves. To place the Power Paws in Battle Mode, you will need to sync the Power Paws, waiting until you hear the gong sound. After the buttons have been released, each Power Paw will randomly call out moves. You will be scored based upon how long you last in the game.

Note: Each Power Paw has its own independent game play.

Remember to react to Po's direction in a timely manner and not to Tai Lung's commands.

If you fail to react to Po's commands in a timely manner, you will hear a buzzer and it will be considered a missed move. If you accidentally react to Tai Lung's commands, you will hear a thud. This is also considered a missed move.

At the beginning of the game, the moves called out by Po and Tai Lung will be slower. As your training continues and you progress in the game, the moves will get faster and faster, and will become harder and harder.

When one Power Paw has received more than five misses, it is considered to have taken too much "Battle Damage" and game play on that Power Paw is complete. However, you can continue playing with the other Power Paw until it has received five misses. Once that occurs, the game is over. Once both Power Paws have received too much Battle Damage, it is time to sync the Power Paws, by pressing the Sync Buttons together to receive a fighter ranking (example: Legendary Dragon Warrior).

Prepare to Battle ... Kung Fu Panda style!

WARNING: This is not a protective device or sporting goods. Do not use to strike people or objects.

BATTERY INSTALLATION / REPLACEMENT

Each Power Paw is powered by three (3) AAA (LR03) batteries.

- Using a screwdriver (not included), loosen the screw until the battery compartment door can be removed.
- Insert three (3) AAA (LR03) batteries as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

- Batteries included are for demonstration purposes only.
- For longer life use only alkaline batteries.
- Replace the batteries when the product does not function properly.
- Remove batteries and dispose of them safely.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage;

- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of batteries safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

CAUTION

- **Sometimes, a build-up of static electricity (from carpets, etc) may cause the game to stop working. Just reset the game, and it will work again.**
- **In an environment with radio frequency interference, the product may malfunction and require user to reset the product.**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Keep these instructions for future reference as they contain important information.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

6-MONTH LIMITED WARRANTY FOR USA (This product warranty is valid in the United States and Canada only)

Radica Games Limited warrants this product for a period of 6 months from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

In the event of a defect covered under this warranty, first call the toll-free number listed below. Many problems can be solved in this manner. If necessary, you will be instructed to return the product, postage prepaid and insured, to the address below. Enclose your name, address, dated sales receipt, and a brief explanation of the defect. Replacement, and return shipment, will be free of charge.

TOLL-FREE NUMBER: **1-800-803-9611**. Hours: 9:00 AM - 7:00 PM Eastern Time; Monday - Friday; 11:00 AM - 5:00 PM; Saturday.

ADDRESS FOR RETURNS: **CONSUMER RELATIONS, 636 GIRARD AVENUE, EAST AURORA, NY 14052.**

IMPORTANT: Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

6-MONTH PRODUCT WARRANTY FOR UK (This product warranty is valid in the United Kingdom only)

All products in the **RADICA®** range are fully guaranteed for a period of 6 months from the original purchase date under normal use, against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

In the unlikely event that you do experience a problem within the first 6 months, please telephone the Technical Support team: **Tel. 01628 500303.**

IMPORTANT: Always test the product with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

THIS WARRANTY IS IN ADDITION TO YOUR STATUTORY RIGHTS.

Kung Fu Panda™ & © 2008 DreamWorks Animation L.L.C.



CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.

© 2008 Mattel, Inc. All Rights Reserved.

RADICA USA Ltd., 16650 Westgrove Dr., Suite 500, Addison, TX 75001.
www.radicagames.com Helpline 1.800.803.9611 or service.mattel.com

Retain this address for future reference.

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1.800.803.9611.

Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB, Helpline 01628 500303.

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.

Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.

Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A.
Consumer Relations 1.800.803.9611.

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1.800.803.9611 (US and Canada only), M-F 9AM - 7PM & SAT 11AM - 5PM, Eastern.

SERVICE.MATTEL.COM