




Please keep these instructions for future reference as they contain important information.


 
WHAT'S INCLUDED?

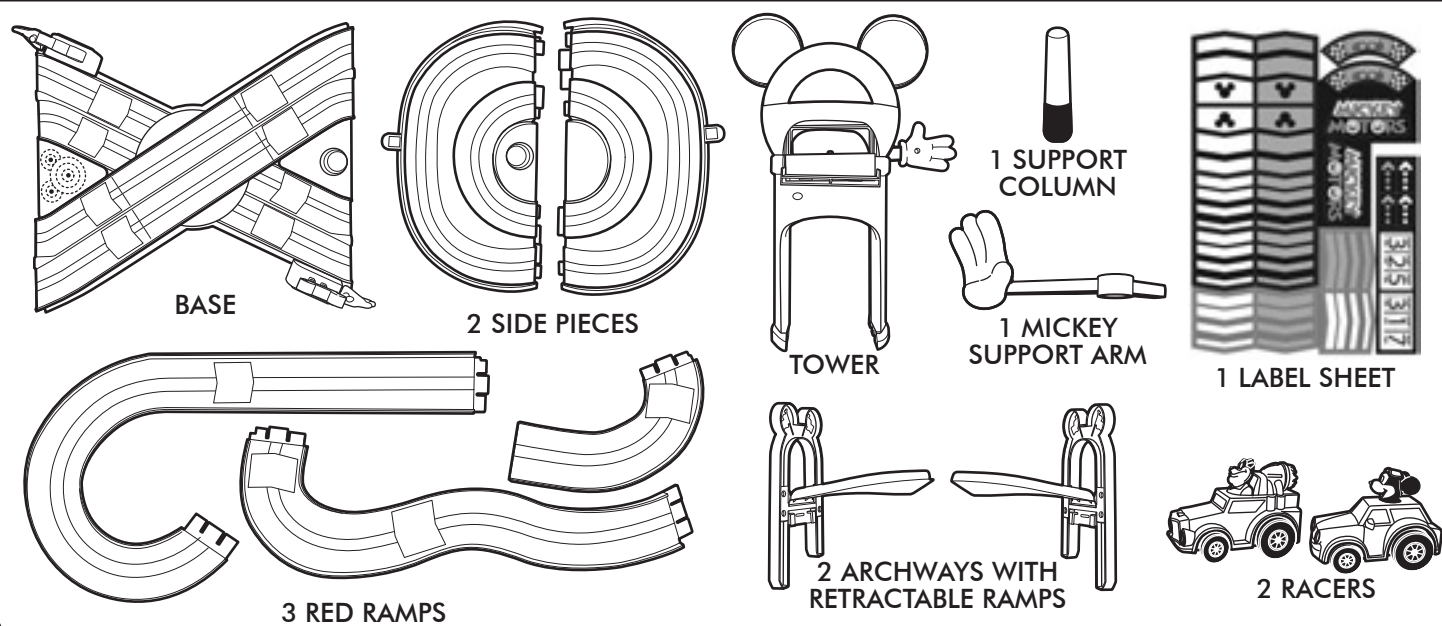

BATTERY INSTALLATION

Unscrew and lift cover away from bottom of product. Battery compartment is located on the bottom of the base next to the car launcher. Install batteries as indicated inside the battery compartment. For longer life use only alkaline batteries. Requires 3 "AA" (LR6) batteries.

Required tool: Phillips screwdriver (not included)

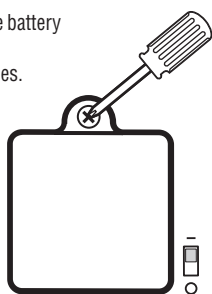


BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this toy in a fire. The batteries inside may explode or leak.

HOW TO ASSEMBLE


- Assemble the two SIDE PIECES to the BASE, as shown.
- Insert the TOWER into the BASE, as shown.
- Insert the two ARCHWAYS into the two SIDE PIECES, as shown.
- Insert the MICKEY SUPPORT ARM into the BASE, as shown.
- Insert the SUPPORT COLUMN into the BASE, as shown.
- Attach the three RED RAMPS, as shown.
- Apply the labels on any flat surface of the playset.

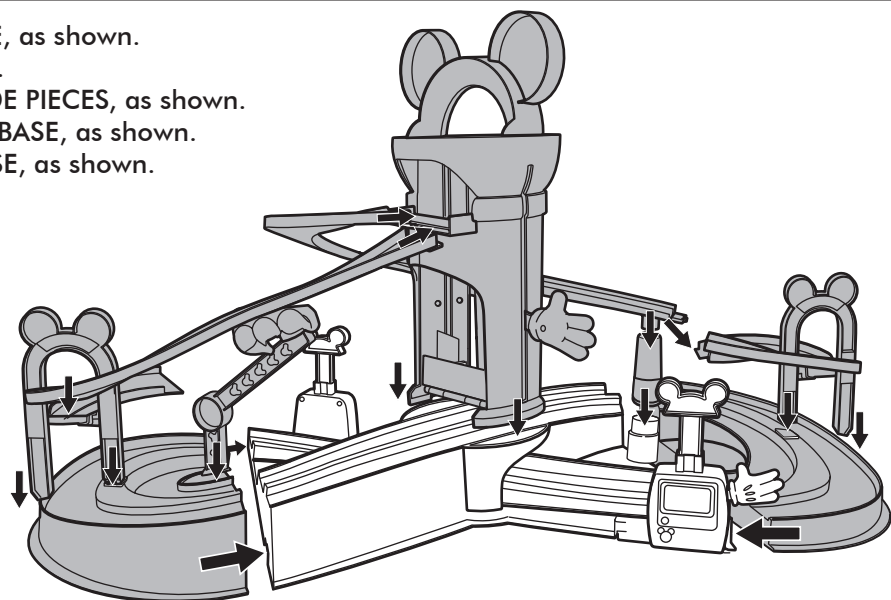

ADULT ASSEMBLY REQUIRED.
No tools required for assembly.


HOW TO PLAY

1. Be sure the ON/OFF switch is in the ON position. The ON/OFF switch is located on the bottom of the base next to the battery compartment. (see battery diagram).
2. Place one of the racers onto one of the two launchers.
3. Pump down on the charger (Mickey's ears). Mickey will count off the pumps for a maximum of 10 pumps.
NOTE: It is not necessary to pump the charger 10 times for every race.
4. Press down on the release button (Mickey's hand). The racer will begin to race and Mickey will tell you which lap you are on. Remember to charge the racer after each lap.

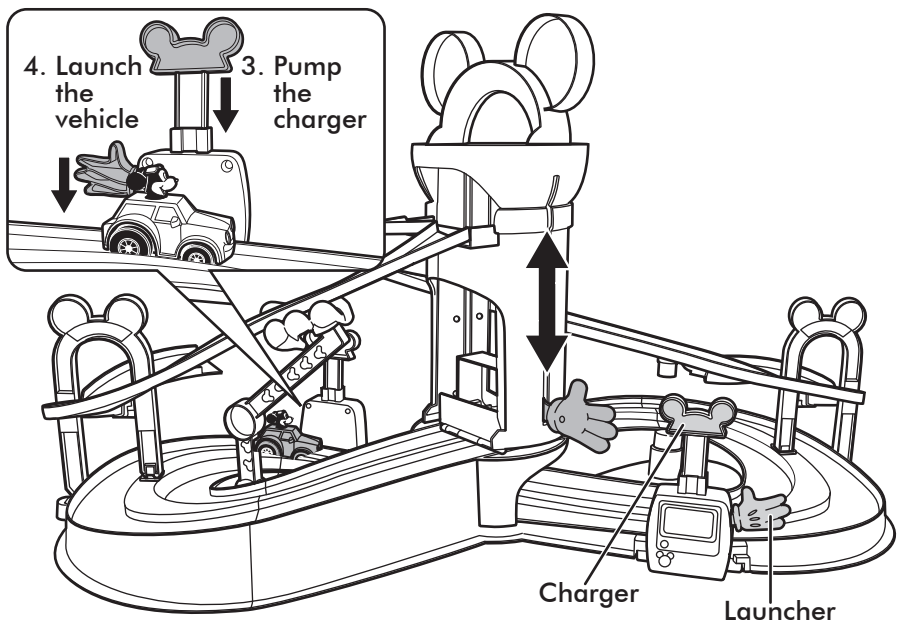

5. As the racers ride into the tower, they will either pass through the tower or stop in the elevator, depending on whether the elevator ramp is up or down.
6. If the elevator ramp is up, the racer will stop in the elevator. You can then raise the elevator using the lever (Mickey hand) on the side of the elevator.
7. When the elevator reaches the top of the tower, release the car by lowering the elevator ramp.

Additional racers sold separately.

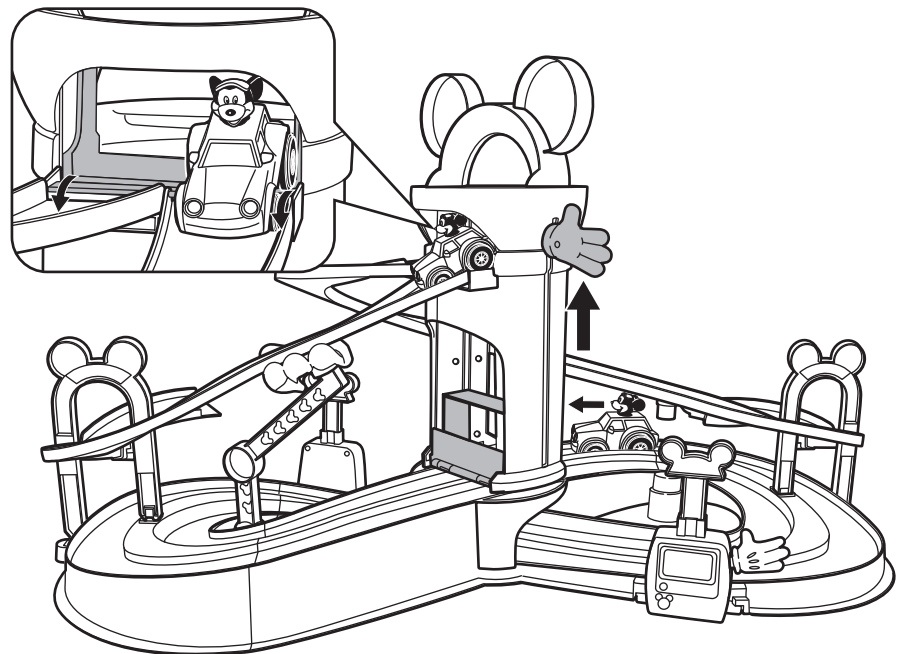

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Mattel Inc. 333 Continental Blvd. El Segundo, CA (310) 252-2400 NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

© Disney
Visit the Disney Web site at www.disney.com
Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
PRINTED IN CHINA.
Manufactured for Fisher-Price. ©2008 Mattel, Inc. All Rights Reserved.
® and ™ designate U.S. trademarks of Mattel, Inc., unless otherwise indicated.
For countries outside the United States:
Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com
Great Britain: Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303.
Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria. 3121 Australia.
Consumer Advisory Service - 1300 135 312.
New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.
Asia: Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

CONSUMER ASSISTANCE
Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)
service.fisher-price.com
Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.
Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-362-7470.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

M9863
Fisher-Price®

Item : M9863-0920
Version : EL
Size : A4
Paper : Woodfree Paper 80 gsm
Color : 1C
Date : May 30, 2008 (WC)

ID. M9863-0920