



Please keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required.

Tool needed for assembly: Phillips Screwdriver (not included).


Parts




CAUTION

This product contains small parts
in its unassembled state.
Adult assembly is required.


IMPORTANT! Only use balls supplied with this toy.

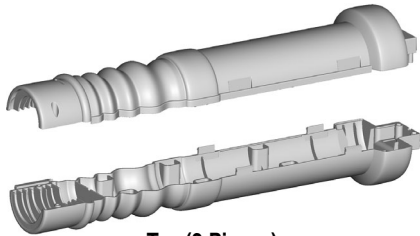

Tee (2 Pieces)

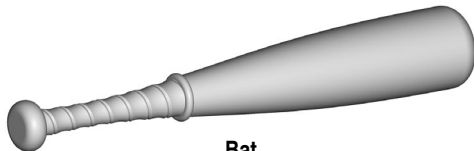

Bat

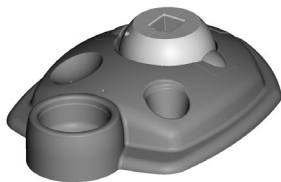

Base



Tee Topper



#6 x 1/2" Screws - 2

SHOWN ACTUAL SIZE

Note: Tighten and loosen all
screws with a Phillips Screwdriver.
Do not over-tighten the screws.



Plastic Screw Ball



2 Plastic Balls

Consumer Information



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303,
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.


New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.


Care

- Do not leave this product outdoors. Store this product indoors when not in use.
- This product may be wiped clean using a mild cleaning solution and a damp cloth. Do not use bleach. Do not use harsh or abrasive cleaners. Rinse clean with water to remove residue.
- Periodically inspect this product for wear and damage and replace any cracked parts.


Assembly

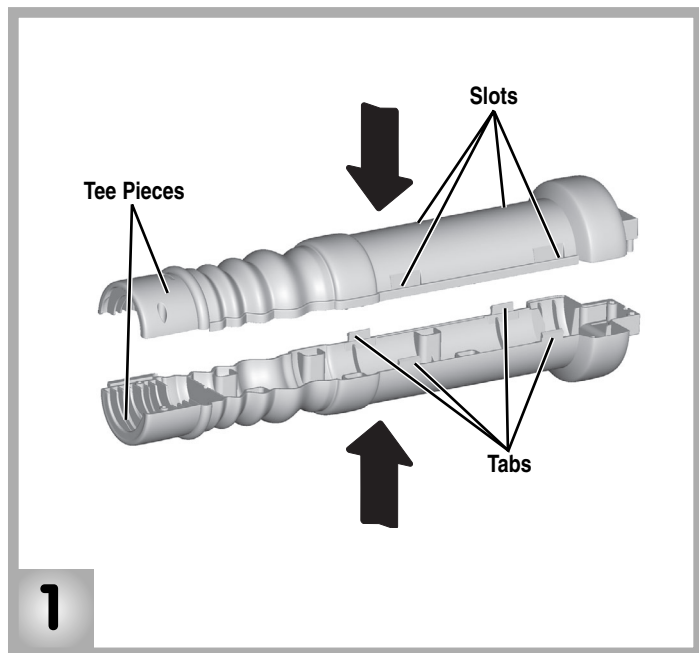


- Fit the tee pieces together by inserting the tabs on one piece into the slots on the other piece.
- Press near each tab to “snap” together.

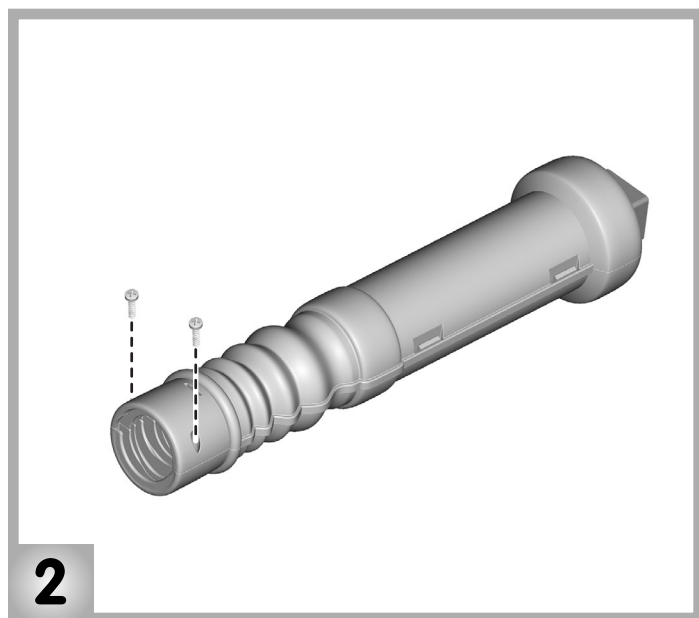

- Insert two screws into the holes at the top of the tee and tighten.

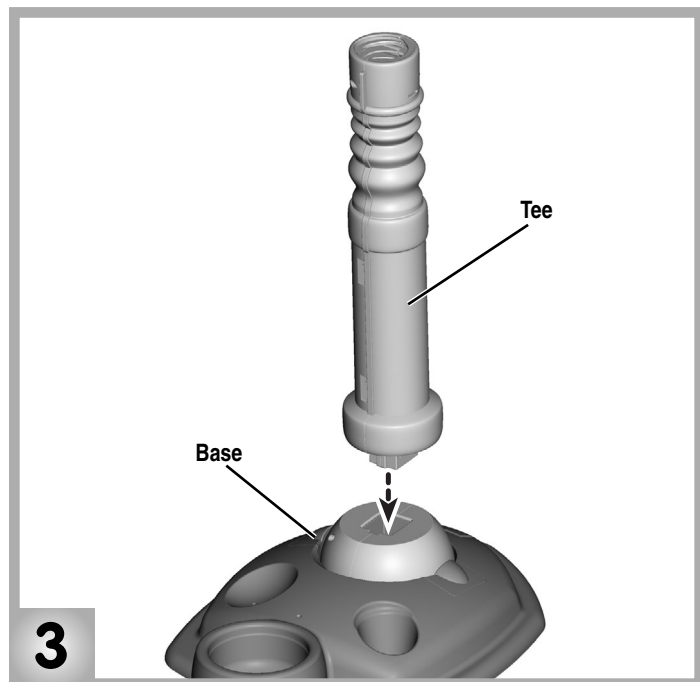


- Fit the tee into the hole in the base and push to “snap” into place.
Hint: The tee is designed to fit into the base one way. If it does not seem to fit, turn it until it fits into place!

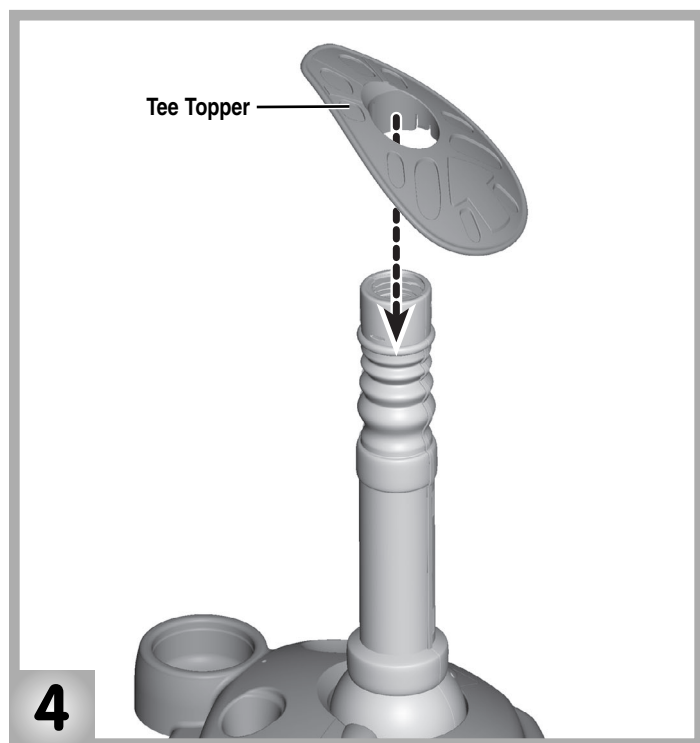

- Fit the tee topper onto the tee. Line up the slot on the tee topper with the groove on the tee, and slide into place.


Play Ball!

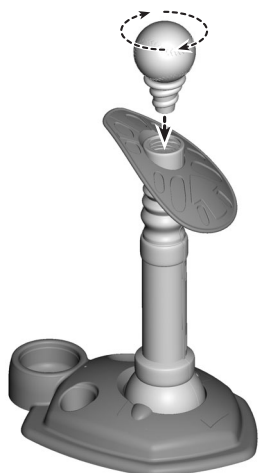

Beginner

Take a practice swing!

- Fit the plastic screw ball into the top of the tee and twist to secure in place.
- Use the tee topper as a guide to practice swinging the bat.

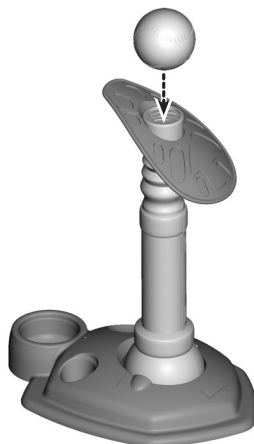

Intermediate

Hit the ball off the tee!

- Remove the plastic screw ball from the tee.
- Place a plastic ball on the tee.
- Swing the bat. Use the tee topper as a guide to help hit the ball.



Advanced

Hit the ball all by yourself!

- Remove the tee topper from the tee.
- Place a plastic ball on the tee.
- Swing the bat to hit the ball off the tee.

Batting Practice Tips

- We recommend that this toy be used outdoors on a non-paved surface, such as grass or sand.
- Be sure that when your child is batting, there are no other children in or around the batting area, including directly in front of the tee.
- This toy is designed for use with plastic balls and a plastic bat (both included). It is not designed for use with wooden or metal bats, or regulation baseballs or softballs. Use of these balls and bats may damage this toy.
- Hold the bat with hands together, about one or two inches from the knob at the end of the bat.
 - Right handed batters should have the right hand on top of the left hand.
 - Left handed batters should have the left hand on top of the right hand.
- Stand with feet about shoulder width apart.
- When hitting from the tee, stand close enough to hit the ball comfortably. Look at the ball and swing with a smooth and level motion.

Storage

- Put the plastic screw ball in the hole in the base. Put one plastic ball on the tee, and the other in the groove on the base of the tee.
- Stand the bat up in the large hole in the back of the base.