

Fisher-Price®

N1416



www.fisher-price.com

Consumer Information

- Please keep this instruction sheet for future reference, as it contains important information.
- Tools required for assembly: Phillips screwdriver (not included) and wrench (included).
- Adult assembly is required.
- Adult supervision is required.
- For children ages 12 - 36 months.
- Weight limit: 40 lbs (18 kg).
- Periodically inspect the pony for damage or wear.
- Before each use check to make sure all fasteners are securely tightened.



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

 **service.fisher-price.com**

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

 
Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Parts

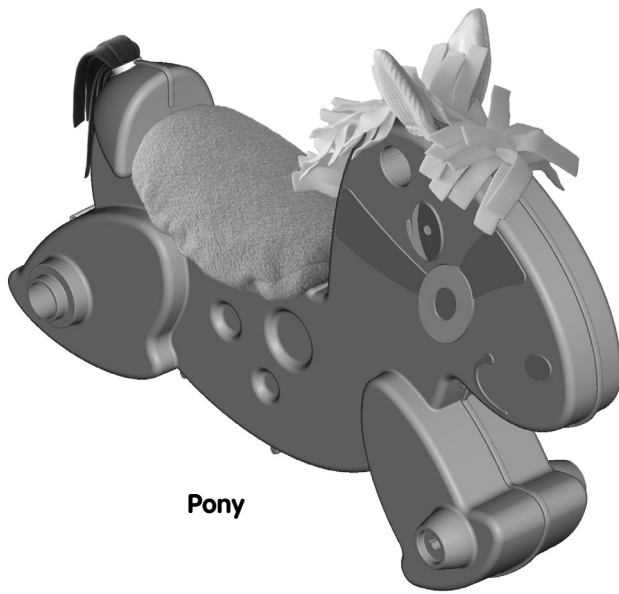


Pony



2 Handlebars



 
2 Rear Hubcaps

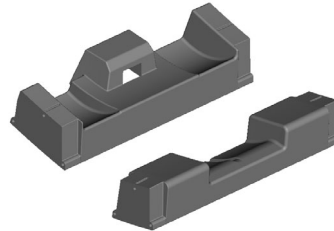


2 Crossbars



 
2 Front Hubcaps

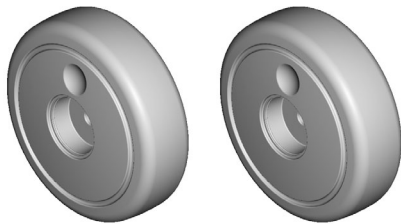


2 Front Wheels

 

2 Spacers

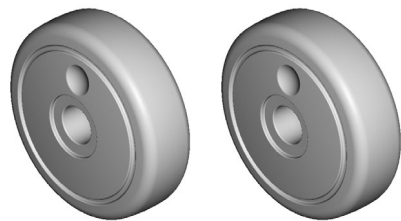 


2 Rear Wheels

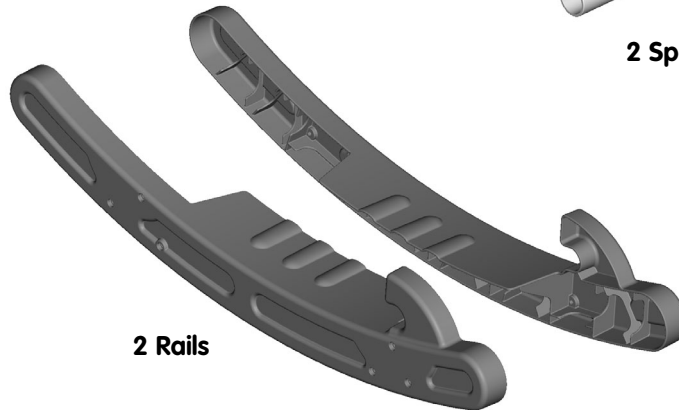 


2 Rails



 Wrench

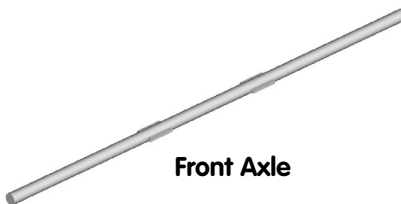


Front Axle

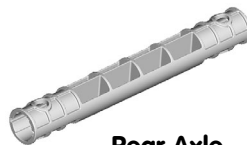 

Rear Axle



 Lock Nuts - 2



#8 x 3/4" Screws - 12

 
 
Fasteners Shown Actual Size

Pony Assembly




CAUTION

This product contains small parts in its unassembled state. Adult assembly is required.

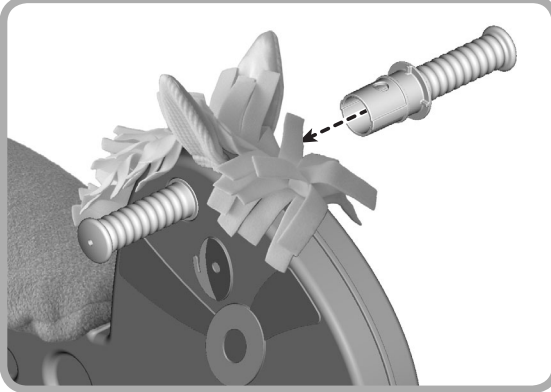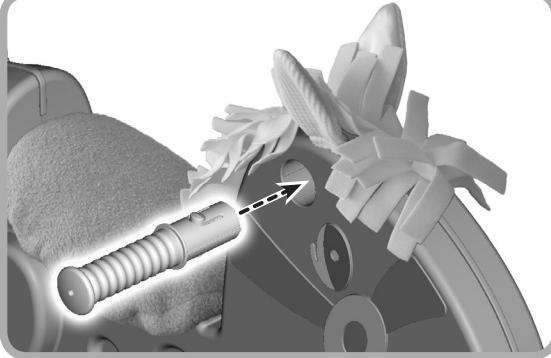


Handlebars

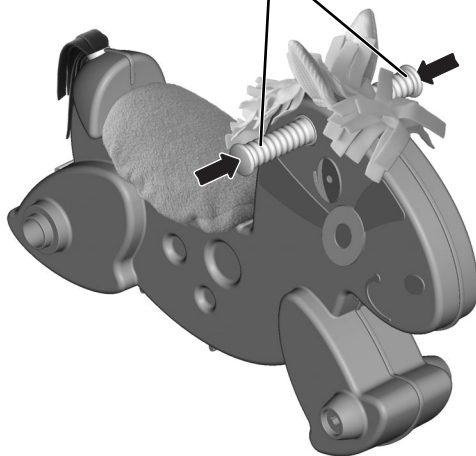 


1

 - Insert a handlebar into the hole on the pony head.
- Insert the other handlebar on the other side of the pony head.
- Push to “snap” the handlebars together.

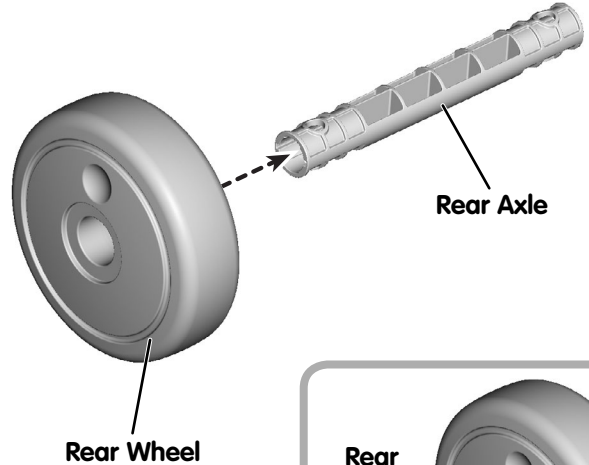

Rear Wheel

 
Rear Axle

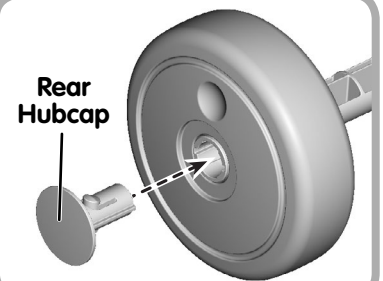

Rear Hubcap

2

 - Slide a rear wheel onto the rear axle.
- Note:** The indented side of the rear wheel should be facing out.
- “Snap” a rear hubcap into the rear wheel.

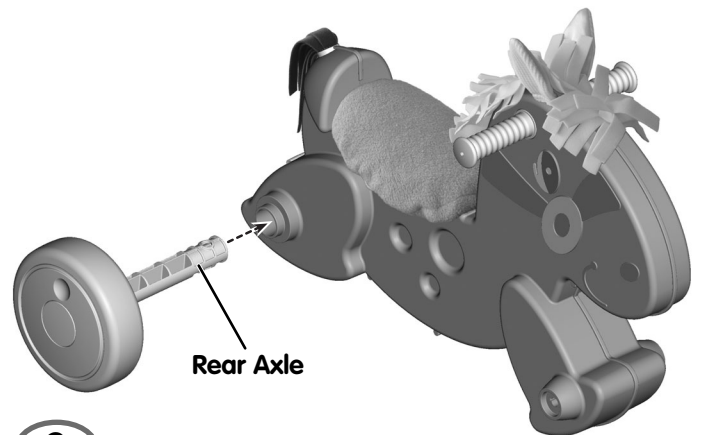


Rear Axle


3

- Slide the rear axle through hole in the pony's back legs.


 
Pony Assembly

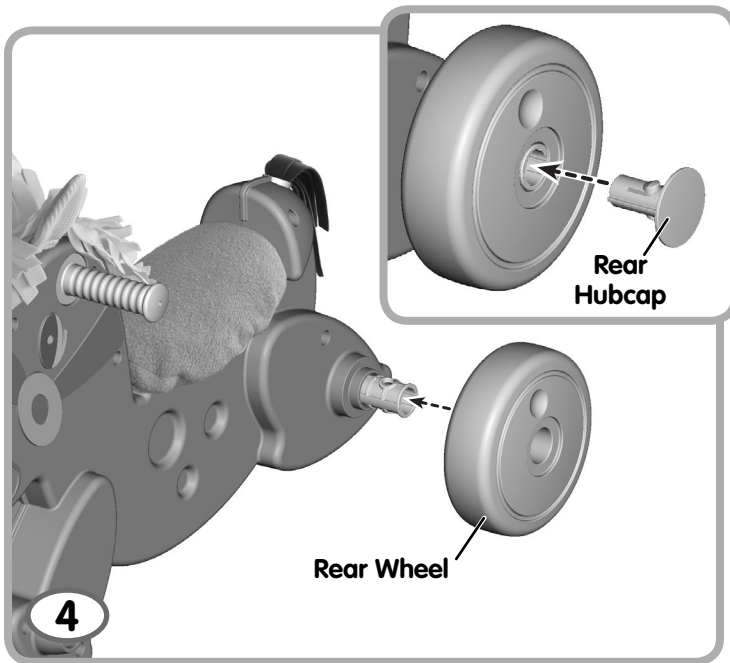

 
- Slide the other rear wheel onto the rear axle.
- Note:** The indented side of the rear wheel should be facing out.
- “Snap” the remaining rear hubcap into the rear wheel.

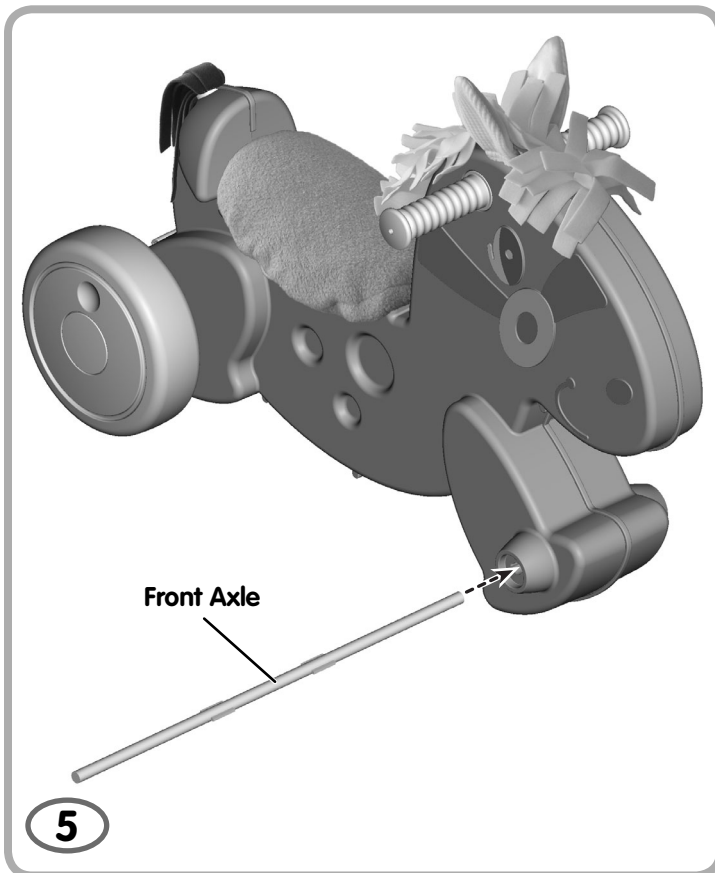

  - Slide the front axle through the pony's front legs.

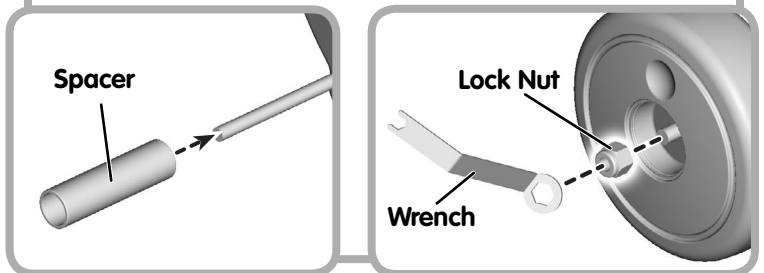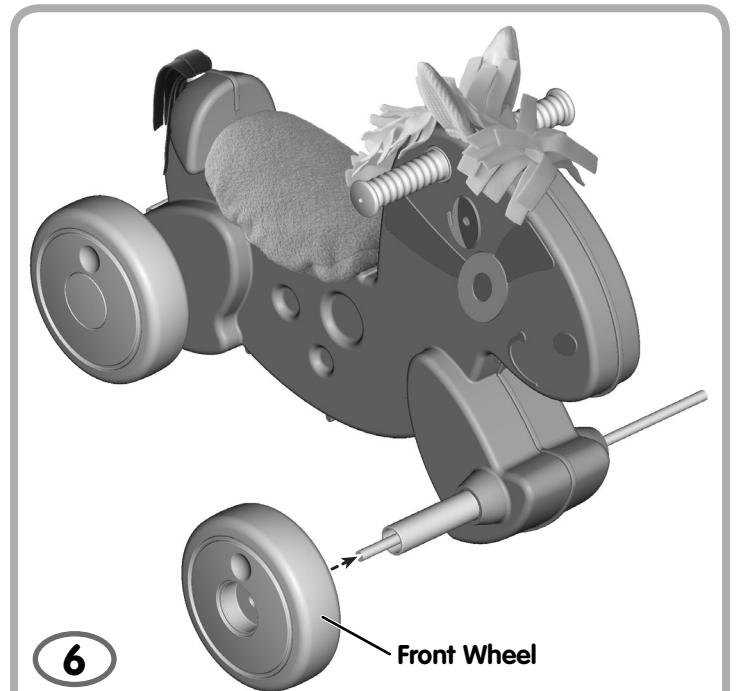


 - Slide a spacer onto one side of the front axle.
- Slide a front wheel onto the front axle.
- Note:** The indented side of the front wheel should be facing out.
- Fit a lock nut onto the end of the front axle. Make sure the rounded side of the lock nut is facing out. Tighten with the wrench (included).
- Repeat this procedure to assemble the remaining spacer, front wheel and lock nut.

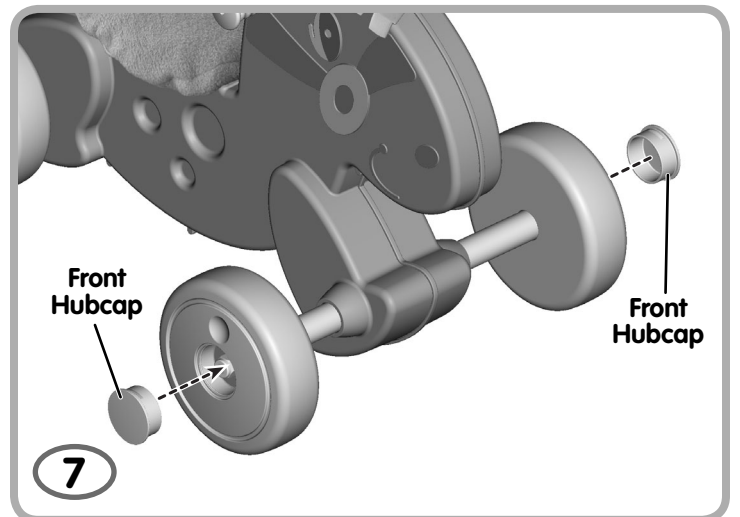


- “Snap” the front hubcaps into each front wheel.

 
Rocker Assembly

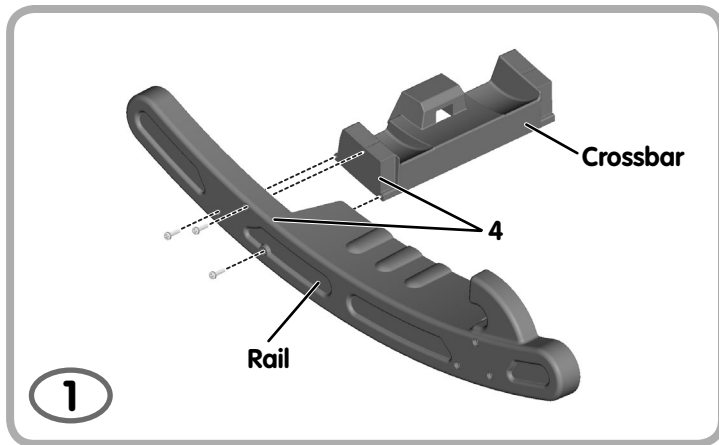

 - Match the end of the crossbar labeled 4 into the end of the rail labeled 4.
- Insert three screws into the holes in the outside of the rail and tighten with a Phillips screwdriver.

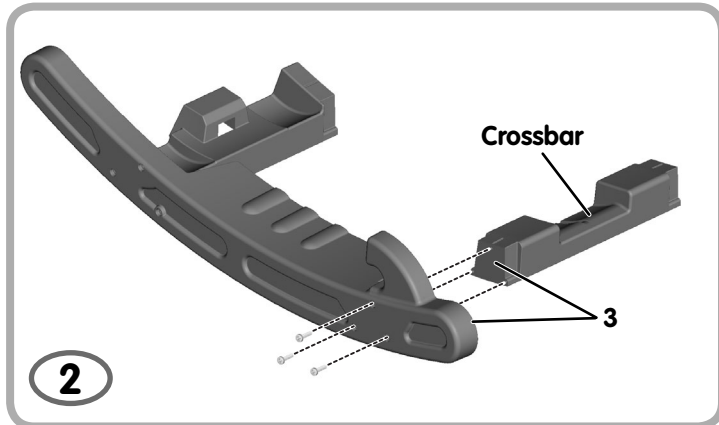

 - Match the end of the other crossbar labeled 3 into the end of the rail labeled 3.
- Insert three screws into the holes in the outside of the rail and tighten with a Phillips screwdriver.

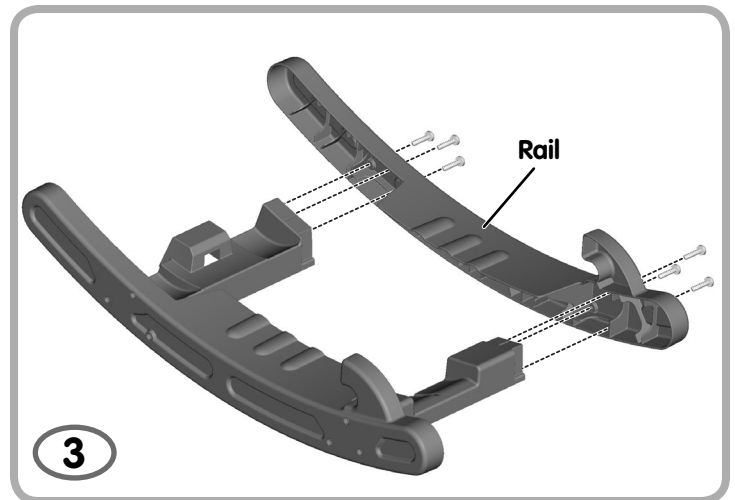


- Fit the remaining rail onto the ends of the crossbars.
- Note:** The ends of the rail are labeled 1 and 2. Match these numbers to the ends of the crossbars labeled 1 and 2.
- Insert six screws into the rail and tighten with a Phillips screwdriver.


Rock 'n Ride



 Rock 'n Roll

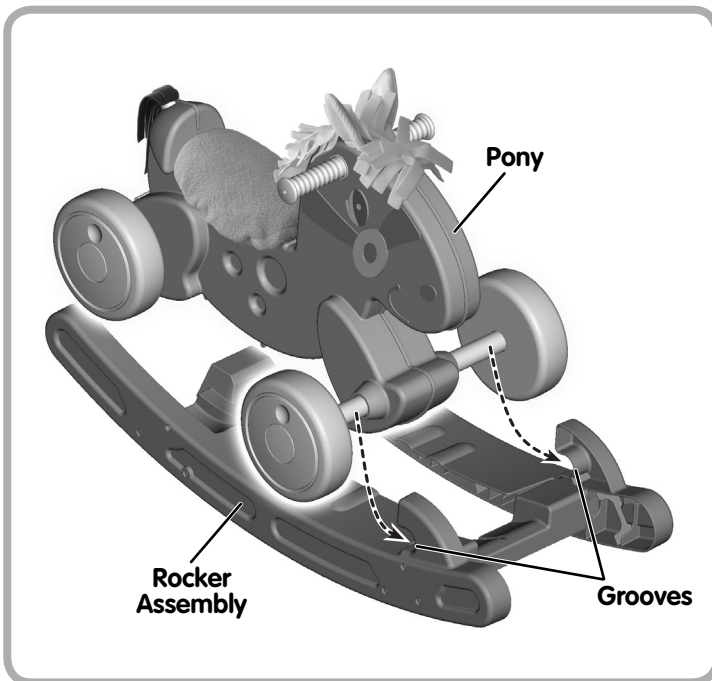

 - Fit the front axle on the pony into the grooves on the rocker assembly.
- Push the pony to "snap" it into place.


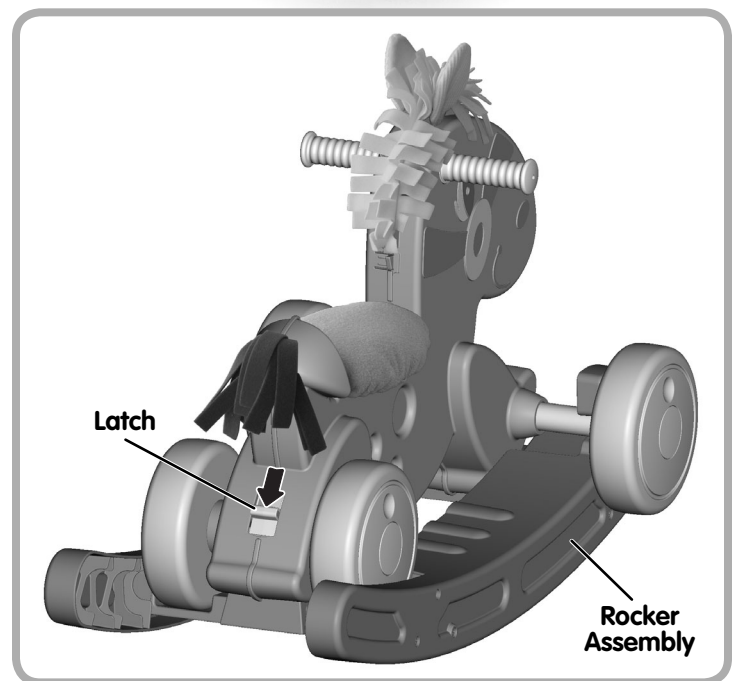


- Push the latch on the back of the pony.
- Lift the pony off the rocker assembly.
- Store the rocker assembly for future use.

Care

Pony and Rocker Assembly

  - Wipe with a clean cloth dampened in a mild soap and water solution. Do not use bleach.
- The ears and tail are surface washable.

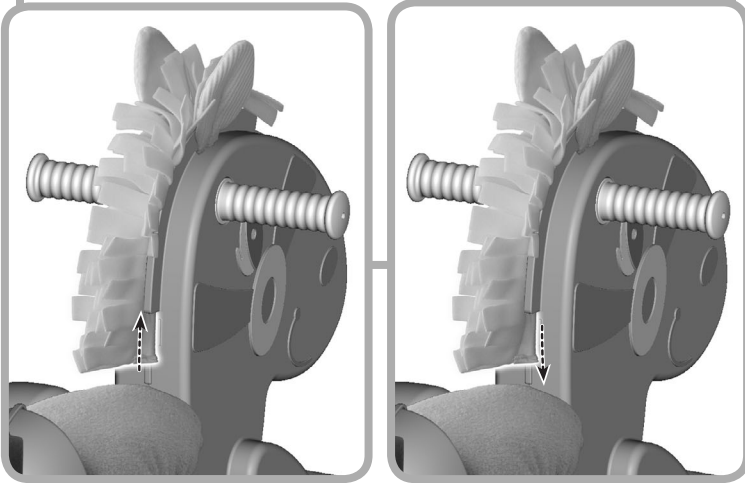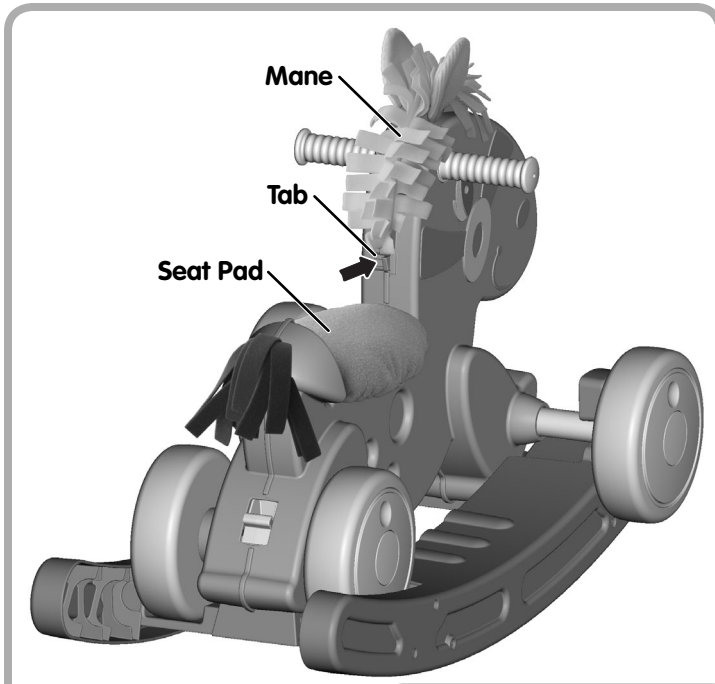

Mane and Seat Pad

- Push the tab on the back of the pony's head and slide the mane up and off of the pony.
- To re-attach the mane, fit the end of the mane into the top of the slot in the pony head. Pull the mane down into place.
- Remove the seat pad from the pony.
- Machine wash the mane and seat pad in cold water on the gentle cycle. Tumble dry on low heat. Do not use bleach.