


Please keep these instructions for future reference as they contain important information.

**CONTENTS**

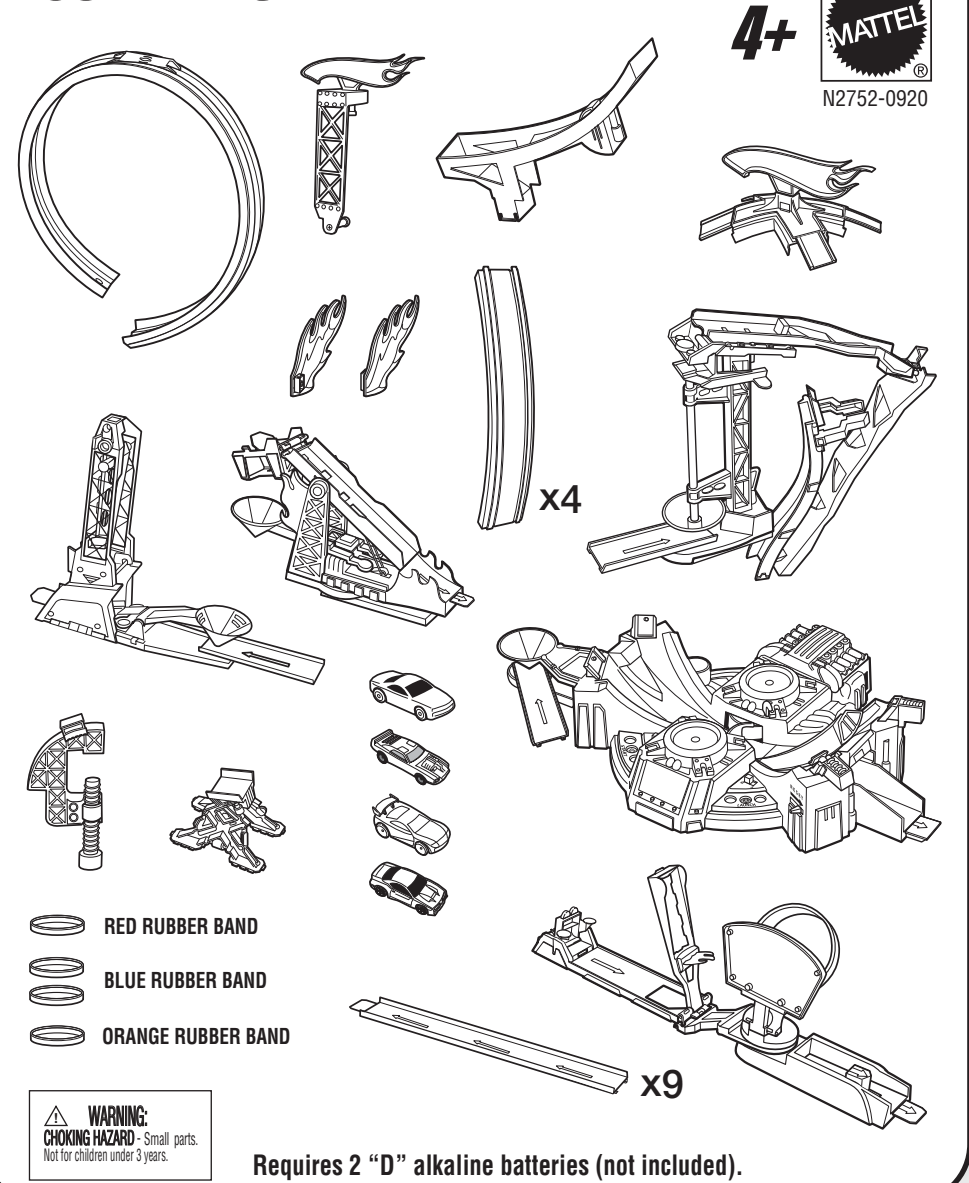

**1 Battery Installation / Replacement**


- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Install 2 "D" alkaline batteries (not included) in the orientation (+/-) shown.
- Replace battery cover and tighten screw.
- Replace the batteries when booster can no longer propel cars through the track set.
- For best performance use only alkaline batteries.

**BATTERY SAFETY INFORMATION**


- In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be recharged).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.


**2 Assemble Hoop Shot**

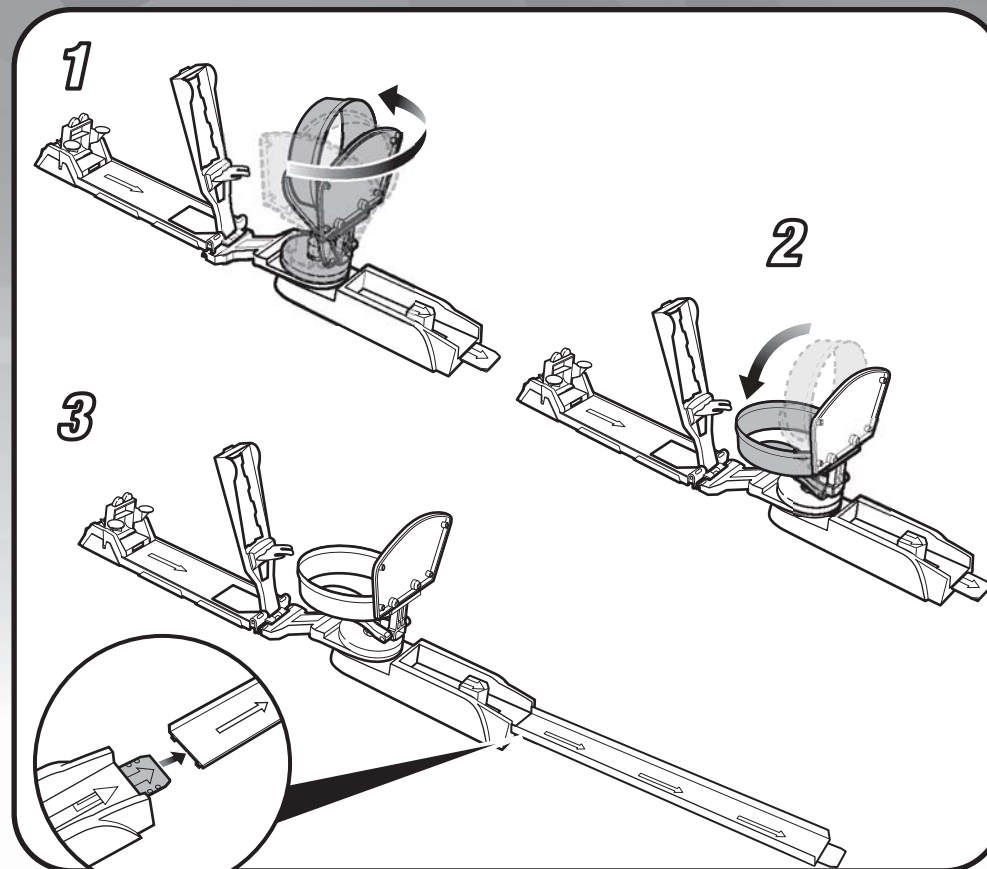


**3 Assemble Mini Slide**

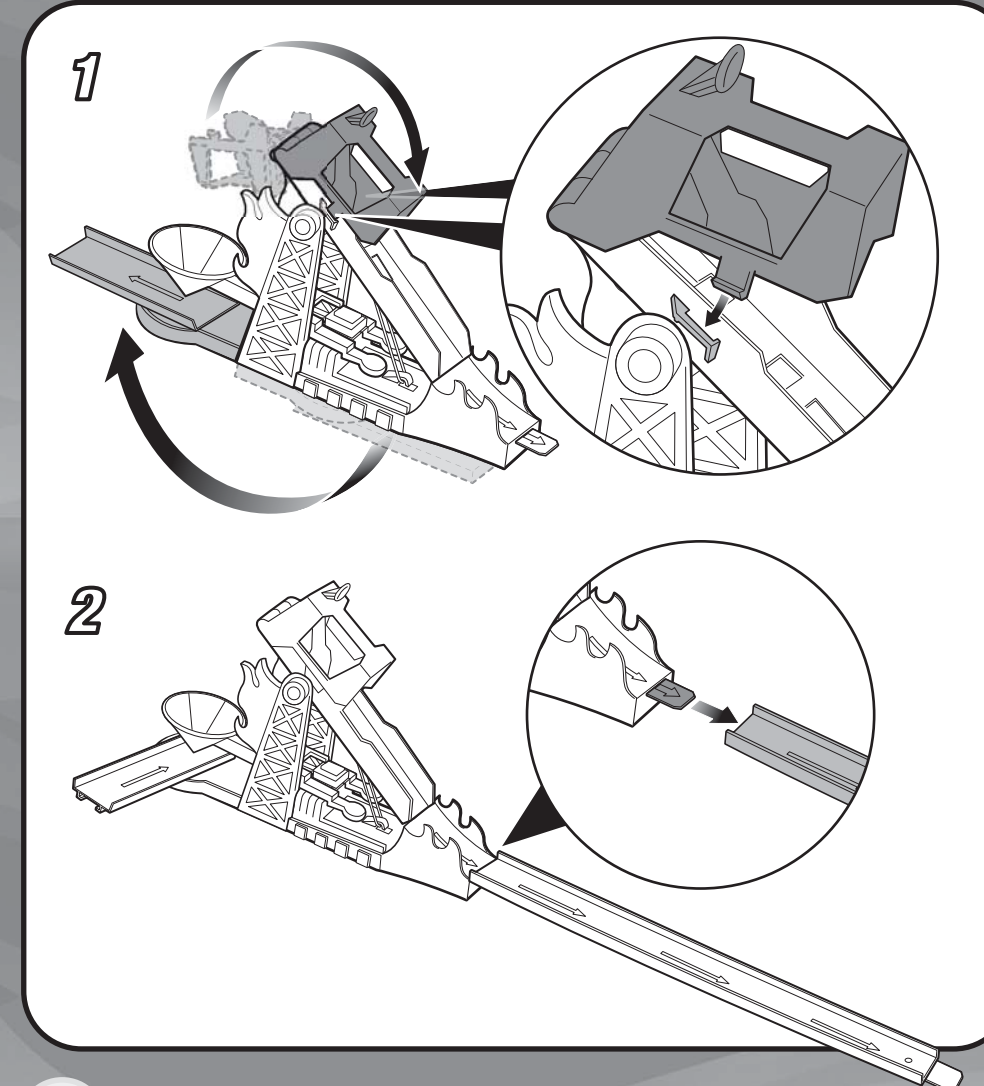


**4 Assemble 360° Loop**

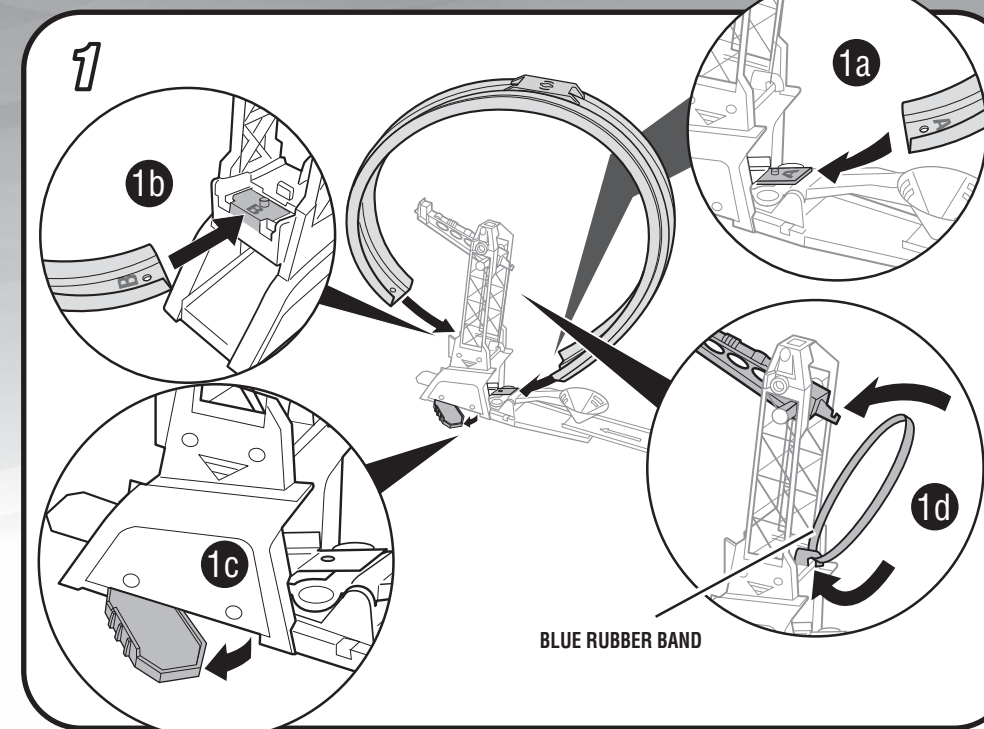


**Assemble 360° Loop (Continued)**

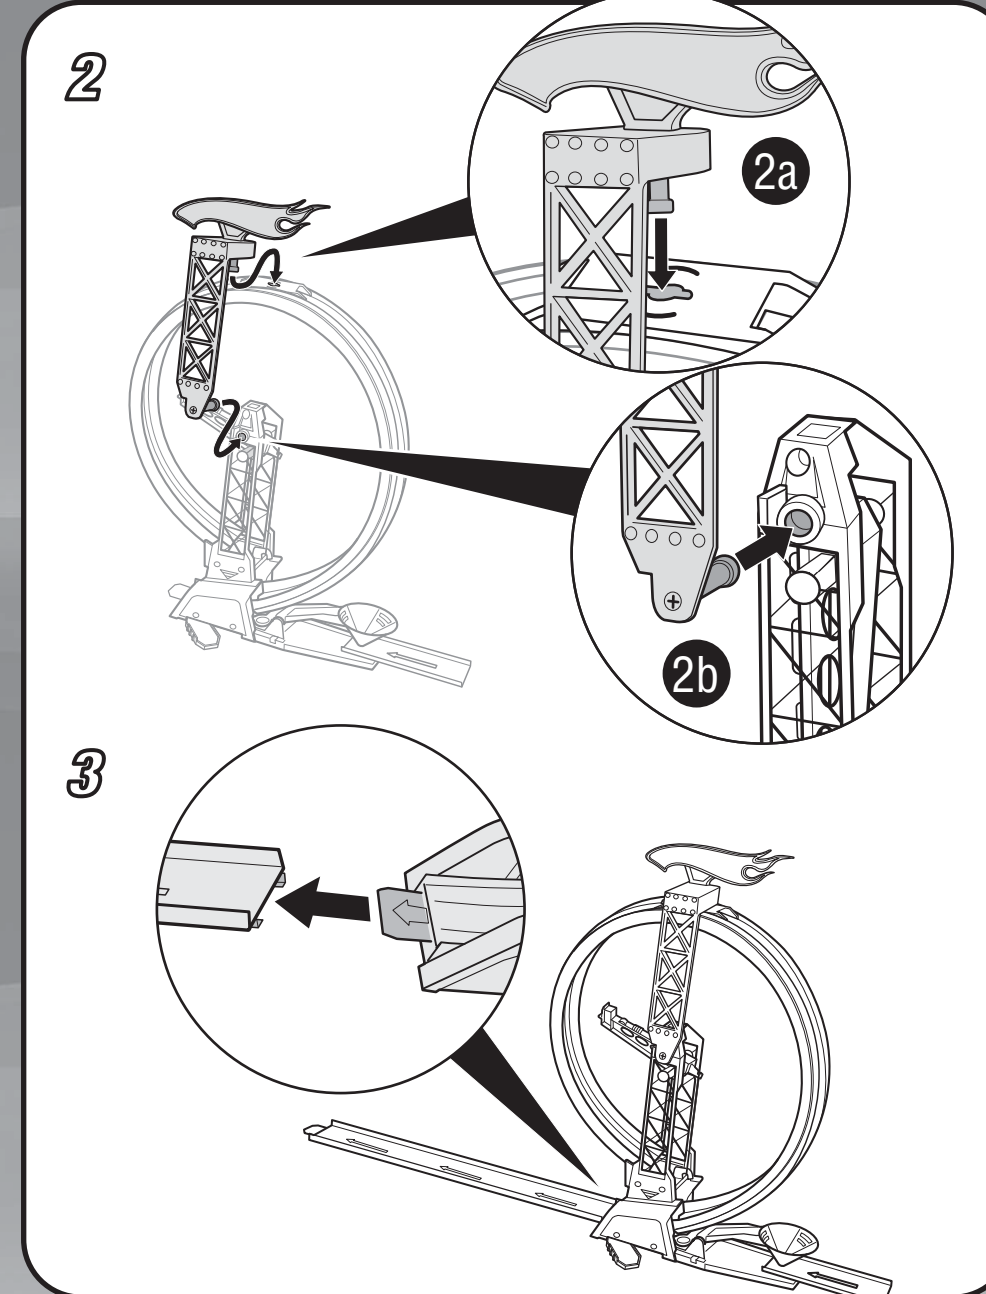


**5 Assemble Zigzag Slide**

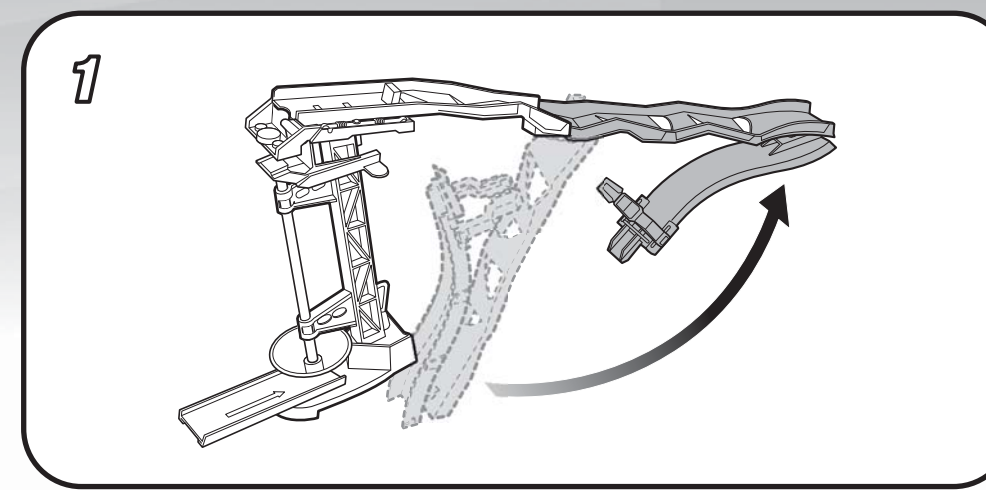


**Assemble Zigzag Slide (Continued)**

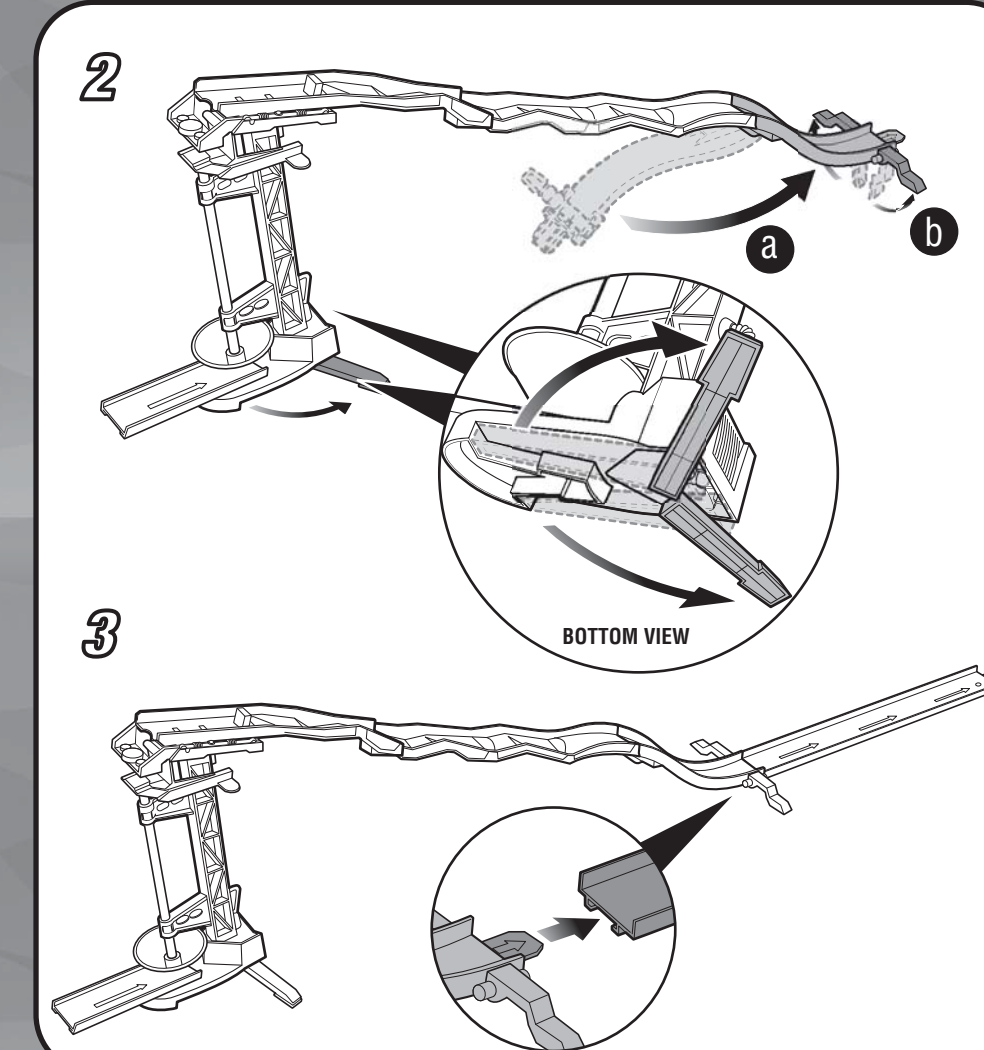


**6 Assemble Motorized Power Loop™ Stunt**

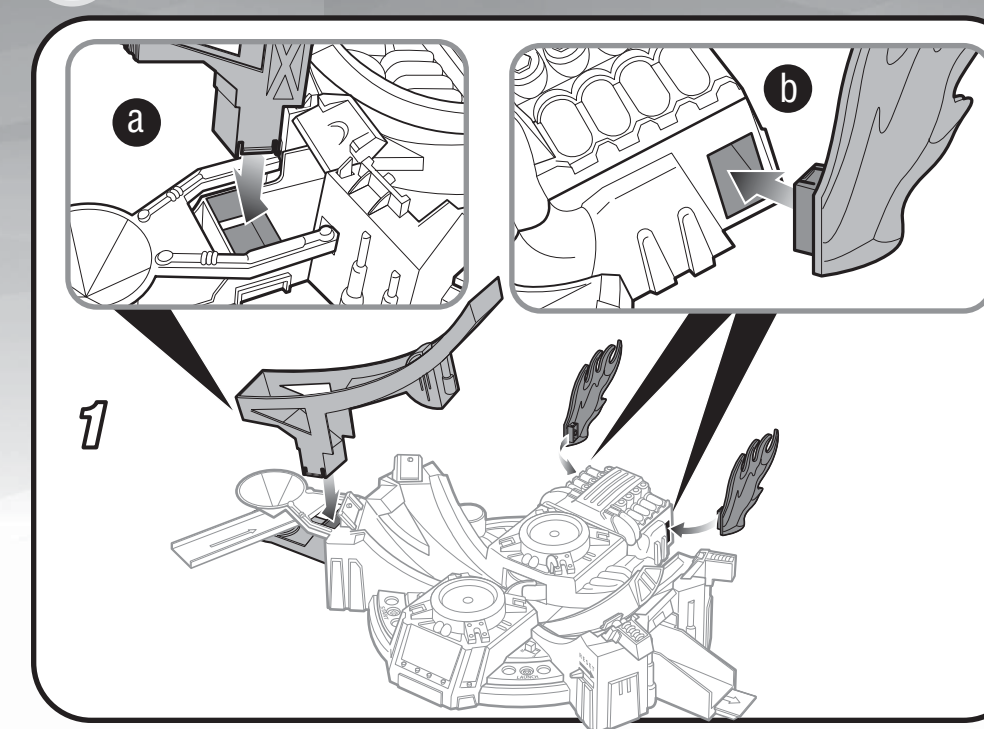


**Assemble Motorized Power Loop™ Stunt (Continued)**

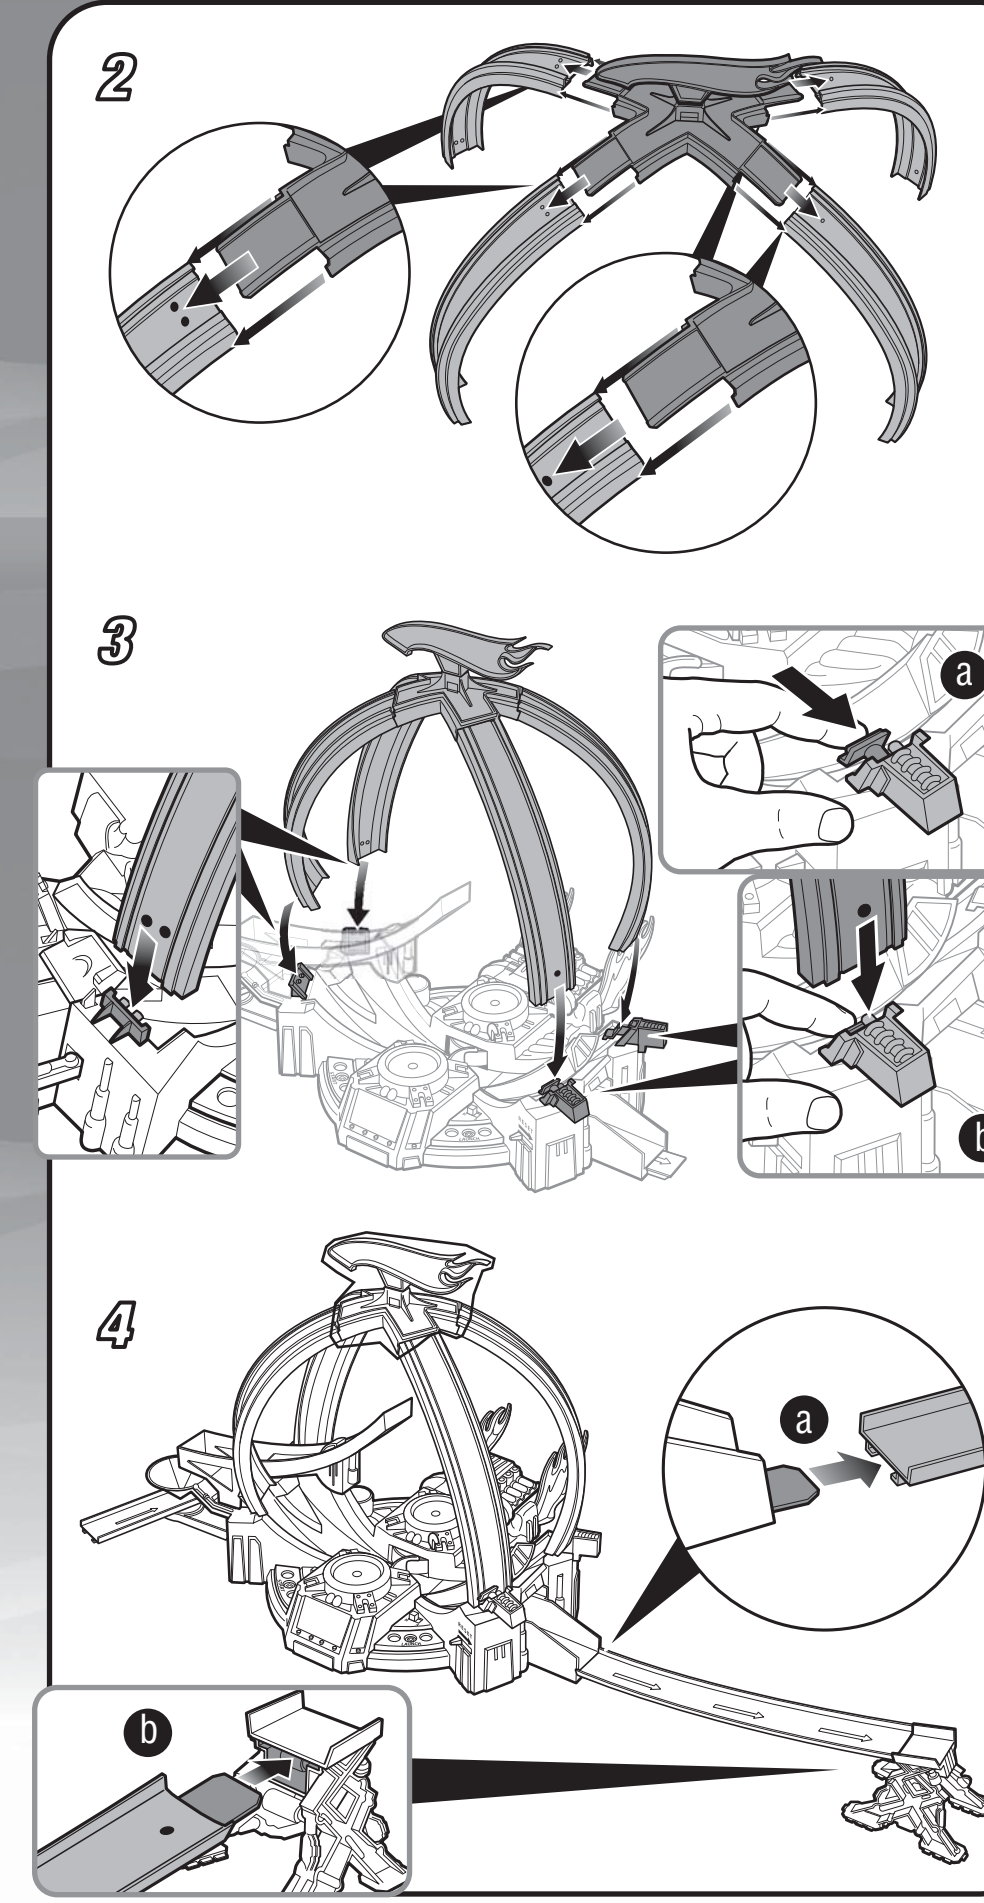


**Replace Rubber Band** ADULT SUPERVISION REQUIRED.

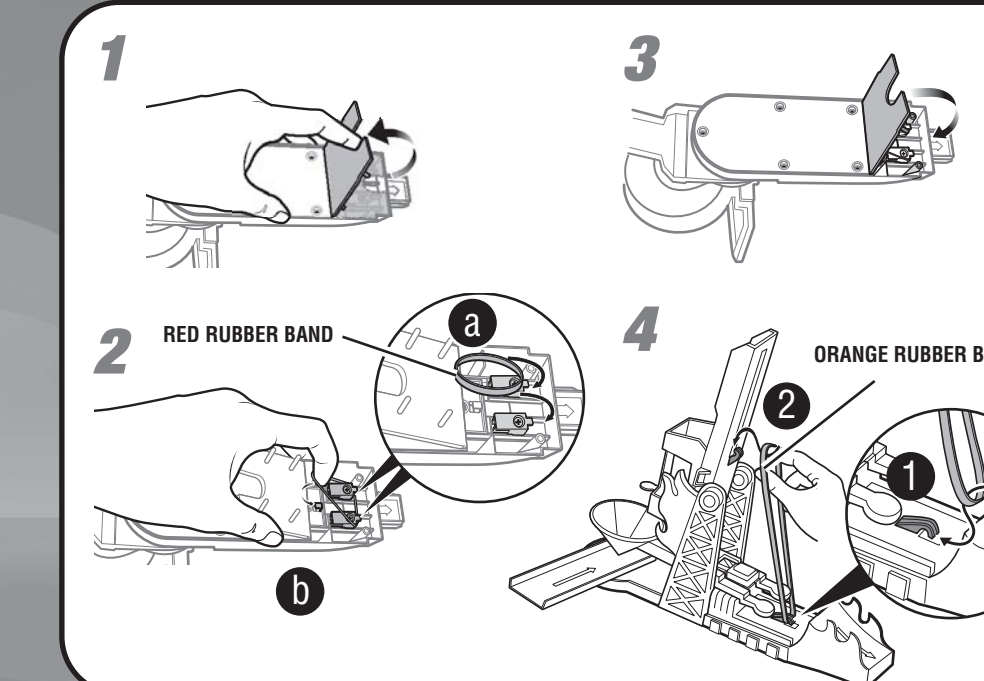


**1 To Play Hoop Shot**

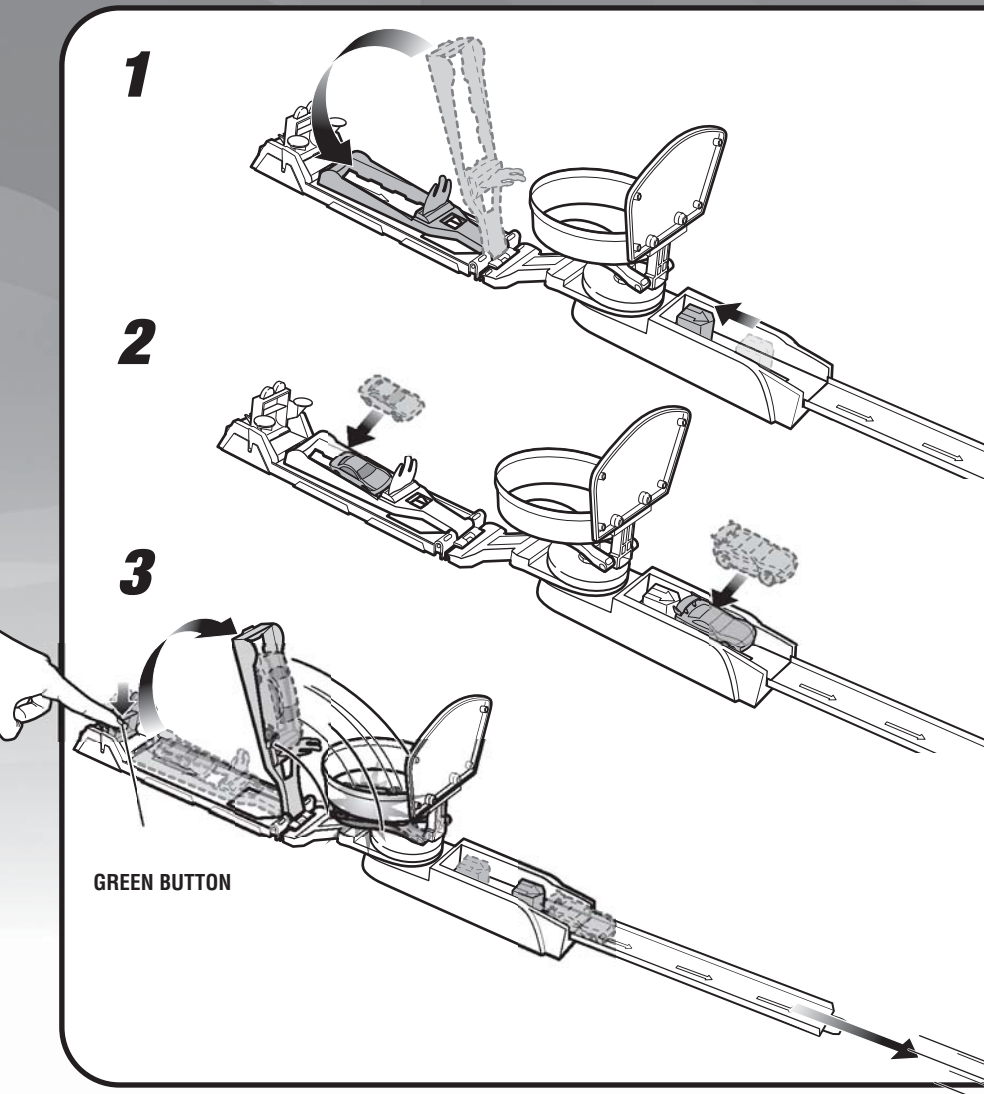


**2 To Play Mini Slide**

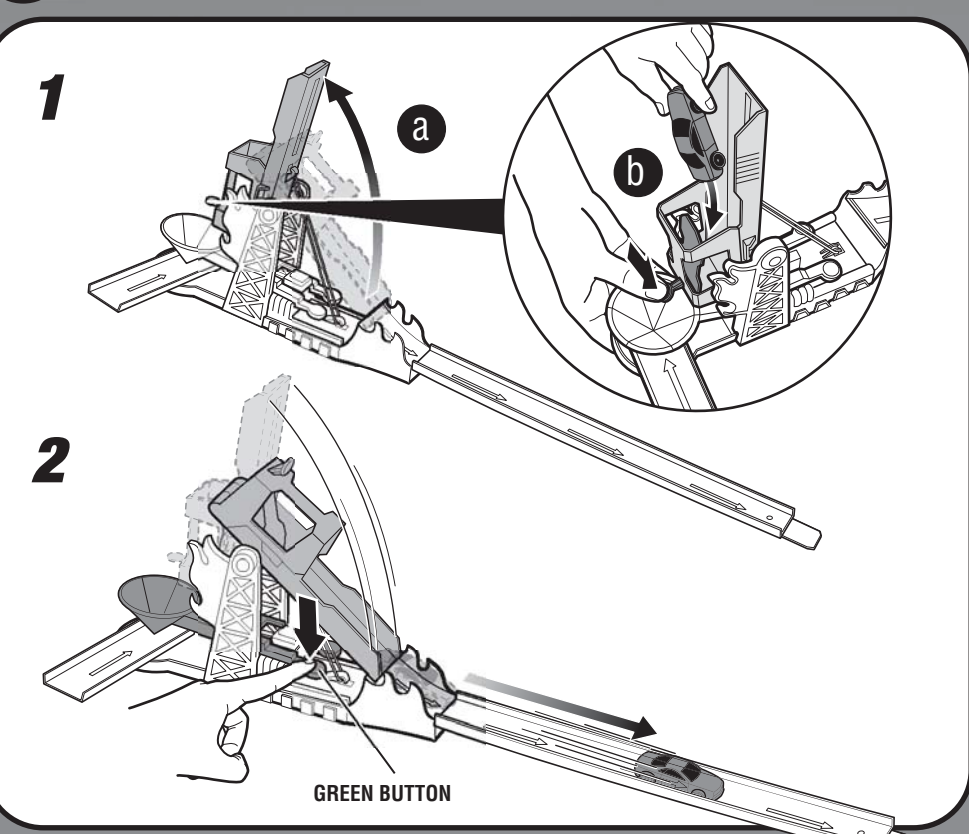


**3 To Play 360° Loop**

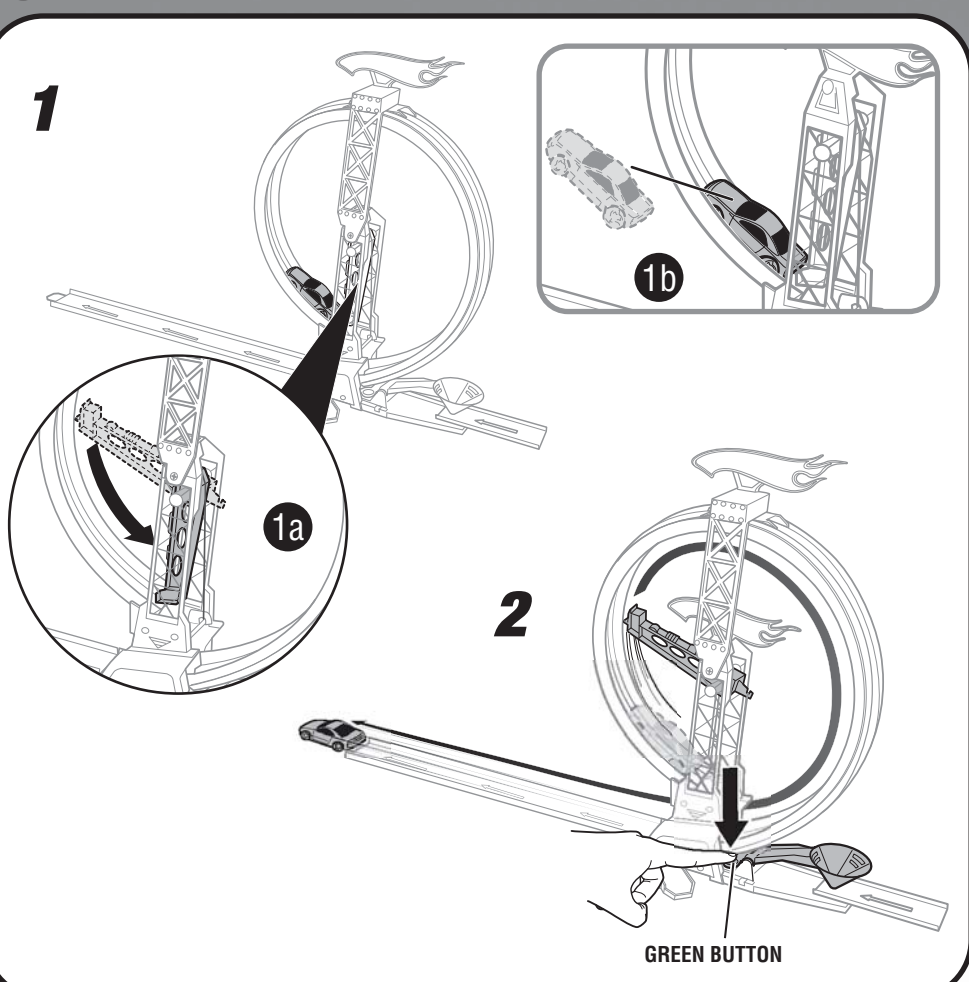


**4 To Play Zigzag Slide**

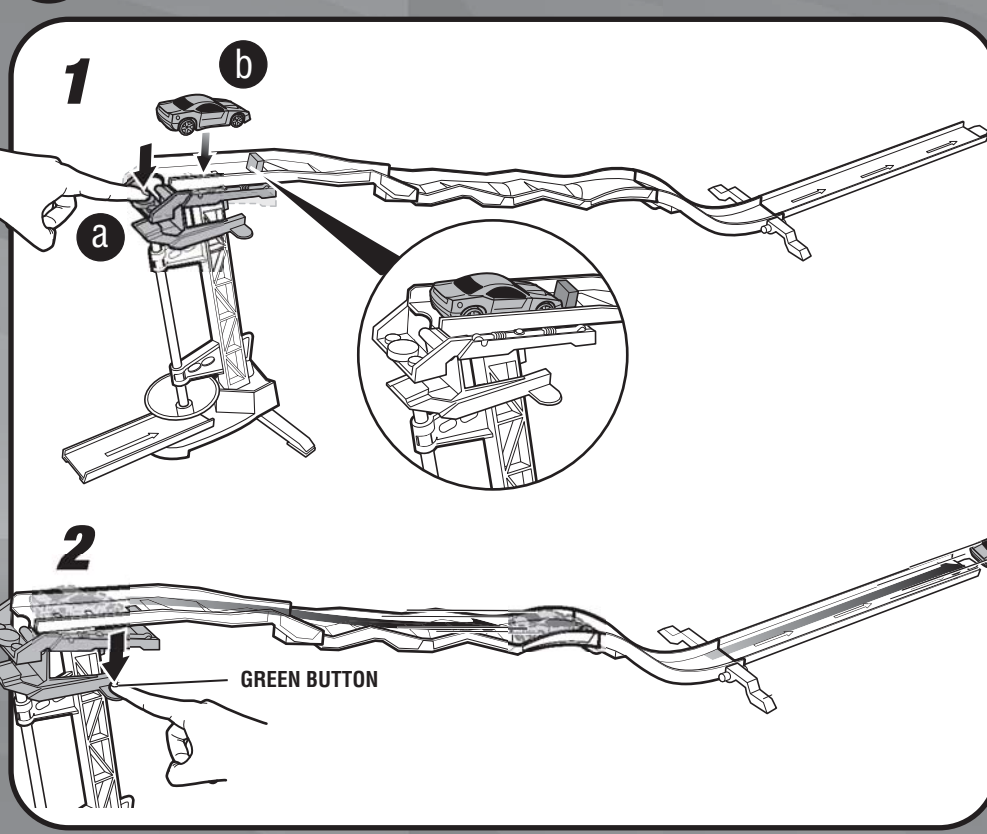


**5 To Play Motorized Power Loop™ Stunt**

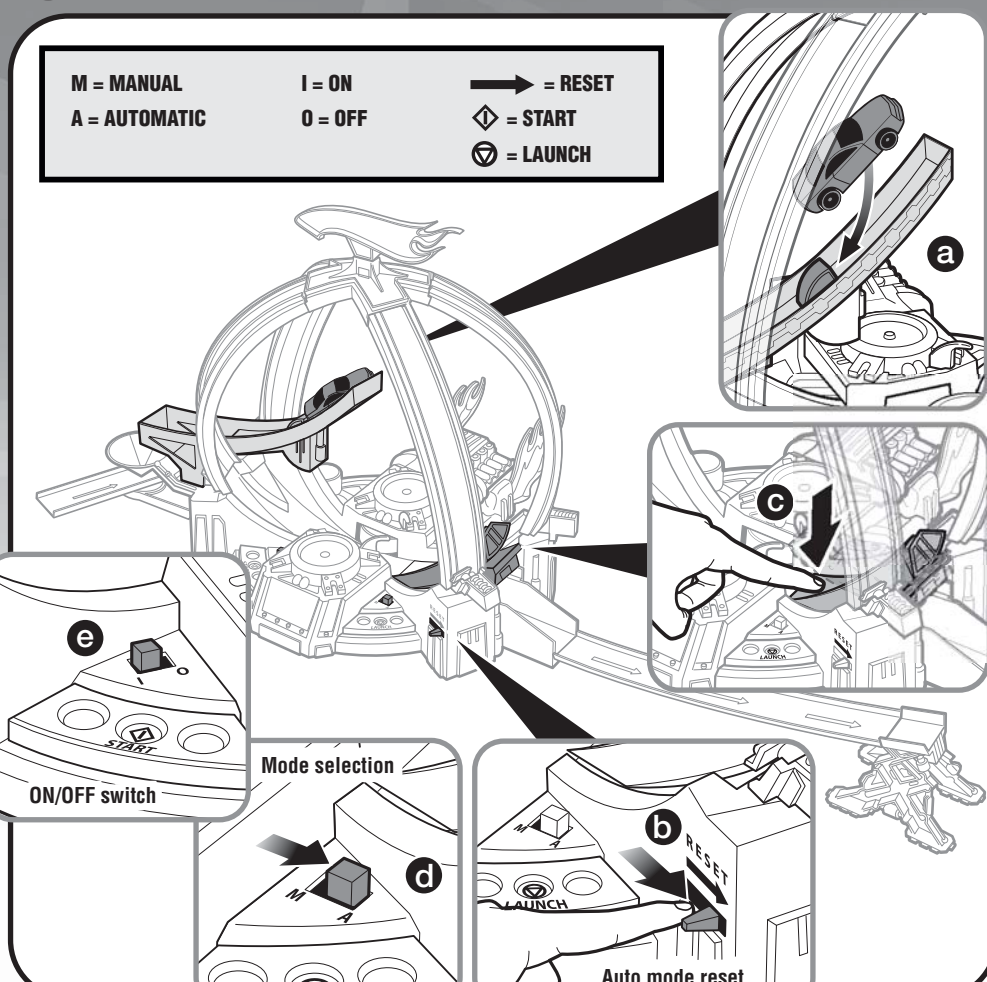


**6 Auto Mode**

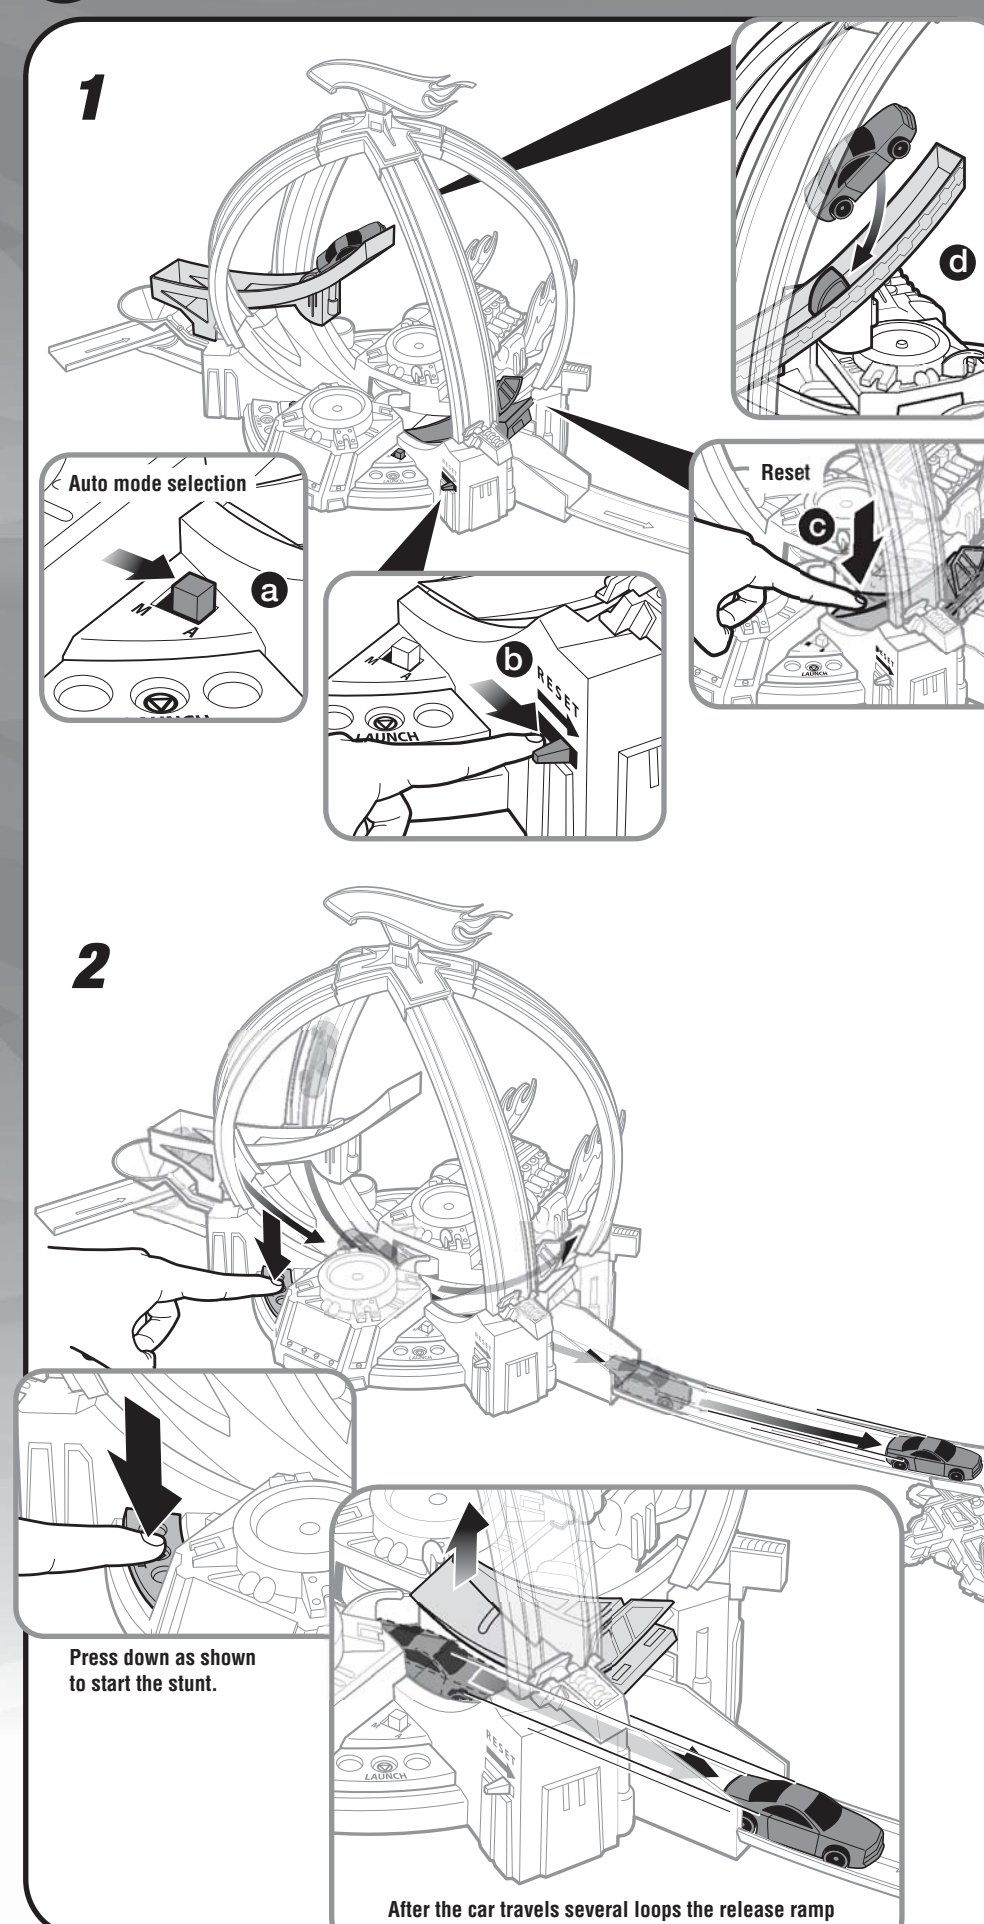

**7 Manual Mode**

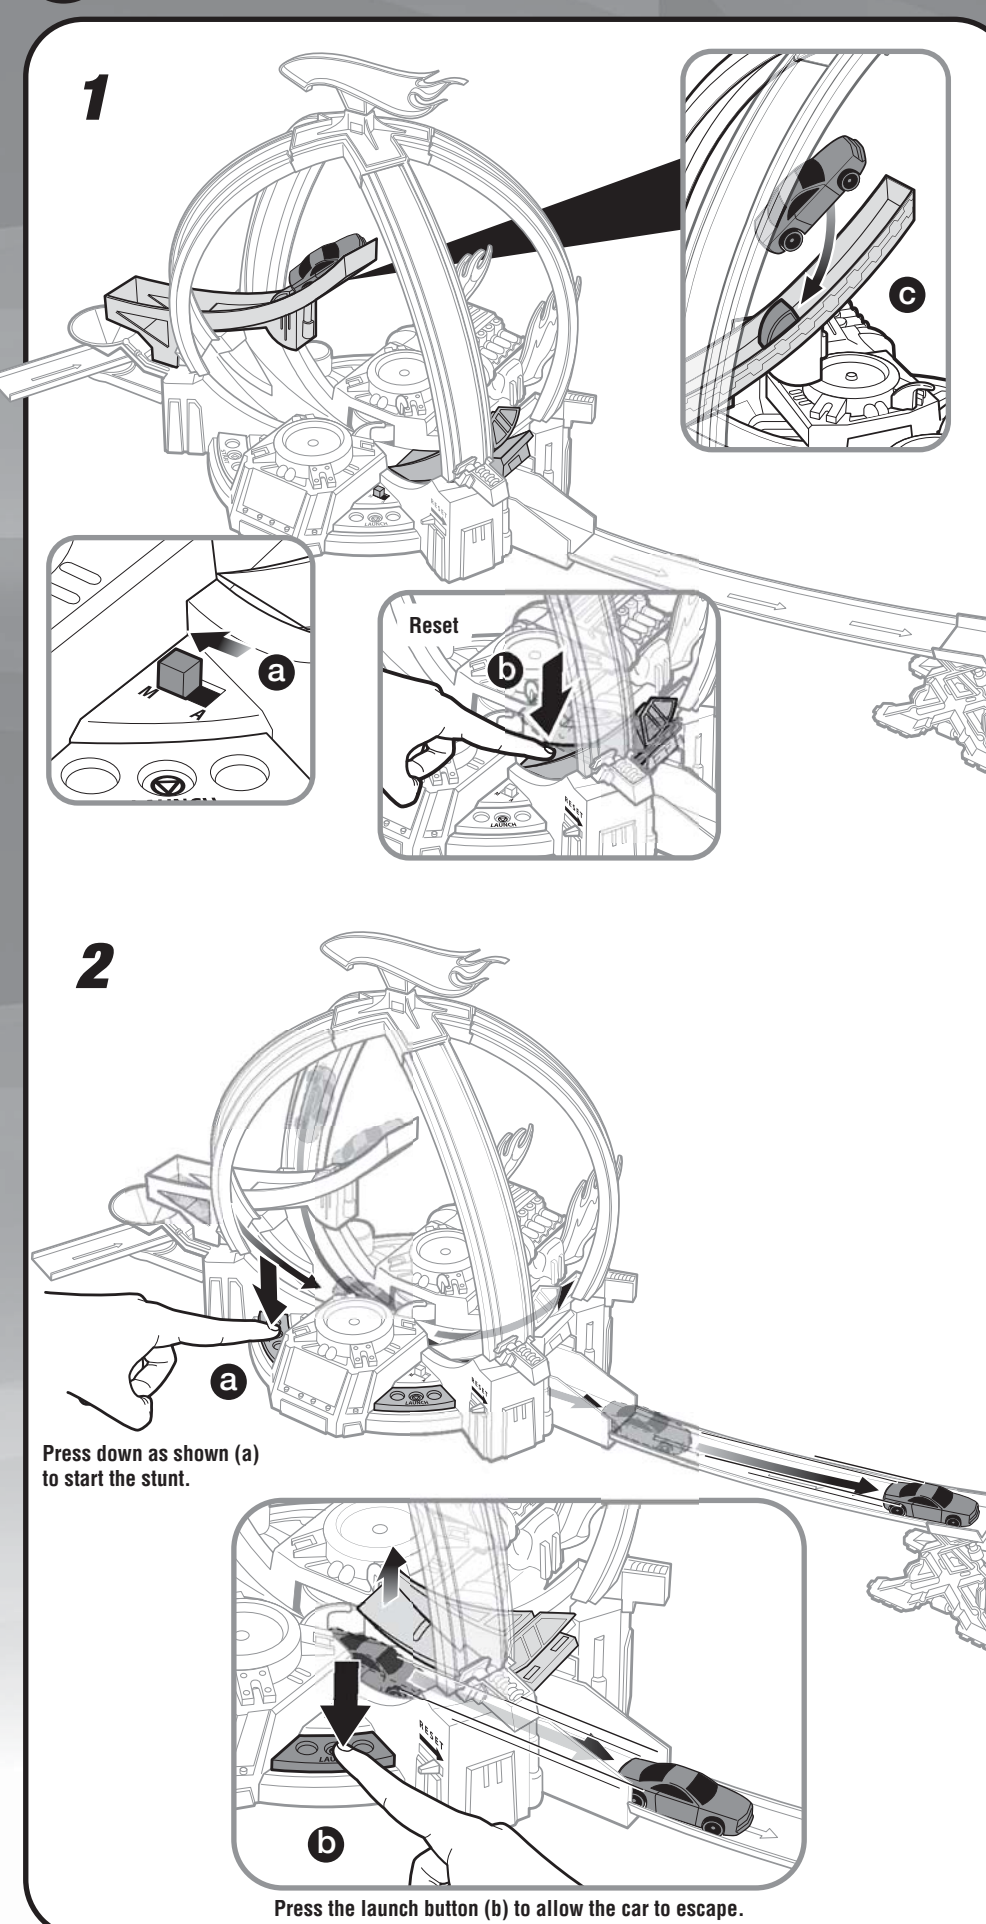


**More Ways To Play**

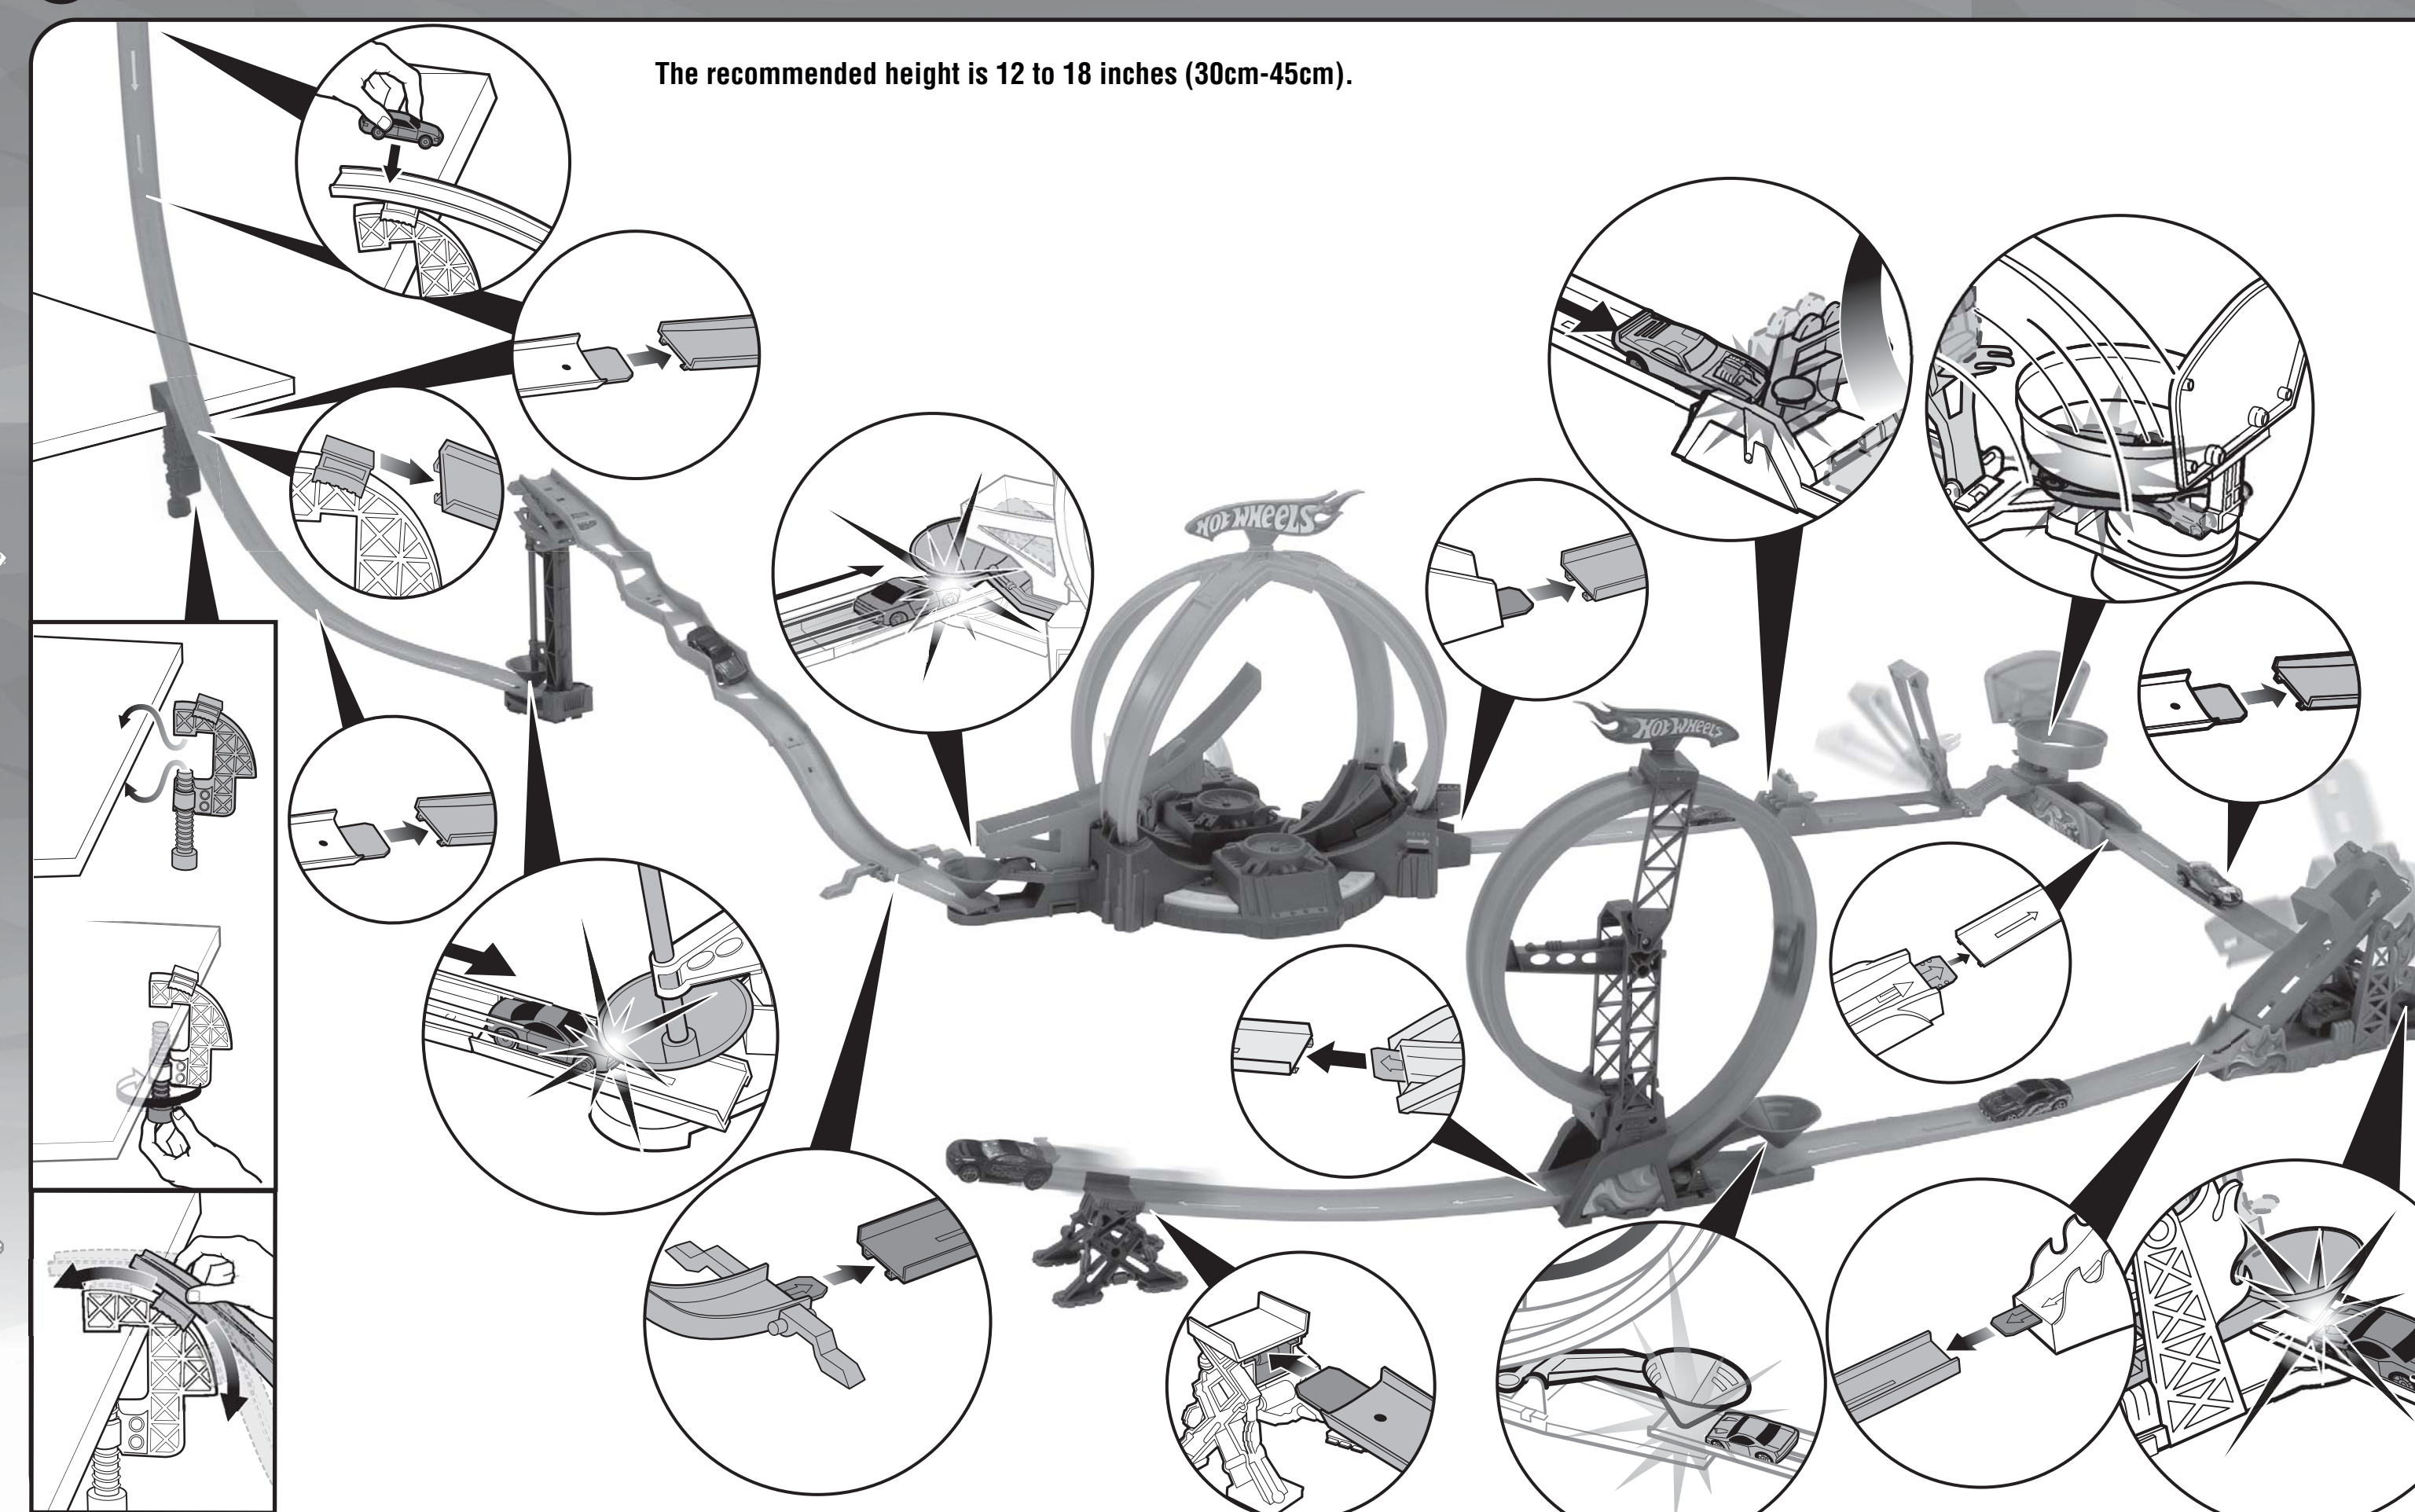

**INSTRUCTION SHEET SPECIFICATIONS**

Title	100
Part No.	30277
Print Date	26.07.11 (1.1)
Printed Size	8.5" X 11.0" (1)
Printed Pages	6 (6 of 6)
Printed Color	Color
Printed Scale	1:1
Printed Units	mm
Printed Language	English
Printed Country	USA

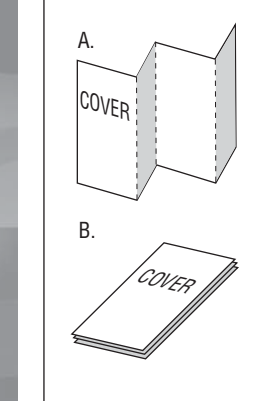

© 2008 Mattel, Inc. All Rights Reserved.  
 Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Relations 1 (800) 524-8697  
 service.mattel.com • Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697.  
 • Mattel U.K. Ltd., Vauxhall Business Park, Watlington Rd., Wolverhampton WV10 0AA, England. Tel: 01902 545000 • Mattel Australia Pty. Ltd.,  
 Richmond, Victoria, 3121 Consumer Advisory Service: 1 800 135 913 • Mattel East Asia Ltd., Room 1106, South  
 Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. • Dimpont & Diardkan Osh: Mattel SEA Pte  
 Ltd. (993332-7) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ,  
 Tel: 03-78932817, Fax: 03-78933867.