

# Fisher-Price®



Please keep this instruction sheet for future reference, as it contains important information.


Requires three "AA" batteries (included).

Adult assembly is required for battery replacement.


Tool needed for battery replacement: Phillips screwdriver (not included).

[www.fisher-price.com](http://www.fisher-price.com)

# Consumer Information



**CONSUMER ASSISTANCE**  
Call toll free: 1-800-432-5437 (US & Canada only)  
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

**service.fisher-price.com**

Write to us at: Fisher-Price® Consumer Relations,  
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,  
please call 1-800-382-7470.

---

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303,  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk)

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.  
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,  
World Finance Centre, Harbour City, Tsimshatsui, HK, China.

## ICES-003

This Class B digital apparatus complies with Canadian ICES-003.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## NMB-003

Cet appareil numérique de la classe Best conforme à la norme NMB-003 du Canada.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

## FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Before First-Time Use

### CAUTION

 
Please keep small parts such as plastic tabs out of children's reach. Throw the plastic tab away.

A plastic tab is attached to the toy for in-store demonstration purposes. While the tab may have already been removed, check the bottom of the toy to be sure. If the plastic tab is still attached, pull and remove the tab from the toy. Throw the plastic tab away.

## Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Please do not take this toy apart.


## Battery Safety Information



In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

# Battery Replacement

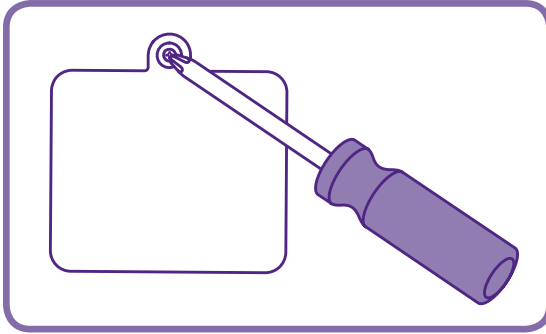

**For best performance, we recommend replacing the batteries that came with this toy with three, new “AA” (LR6) alkaline batteries.**

- Locate the battery compartment on the bottom of the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door. Remove the batteries and throw them away.
- Insert three “AA” (LR6) **alkaline** batteries, as indicated inside the battery compartment.

**Hint:** We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries!



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

# A Laptop Just for Kids!



- Slide the power/volume switch to either **on with low volume** 🔊; **on with high volume** 🔊; or **off** ⏻.
- Press a mode button to choose choose: letters, phonics, numbers, tune maker, games and typing!
- Press the color change button to change the screen color.
- Use the mouse to navigate on the screen. Slide it to the left, right, up or down. "Click" (press) the mouse button to make selections.
- Slide the mouse pad to stow the mouse.

# 6 Modes of Learning Fun!

**Note:** The laptop goes into sleep mode after one minute of inactivity. Press any button or move the mouse to wake it up.



## Letters

- Touch a letter on the keyboard. Listen to the letter spoken, the letter sound and a word that starts with the letter. Look at the screen to see the letter along with a picture of an object that starts with that letter.
- Slide the mouse to hear a musical tune and scroll through the alphabet on the screen.

**Hint:** Press the mode button again to change from lower case to upper case letters.



## Phonics

- It's raining letters! As letters appear on the screen you'll hear its phonic sound. Press the letter on the keyboard to "catch" the letter. Press the correct letter and score a point. Catch all the letters and move up to the next level.



## Numbers

- Slide your mouse to the game you want to play. "Click" the mouse to make your selection.
- **"Let's Count Stars"** - Slide the mouse to "scroll" through the numbers. "Click" the mouse to select a number and count the stars.
- **"Quiz Time"** - Count the number of stars at the top of the screen. Slide the mouse to "scroll" to a number. "Click" the mouse to select your answer.



## Tune Maker

- Press any key on the top row of the keyboard to hear individual notes on the scale.
- Press any of the other keys on the keyboard to hear a short ditty. Press another key to add to your "song".
- Slide the mouse to hear a musical tune and watch the alphabet "scroll" through the screen. "Click" the mouse to hear a short ditty.



## Games

- Slide the mouse left or right to choose a game. "Click" the mouse to make your selection.
- **"Don't Let the Mouse Escape"** - Slide the mouse side-to-side or up and down to stop the ball on screen from "escaping." When you advance to the next level, the ball moves quicker.
- **"Where's the Cheese?"** - Slide the mouse up, down, left or right to move through the maze and find the cheese. Get the cheese and move to a different maze.



## Typing

- Press a letter on the keyboard. Listen to the letter spoken while you type words on the screen!
- Slide the mouse to add spaces or delete letters from the line you are typing on.