

Fisher-Price

N6229

SMARTCYCLE

PHYSICAL LEARNING ARCADE SYSTEM



CONSUMER INFORMATION

 
- Please keep these instructions for future reference, as they contain important information.

GETTING STARTED



- Insert the game cartridge into the socket in the side of the cycle. Push to be sure it's fully inserted.
- Turn your TV or VCR power **on**.
- Slide the power switch on the cycle to **on I**.
- To find the picture on your TV screen, set your TV's or VCR's mode selector to INPUT or VIDEO IN.

CYCLE CONTROLS

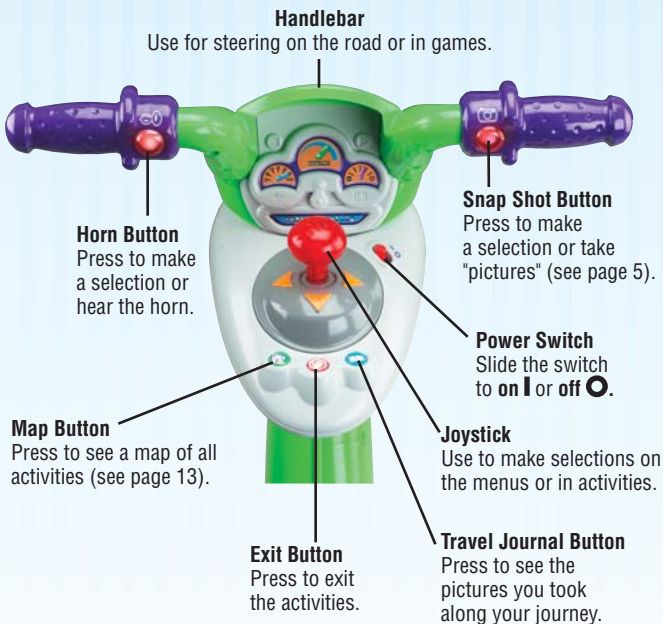



CHOOSE A RIDE



Customize your vehicle!

- Use the joystick to scroll through vehicle choices. Press either handlebar button to make your selection.
- Repeat this process to choose the color and horn for your vehicle.



BACK TO THE ROAD

Object Number



Find the objects.

- Pedal the cycle to move down the road. *The faster you pedal the faster you go!* Use the handlebar to steer.
- Collect the object shown in the upper left corner of the screen. Simply drive into them. Don't bump into the other objects. Look at the number of objects you've collected in the upper left of the screen.



Taking snap shots.

- Press the right handlebar button  to take snap shots (only in this activity).



Off ramps

- Keep traveling down the road or head onto an off-ramp for other fun games and activities. Simply bear to the side of the road as you see one approaching.

Hint: If you miss your ramp, you can pedal in reverse to back up.



MUD MATH



Numbers

Hit the falling mud balls!

- Use the joystick to move the dinosaur into the mudballs.

Level 1 - Hit only mud balls with the number highlighted on the bottom of the screen.

Level 2 - Hit the mud balls in numerical order.

Level 3 - Hit the mud balls in numerical order, counting by 2's.

- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



DINO-SIZE



 
 
Rocks

Learn about different dinosaur sizes!

- Count the rocks on the bottom of the screen to see how big the dinosaur is!
- Pedal the cycle to allow Diego to fly over the dinosaur.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



TIC-TAC DINO

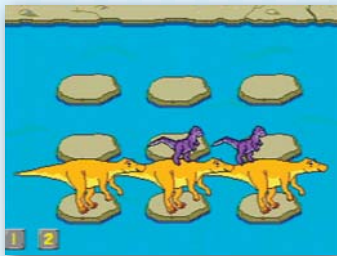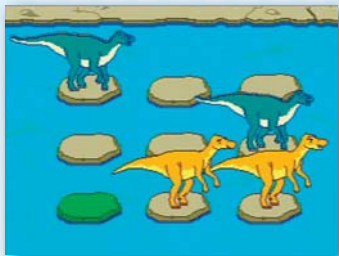

Help baby dinos cross the river!

- Use the joystick to choose a rock. Press a red handlebar button to select the rock and place a dino on it.
- Watch, as the game chooses a rock. You're next, choose another rock.

- Get three dinosaurs in a row (up and down, side to side or diagonal) and you win!
- Count how many baby dinos cross the river.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



THE BIG RACE



Pedal as fast as you can to the finish line!

- Use the joystick to choose *1 Player* or *2 Player* game. Press either handlebar button to select the game.



Star

1 Player

- Pedal down the road as fast as you can to the finish line. Try to speed past the other characters. Get to the finish line first and *you win!*

Hint: Collect stars along the way for a speed boost!



- The player with the fastest time wins.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.

2 Player

- Each player takes a turn. Pedal down the road as fast as you can to the finish line. Look at your time.
- Now it's time for *Player 2* to beat your time.



EGG RESCUE



Help the mommy dinosaur collect her eggs to take back to the nest!

- Use the joystick to move the mommy dinosaur toward an egg.

Hint: Pedal the cycle to move faster.

- Collect as many eggs as you can. Try to collect all 20 eggs! Be careful not to slip in mud or puddles or trip on a log.



Flower

- Eat flowers along the way for a speed boost.
- Look at your score on the screen!
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



PREHIS-SORTING



Help Dora sort the objects.

- Listen as Dora tells you how to sort the objects: biggest to smallest, tallest to shortest, etc.
- Look at the bottom of the screen. Use the joystick to choose an object. Press a red handlebar button to select the object and put it in place.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



BONUS ACTIVITY



Move like a dinosaur!

- Complete all the activities to unlock the bonus activity.
- Pedal the cycle to jump and roar like a real dinosaur!
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



TRAVEL JOURNAL



**See previous
snap shot**

**See next
snap shot**



 
Stamp Tool Erase

- Press the travel journal button . Then use the joystick and handlebar buttons to review and select a snap shot.

- Next, use the joystick and handlebar buttons to select the stamp tool  to decorate your picture.
- Choose a stamp with the joystick and handlebar buttons and place it on the snap shot.
- Select the erase button  to clear the screen and decorate another picture.



THE MAP

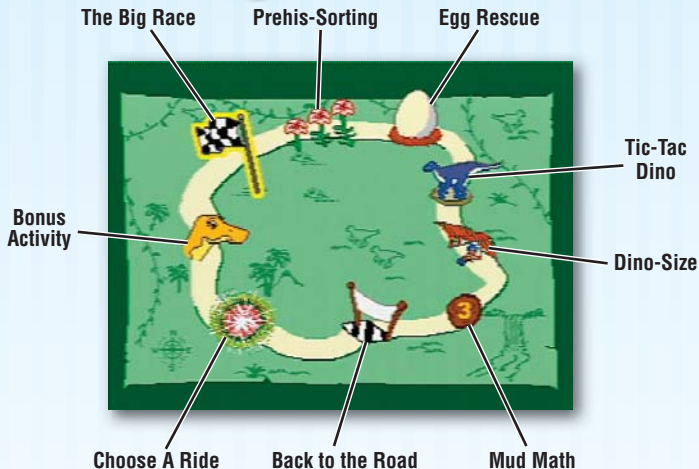

- You can travel down the road and head onto an off-ramp to access activities or simply press the map button  to visit any of the activities around the course.

CARE

- Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.
- This product has no consumer serviceable parts. Do not take this product apart.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

CONSUMER INFORMATION

VISIT US ON LINE AT
WWW.SERVICE.FISHER-PRICE.COM

Call our Consumer Relations Department, toll-free at **1-800-432-5437**,
9 AM - 7 PM EST Monday through Friday and 11 AM - 5 PM EST Saturday.
Hearing-impaired consumers using TTY/TDD equipment, please call
1-800-382-7470. Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.
Helpline: 01628 500303. www.service.mattel.com/uk

For countries outside the United States:

CANADA: Questions? 1-800-432-5437. Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

 
 
AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870,
Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre,
Harbour City, Tsimshatsui, HK, China.

Stretch your mind with other software titles for your Smart Cycle™!

Each sold separately and subject to availability.

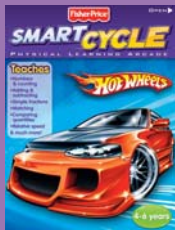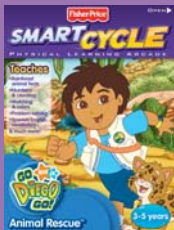

©2008 Viacom International, Inc. All Rights Reserved. Dora the Explorer, Go Diego Go, SpongeBob SquarePants and all related titles, logos and characters are trademarks of Viacom International, Inc. SpongeBob SquarePants created by Stephen Hillenburg.

SCOOBY-DOO and all related characters and elements are trademarks of and © Hanna-Barbera.



WB SHIELD: TM & © Warner Bros. Entertainment Inc.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A. ©2008 Mattel, Inc. All Rights Reserved.
® and ™ designate U.S. trademarks of Mattel, Inc., unless otherwise indicated.

www.fisher-price.com

PRINTED IN CHINA

N6229pr-0920