

Fisher-Price®

www.fisher-price.com

N8853

Please keep this instruction sheet for future reference, as it contains important information.

Requires six "AA" (LR6) **alkaline** batteries (not included) for car operation.

Adult assembly is required.

Tool required for battery installation:
Phillips screwdriver (not included).

This product is not recommended for use on loose dirt or wet surfaces.




SHAKE & GO! SPEEDWAY

Actual product may vary from the photos.


Assembly

Each track piece has a number on the bottom. Simply match the numbers and fit the pieces together!



Hint: For best performance, we suggest assembling the track on a hard, flat surface.

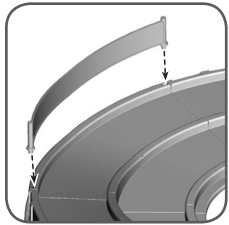


Fit the banner sign into the matching holes on the track.

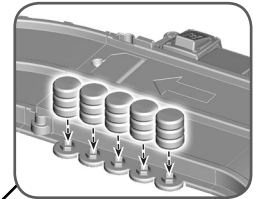

Fit the barrels onto the track.

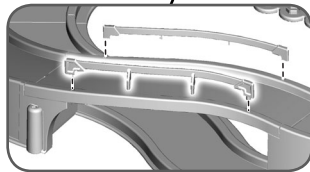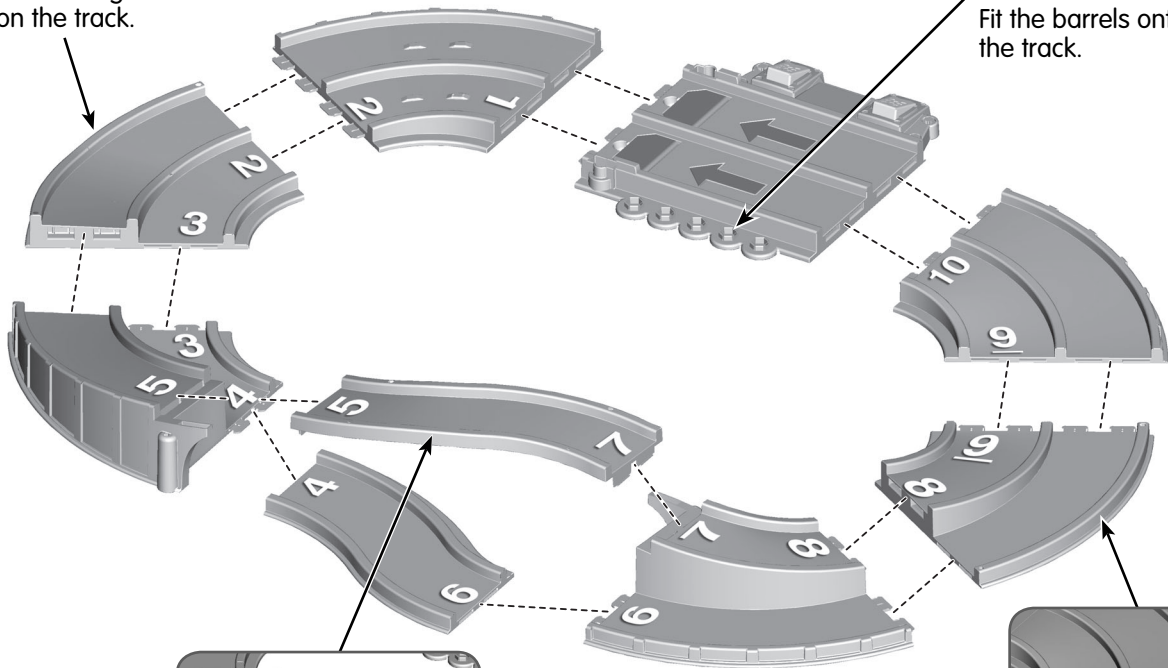


Fit the guard rails into the matching holes on the track.

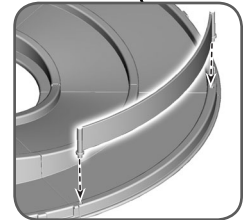

Fit the banner sign into the matching holes on the track.

Battery Installation

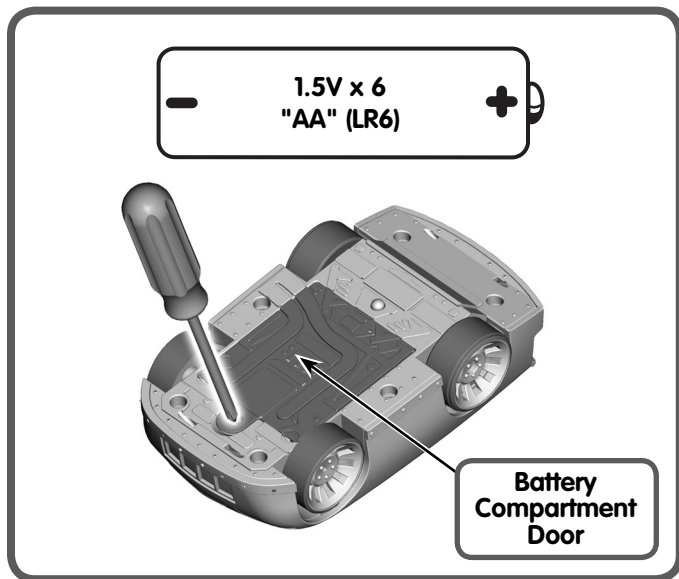

- Locate the battery compartment door on the bottom of each car.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "AA" (LR6) **alkaline** batteries.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- If the toy begins to operate erratically, you may need to reset the electronics. Slide the power switch off and then back on.
- When sounds or motions from the car become faint or stop, it's time for an adult to change the batteries!



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product.

To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Just For Fun!

1



- Slide the power switch on the bottom of each car ON ●.

2



- Lift the car and shake it to start the "engine" and the sound effects.

Hint: For maximum distance, shake the car 7 or 8 times. Shaking more than this does not increase the distance it will travel.

3



- Set the car on the track and watch it go. Fun sound effects add to the excitement!
- When your car stops, pick it up, shake it and set it down again to restart.
- When you're finished playing, slide the power switch on each car OFF ○.



Race to Win!

1



- Slide the power switch on the bottom of each car ON ●.


2



- Lift the car and shake it to start the "engine" and the sound effects.

Hint: For maximum distance, shake the car 7 or 8 times. Shaking more than this does not increase the distance it will travel.

3

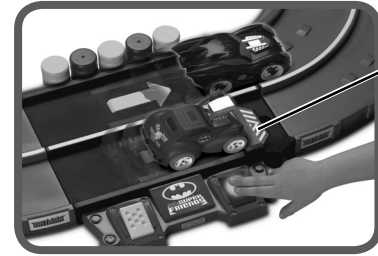


Starting Gate

- Lift the both starting gates on the track.
- Set the cars on the arrows behind the starting line.
- When both cars are ready, press the pedal and you're off.
- When your car stops, pick it up, shake it and set it down again to rejoin the race.
- When you're finished playing, slide the power switch on each car OFF ○.

Hint: You can also race your cars on any smooth, flat surface. Shake the car, set it down and let it go. The car travels up to 20 feet!

Consumer Information



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB, Helpline: 01628 500303,
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

ICES-003

- This Class B digital apparatus complies with Canadian ICES-003.
- Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.



DC SUPER FRIENDS and all related characters and elements are trademarks of and © DC Comics.

WB SHIELD: TM & © Warner Bros. Entertainment Inc.

Fisher Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2008 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.