

**Fisher-Price®**




Please keep this instruction sheet for future reference,  
as it contains important information.

Adult assembly is required.


Requires six "AA" alkaline batteries (not included).

Tool required for battery replacement: Phillips screwdriver (not included).

# Assembled Parts

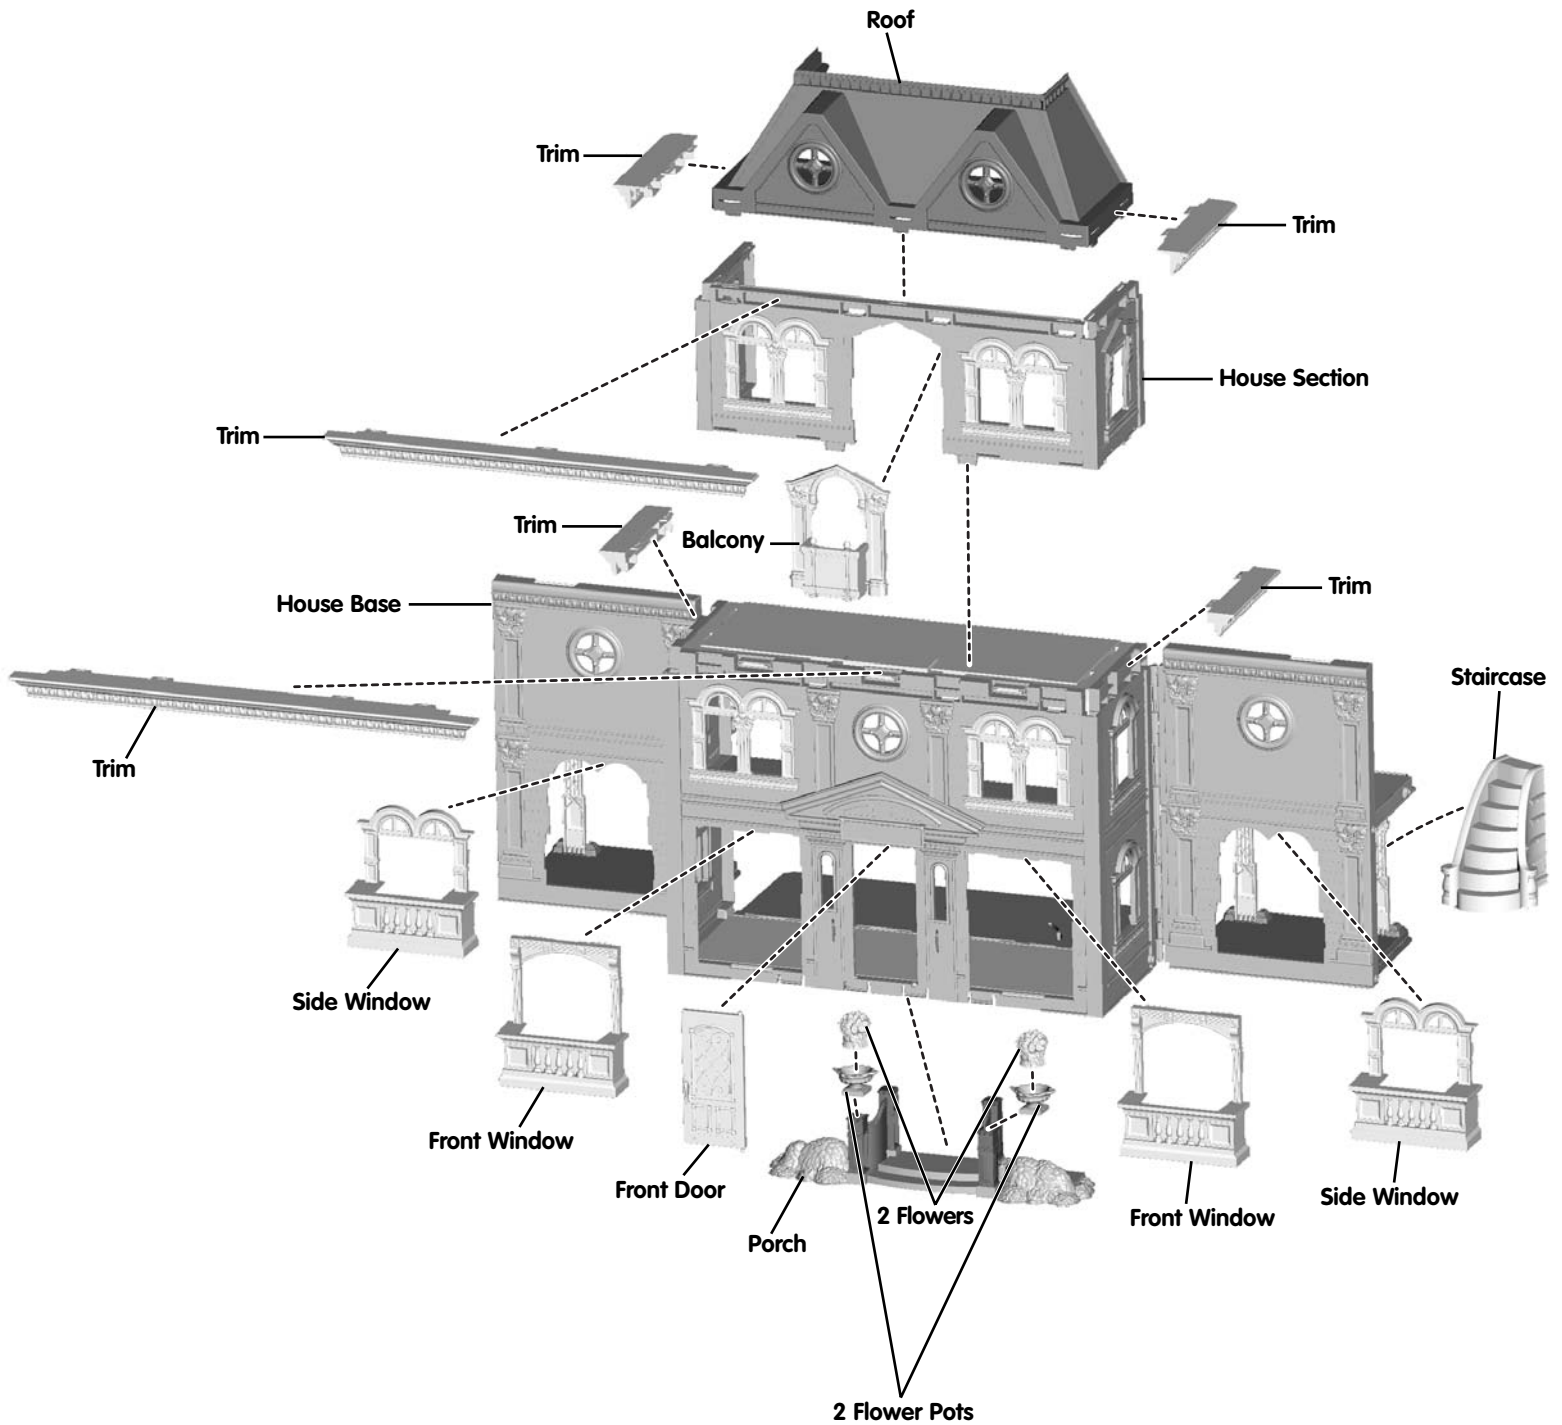

## Battery Installation

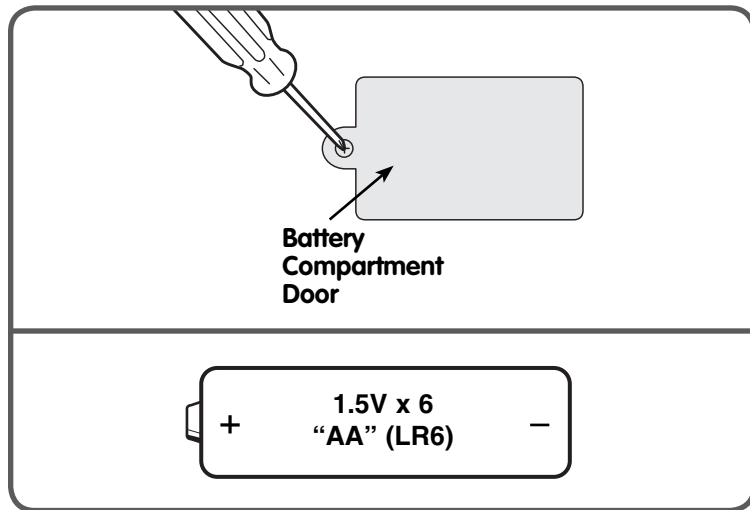

- Locate the battery compartment door on the back of the kitchen and the nursery.
- Loosen the screw in each battery compartment door with a Phillips screwdriver. Remove each battery compartment door.
- Insert three, "AA" (LR6) **alkaline** batteries in each toy.

**Hint:** We recommend using **alkaline** batteries for longer battery life.

- Replace each battery compartment door and tighten each screw with a Phillips screwdriver. Do not over-tighten.
- If the toy begins to operate erratically, you may need to reset the electronics. Remove the batteries and reinsert them in the toy.
- When sounds or lights from these toys become faint or stop, it's time for an adult to change the batteries!




- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

## Battery Safety Information


In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.


# Assembly

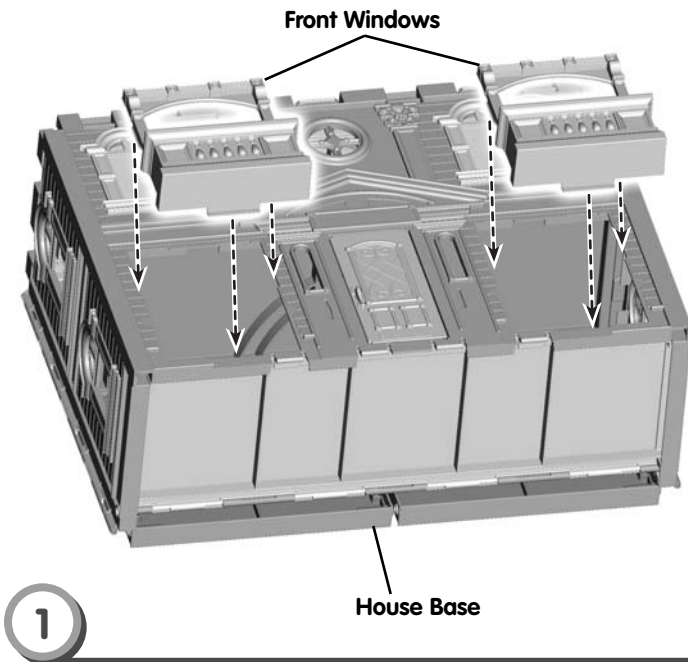


- Place the house base on a flat surface so that the front of the house faces up.
  - **"Snap"** a front window to the house on each side of the front door.
- Hint: Press down at each tab to be sure each "snaps" into place.*

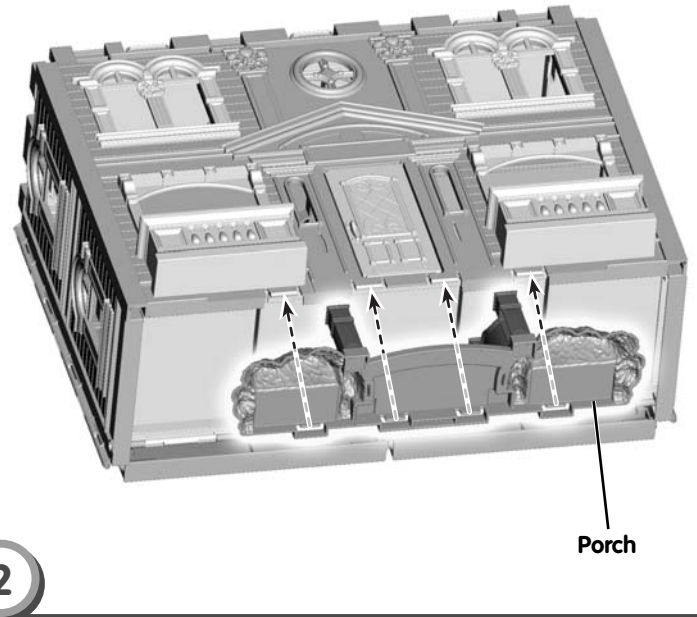

- **"Snap"** the porch to the bottom of the house.
- Hint: Press near each tab to be sure each "snaps" into place.*

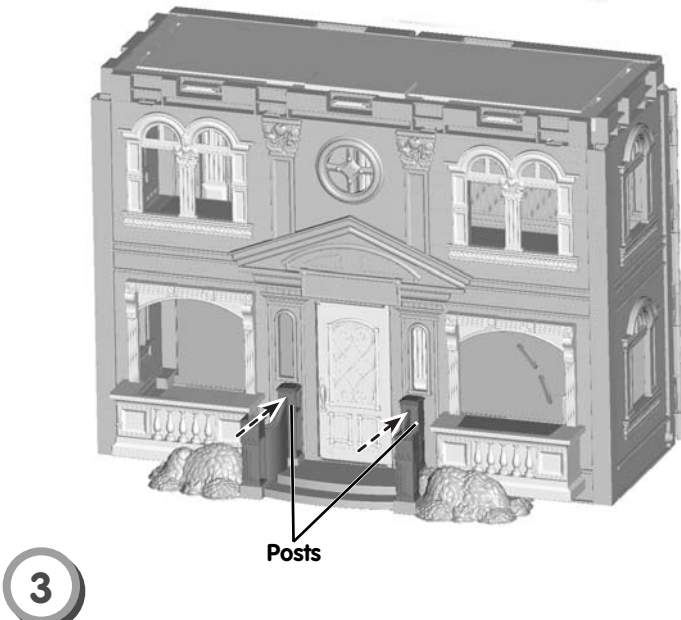

- Lift the house upright.
- Push the posts on each side of the porch until they **"snap"** into place.

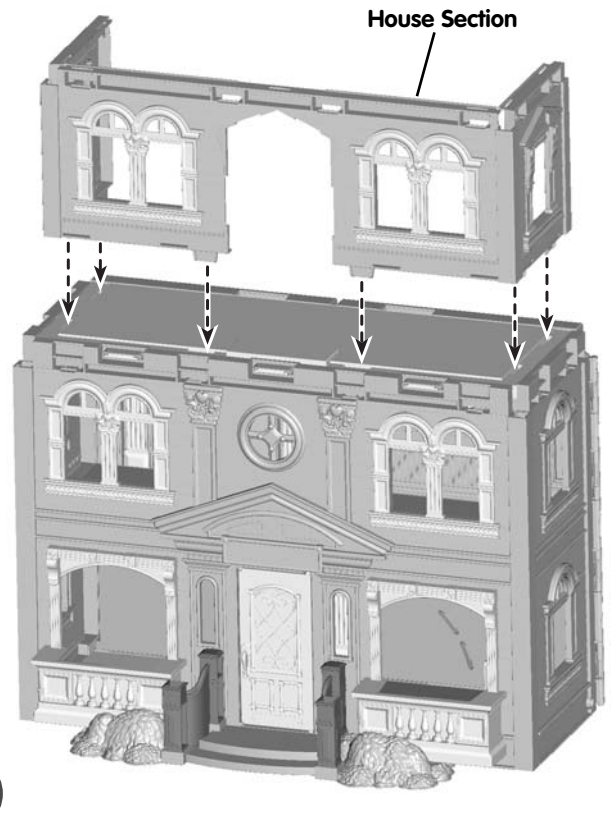

- **"Snap"** the house section onto the top of the house.
- Hint: Press down at each tab to be sure each "snaps" into place.*




# Assembly



5

• **"Snap"** the roof onto the top of the house.


*Hint: Press down at each tab to be sure each "snaps" into place.*

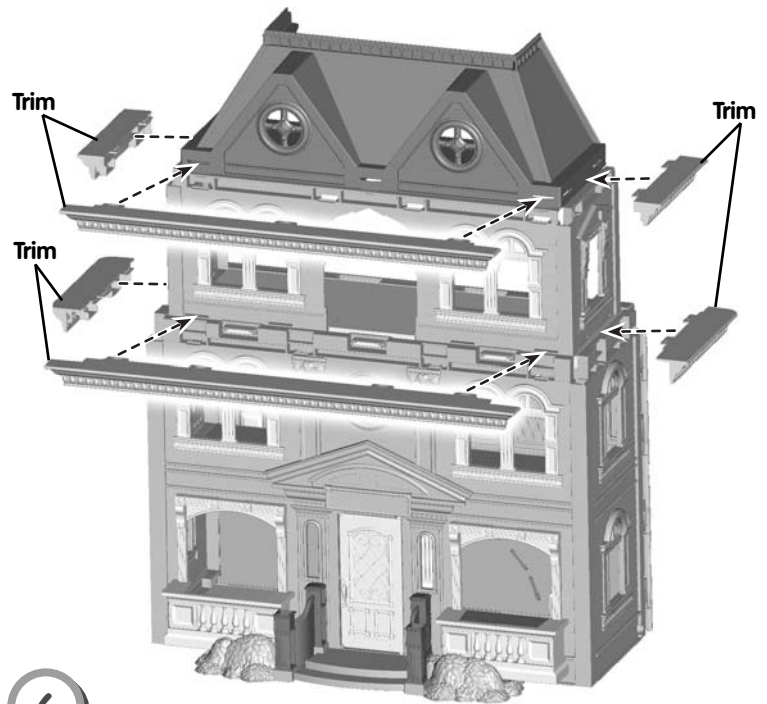

6

• **"Snap"** the trim (six pieces) onto the house as shown.


*Hint: Each trim piece will only fit on the house one way. If a trim piece does not fit, try another piece. Press at each tab to be sure each "snaps" into place.*

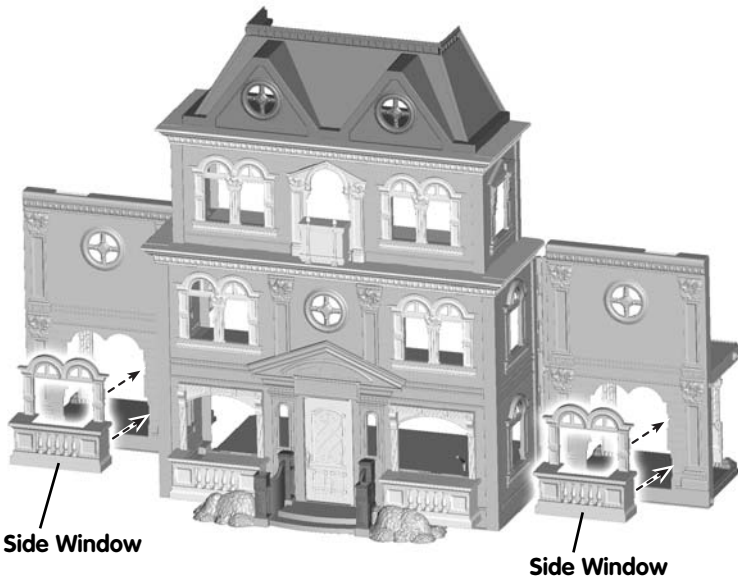

9

• **"Snap"** both side windows onto each side of the house.


*Hint: Press at each tab to be sure each "snaps" into place.*

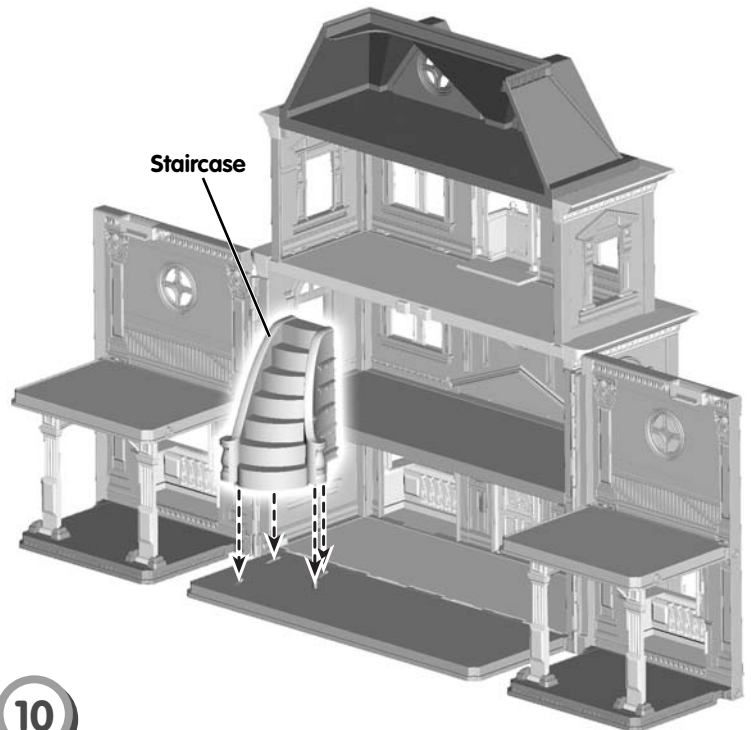

10


• **"Snap"** the staircase into the living room floor.

# Assembly

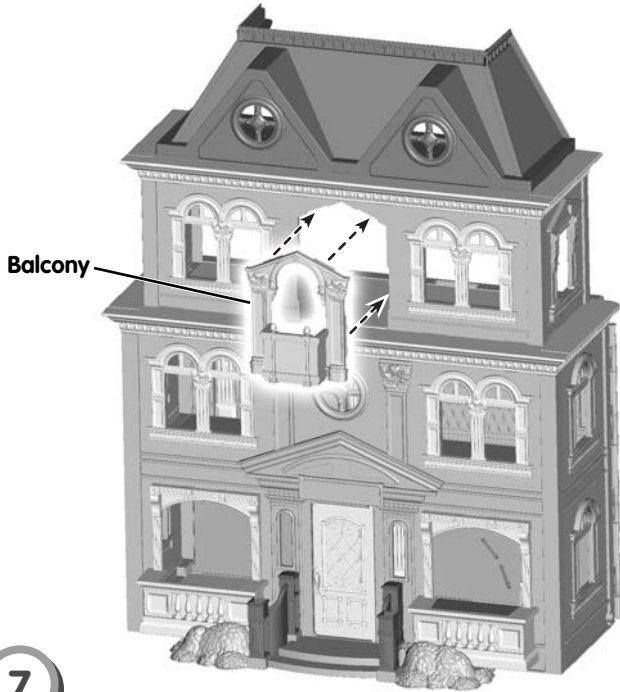


7

- **"Snap"** the balcony to the opening near the top of the house.  
*Hint: Press at each tab to be sure each "snaps" into place.*

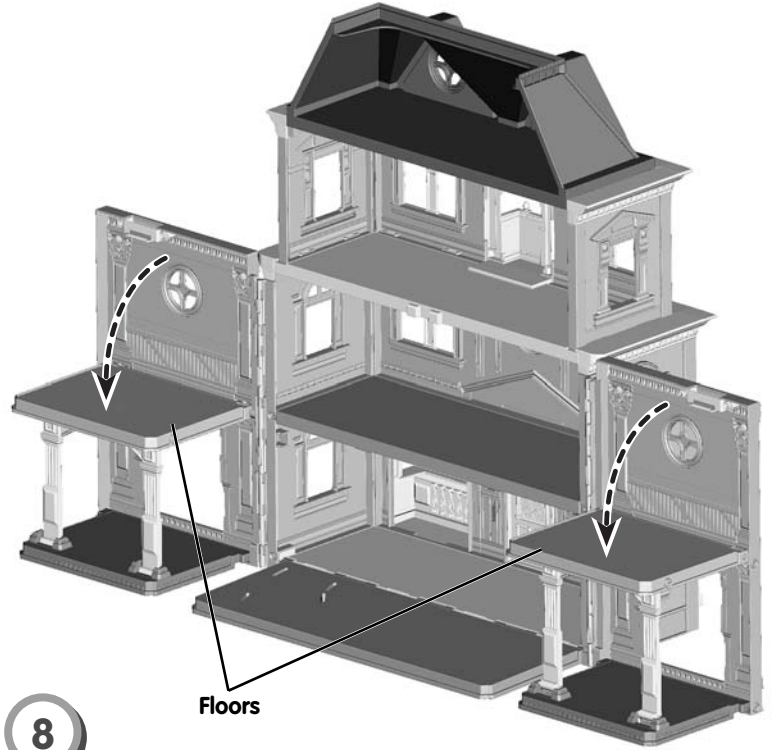

8

- Pull down the floors on the side panels of the house.

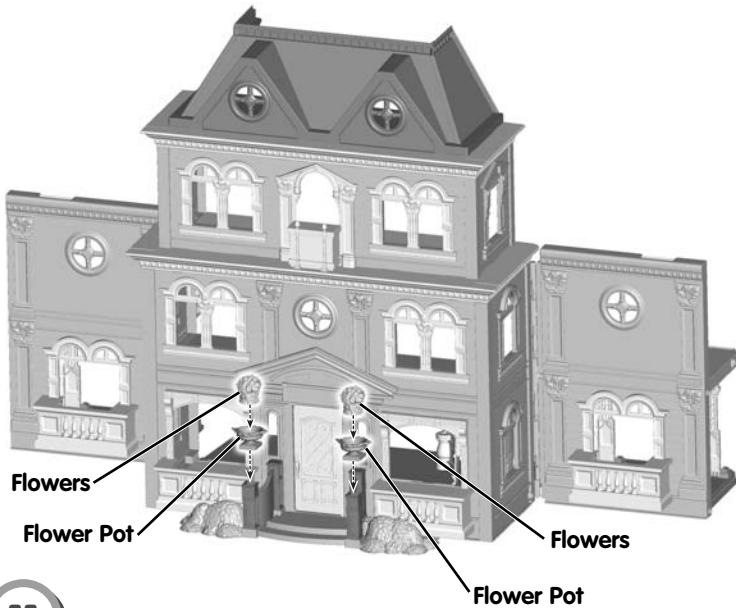


11

- Put the flowers into the flower pots. Then, place the flower pots onto the posts on the front porch.


# Fun Sounds and Lights!

## Kitchen

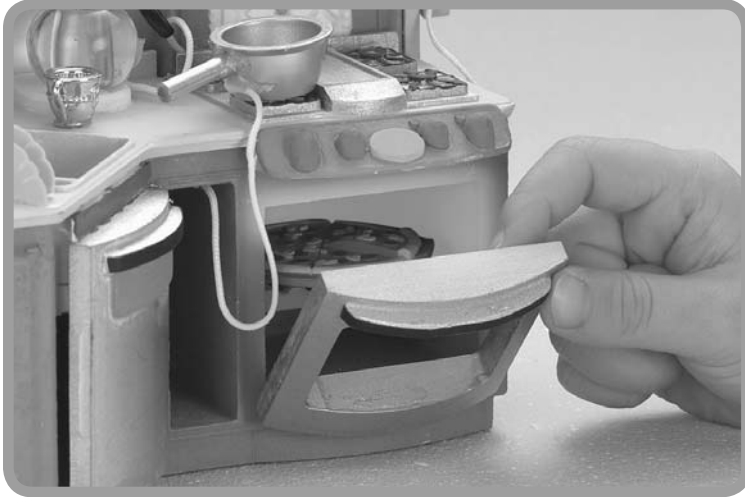

- Press the button on the stove or open the oven door to hear fun sound effects!

## Nursery

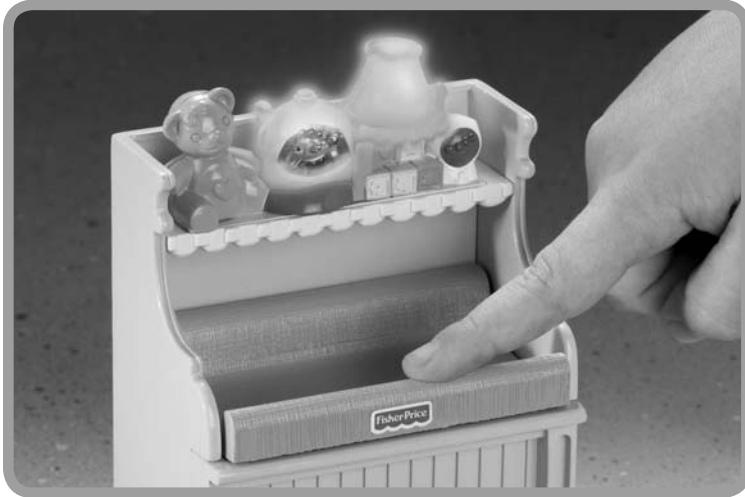

- Press the changing table for music and soft lights.

# FCC Statement

## United States Only

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: this device may not cause harmful interference and this device must accept any interference received, including interference that may cause undesired operation.

## ICES-003

- This Class B digital apparatus complies with Canadian ICES-003.
- Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## NMB-003

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

## Consumer Information



### CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)  
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

 **service.fisher-price.com**

Write to us at: Fisher-Price® Consumer Relations,  
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,  
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk)

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.  
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,  
World Finance Centre, Harbour City, Tsimshatsui, HK, China.

### Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.

## Storage



- Place all accessories inside doll house.
- Fold up the floors on the side panels and close the doll house for easy storage.