

Fisher-Price®



www.fisher-price.com

Consumer Information



WARNING

To prevent entanglement injury, never place gym in a crib or playpen. Never add strings, ties or other products to the gym.



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Varwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk


Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.


New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

- Please keep this instruction sheet for future reference, as it contains important information.
- Adult assembly is required.
- No tools required for assembly.


Parts

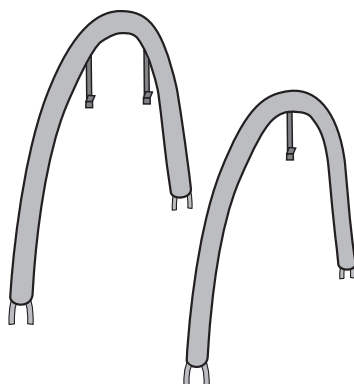

2 Tubes

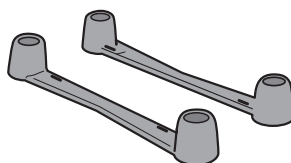


2 Supports

 

2 Hanging Toys





Inflatable Ball

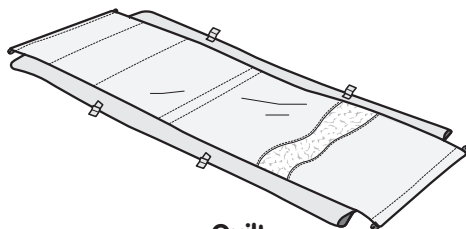


Quilt

Overhead Gym

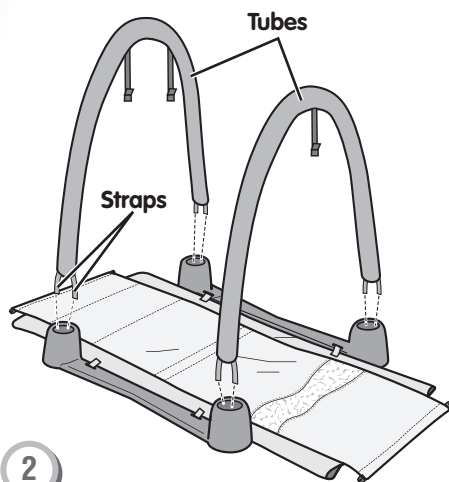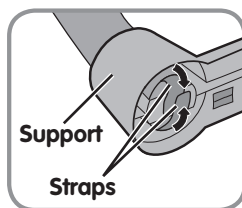

2

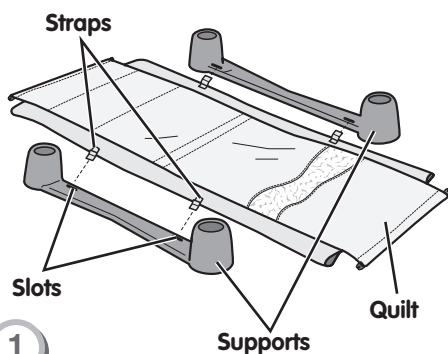


1


- Place the quilt, print side up, on a flat surface.
- Fit the "T" end of each strap on the quilt through the slots in the supports. Pull up on the quilt to be sure it is secure.

- Locate both straps on the bottom of one of the tubes.
- Fit the ends of each strap into the support post.
- Turn the support over and fasten the straps.
- Repeat this procedure to attach the remaining tube ends to the supports.

Convert for Tummy-Time Play


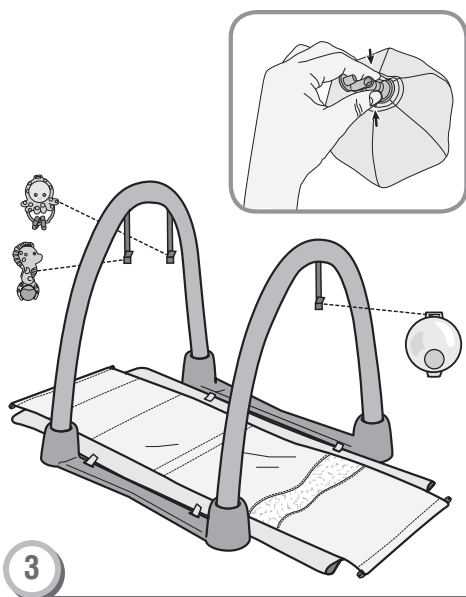


- Squeeze the stem to inflate the ball.
- Fasten the toys and inflatable ball to the straps on the arches.

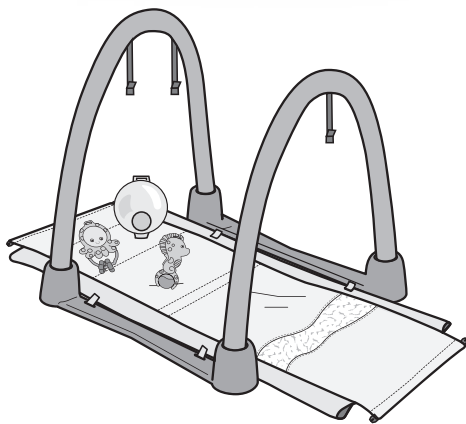


- Remove the toys and inflatable ball from the straps on the arches.
- Place the toys on the quilt for baby.

Crawl-Through Fun

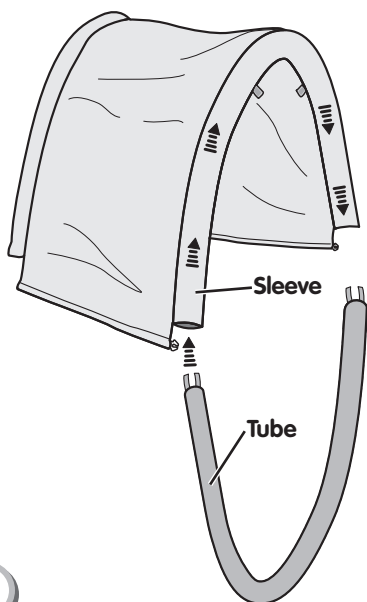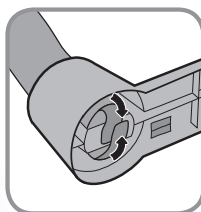

1

- Slide each tube through the sleeve in each side of the quilt.

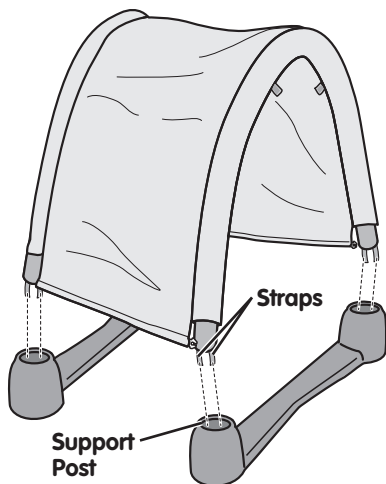


2

- Position the supports so the slots are facing inward.
- Locate both straps on the bottom of one of the tubes.
- Fit the ends of each strap into the support post.
- Turn the support over and fasten the straps.
- Repeat this procedure to attach the remaining tube ends to the supports.


Care

- Machine wash the play quilt in cold water on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- Surface wash the tubes, toys, ball and supports with a mild cleaning solution and damp cloth. Do not use bleach. Rinse clean to remove residue.

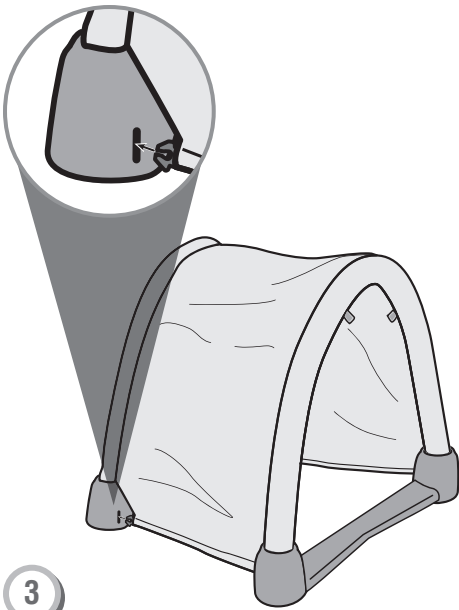

3

- Fit the plastic tabs on each end of the quilt into the slots in the supports.

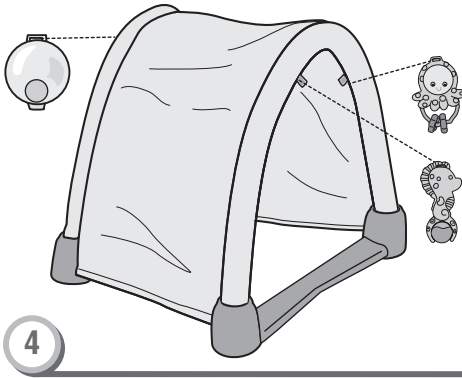

4

- Attach the toys and the ball to the fasteners on the sleeves.