



Please keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required.

Tool required for assembly: Phillips screwdriver (not included).


Bins sold separately and subject to availability.

Assembled Parts



CAUTION


This package contains small parts in its unassembled state.
Adult assembly is required.

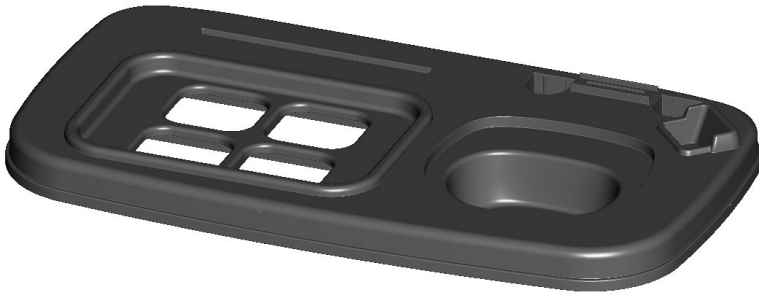


Countertop




Small Shelf

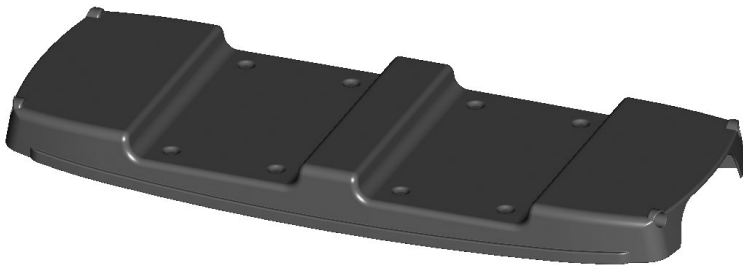


Large Shelf

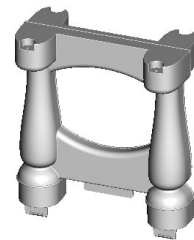


Small Shelf Support

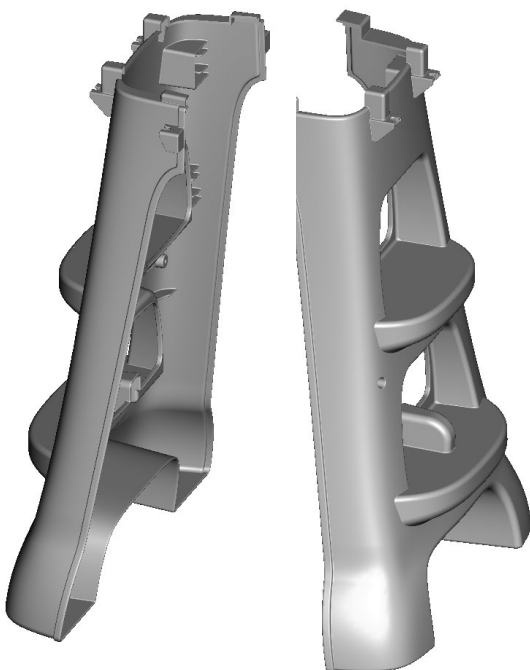

2 Legs

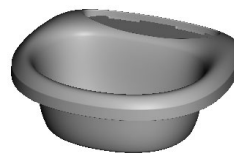

Sink

 

Faucet




#6 x 5/8" Screw – 16

Shown Actual Size


Tighten all screws with a Phillips screwdriver.
Do not over-tighten.

Assembly

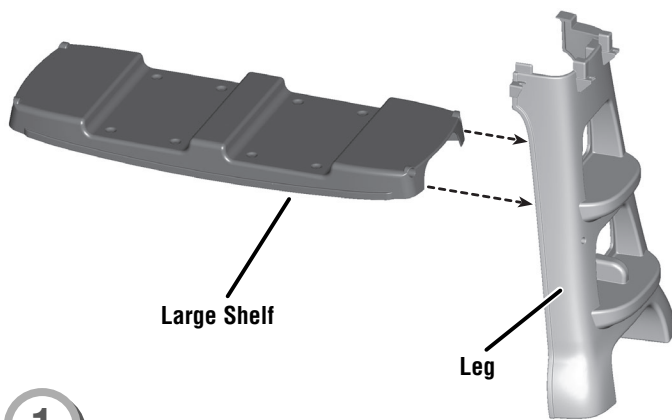


1

- Position the large shelf as shown and fit an end into the groove in a leg.

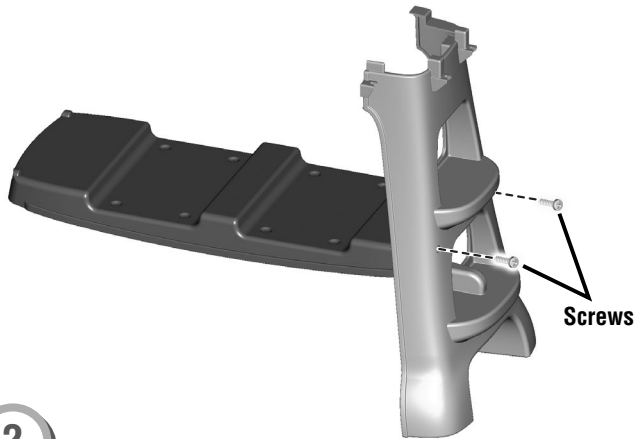


2

- Insert two screws into the holes in the outside of the leg and tighten.
- Repeat this procedure to assemble the other leg to the large shelf.

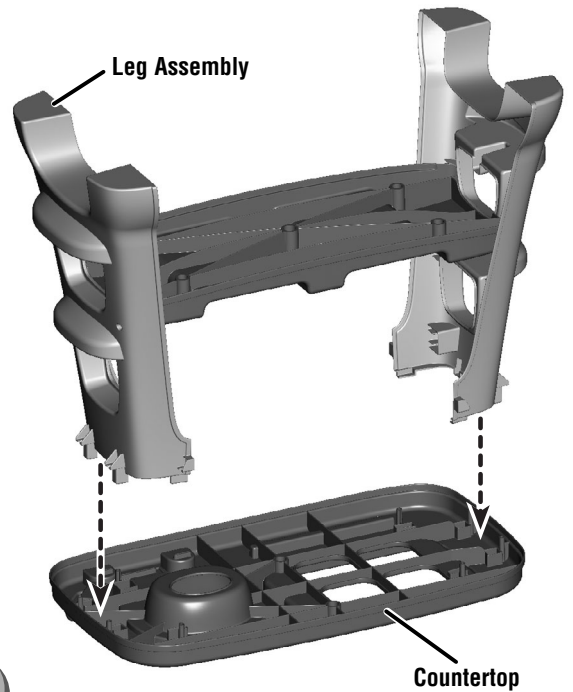

3


- Turn the countertop over on a flat surface..
 - Fit the leg assembly into the countertop.
- Hint:** The leg assembly is designed to fit into the countertop one way. If it does not seem to fit, turn it around and try again!

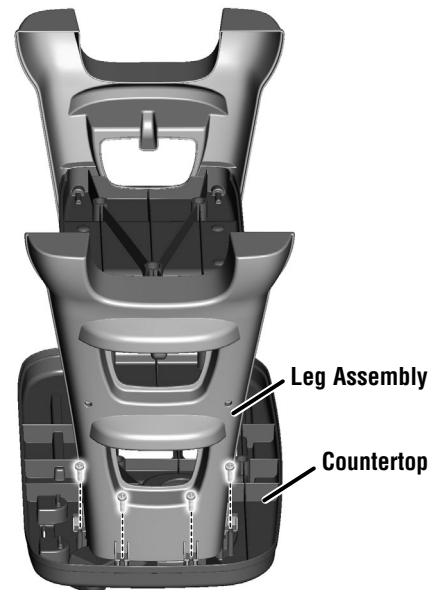

4


- Insert four screws into the leg assembly on one side of the countertop and tighten.

Assembly

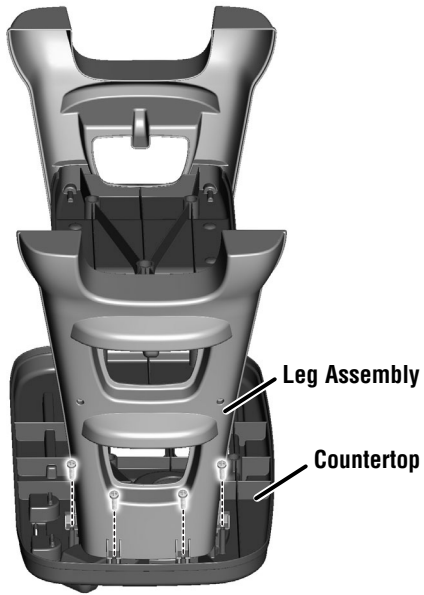


5

- On the other side of the assembly, insert four more screws into the leg assembly and tighten.
- Turn the assembly upright.

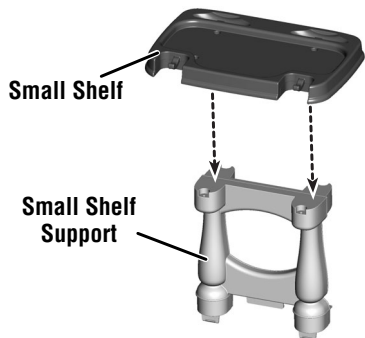


6

- Fit the small shelf onto the small shelf support.

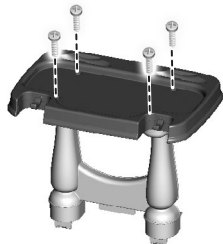


7

- Insert four screws into the small shelf and tighten.

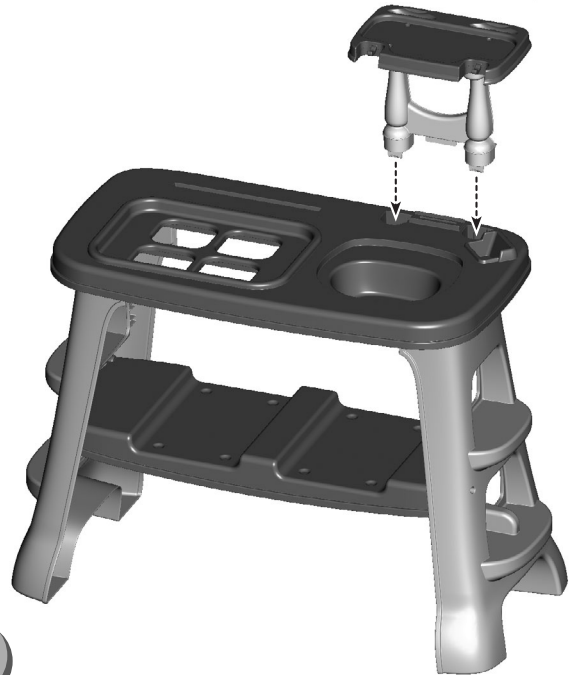


8

- Fit the small shelf assembly into the slots on the countertop.
- Push to “snap” in place.

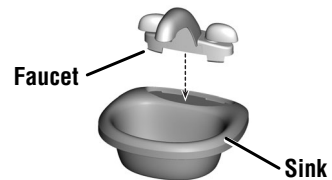

9


- Fit the faucet into the sink, as shown.
- Push to “snap” in place.

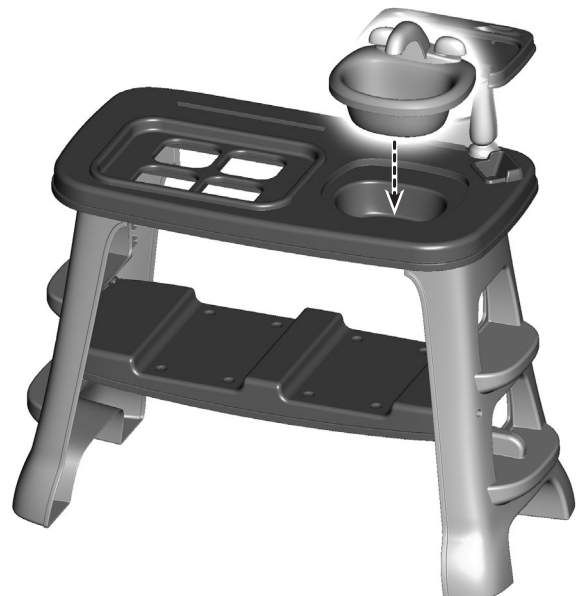

10

- Place the sink into the opening on the countertop.

Customizable Play Center

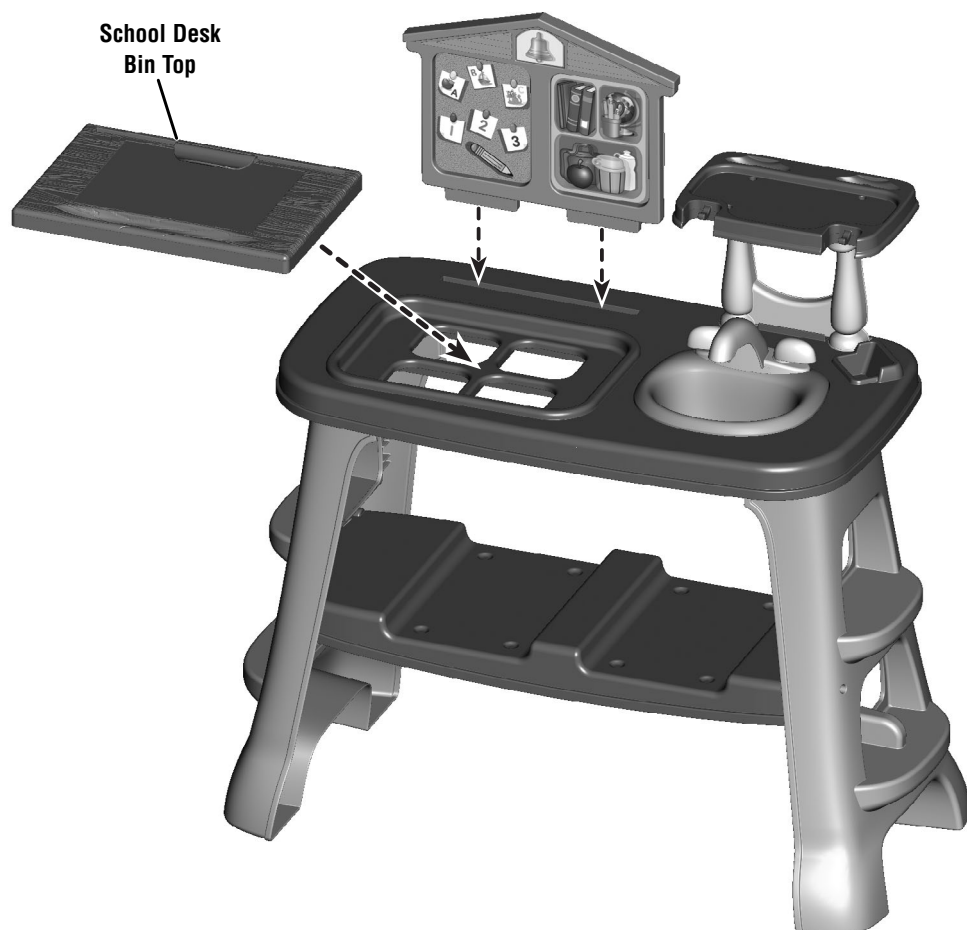

Kitchen



Doctor



Baby



Workshop

Set up Your Play Center

- The play center comes with a school house wall and school desk bin top. Fit the school house wall into the slot in the back edge of the countertop. Fit the school desk bin top over the opening in the countertop.
- You can purchase other themed bins separately - each with a different wall, bin top and accessories. Bins sold separately and subject to availability.

Storage



- “Snap” the school house wall onto the underside of the school desk bin top.



Bin Storage

- Store the bins (sold separately and subject to availability) on and under the shelf!

Consumer Information



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB, Helpline: 01628 500303,
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.