



Tummy Time Fun



Sit & Play



Overhead Gym


Please keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required.


Requires three LR44 button cell batteries (included).

Tool required for battery replacement:
Phillips screwdriver (not included).


Assembled Parts

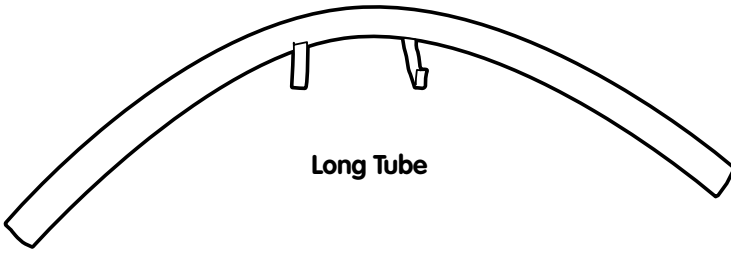

Long Tube

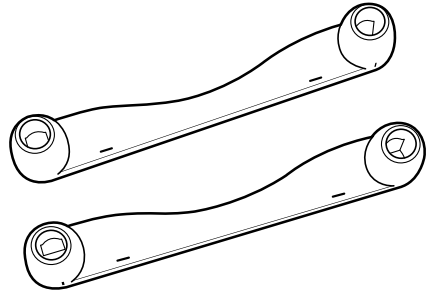

Supports

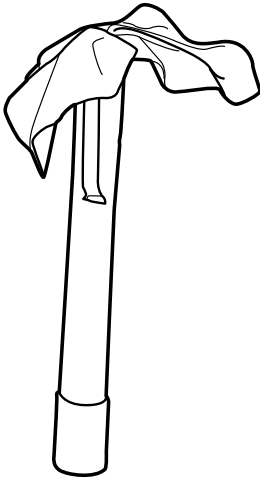


Palm Tree




Giraffe



Musical Toy


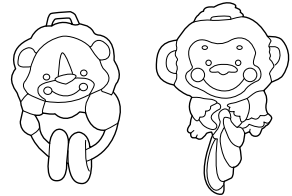


2 Hanging Toys

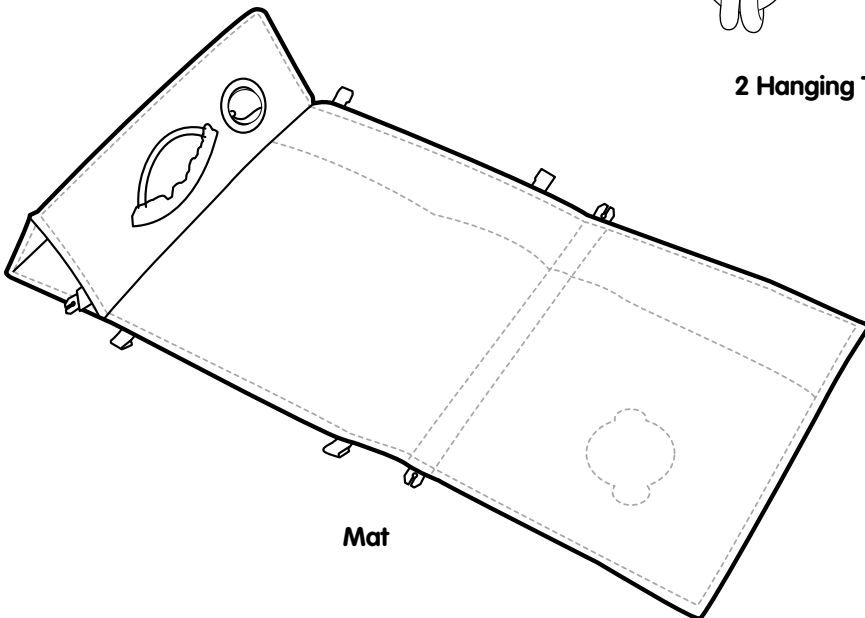

Mat

Battery Replacement

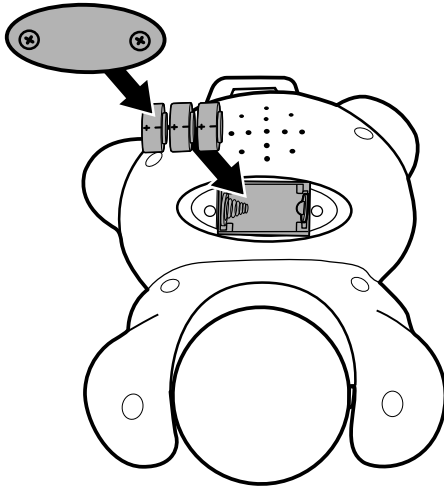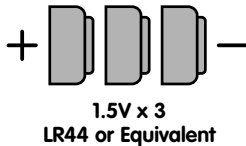

- Locate the battery compartment door on the back of the musical toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three button cell (LR44) **alkaline** batteries, as indicated inside the battery compartment.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- If this product begins to operate erratically, you may need to reset the electronics. Remove the batteries and replace them.
- When sounds become faint or stop, it's time for an adult to change the batteries!




- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information


In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.


Assembly

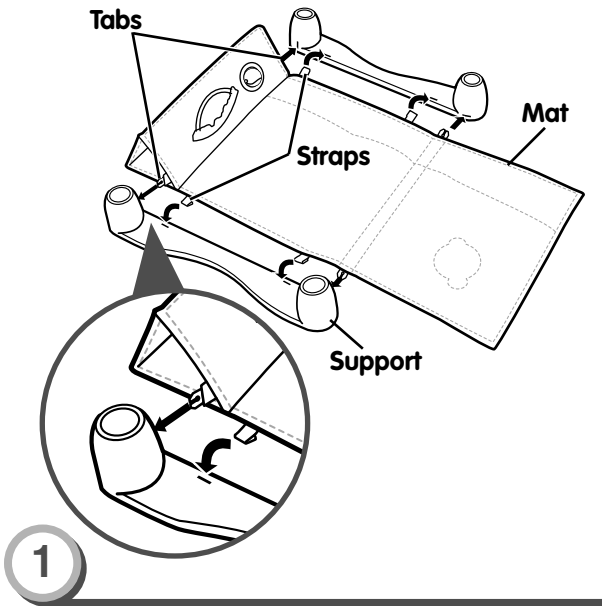


- Place the mat, print side up, on a flat surface
- Fit both straps on each side of the mat down through the slots in the supports. Make sure the tab on the end of the strap forms a "T" under the support.
- **"Snap"** both tabs on the mat into the slots in the support.
- Pull up on the mat to be sure it is secured to the supports.

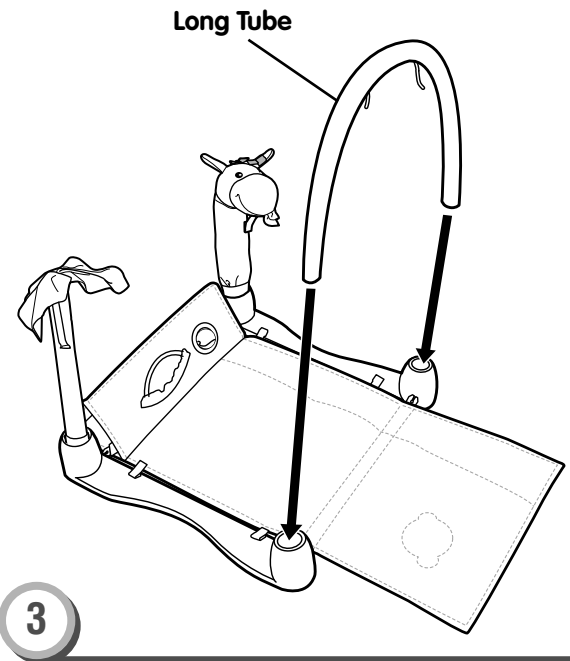

- Fit the ends of the long tube into the openings in the supports, as shown.

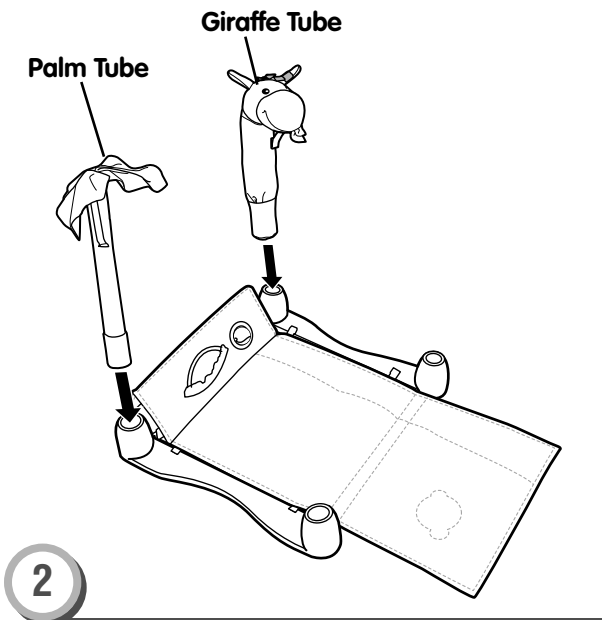

- Fit the palm tube and the giraffe tube into the openings in the supports, as shown.

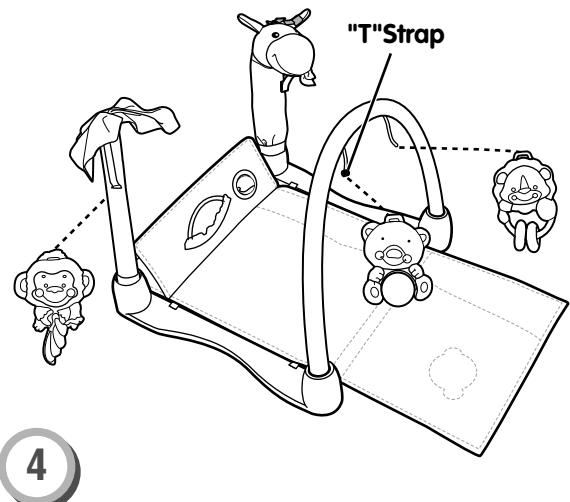

- Fit the "T" strap on the arch and the tubes through the slots on the hanging and musical toys. Make sure the tab at the end of the strap forms a "T" through the slot.

Musical Fun!



WARNING

To prevent entanglement injury, never place the gym in a crib or playpen.
Never add strings, ties or other products to the gym.

Spin the roller for fun music!



Consumer Information



CONSUMER ASSISTANCE
Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: [Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB, Helpline: 01628 500303,
\[www.service.mattel.com/uk\]\(http://www.service.mattel.com/uk\)](http://Mattel_UK_Ltd_Vanwall_Business_Park_Maidenhead_SL6_4UB_Helpline_01628_500303)

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Mat Care

- Remove the tubes and supports from the mat.
- Machine wash the mat inside a pillow case in cold water on the gentle cycle. Do not use bleach. Line dry the mat.

Tube, Support and Activity Toy Care

- Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.

ICES-003

- This Class B digital apparatus complies with Canadian ICES-003.
- Operation is subject to the following two conditions:
(1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003

- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.
- L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.