



IMPORTANT RECALL INFORMATION

Please review the following images and part descriptions, affected by this recall. To ensure your playsets are a part of this recall, please indicate the total number of each playset you own in the field next to the playset image.

Remember:

- The value of your return will be carefully assessed and a voucher for the value of the playset(s) will be sent to you within 8 - 12 weeks.
- The voucher can be used at most national retailers and is good toward any Mattel-manufactured product.

Discontinue use of these playsets immediately

If you have any questions, please do not hesitate to call our Consumer Relations Department, toll-free, at 1-888-479-2670, Monday through Friday, between 9 AM and 7 PM Eastern Time, and Saturday between the hours of 11 AM and 5 PM Eastern Time.

Please follow these steps:

Step 1:

Please refer to the eight images and product descriptions located on pages 2, 3 and 4 to assist you in determining if your Polly Pocket Playsets are affected by this recall. Next to each image is a space for you to enter the total number of each set that you own.

Step 2:

Please total the number of each of the individual playsets that you own and enter the information on the spaces provided on page 5. You will also be asked to provide your name, address and phone number.

Step 3:

Locate the pieces that are described and shown on pages 6 through 10.

Step 4:

Enclose all the requested pieces and pages 2 through 5 in an appropriate envelope or mailing container. Be sure to include the necessary pieces from the sets you own to ensure you receive full value for each set returned. Use the enclosed pre-paid mailing label to return the necessary pieces. Please follow the instructions located on the mailing label.

The value of your return will be carefully assessed and a voucher for the value of the playset(s) will be sent to you within 8 - 12 weeks.

Polly Pocket Playset Images
Discontinue use of these playsets immediately

**B2632 Polly Pocket!™ Polly Place™
Hangin'-Out House™ Playset**

I have _____ set(s)



**B3158 Polly Pocket!™ Polly Place™
Treetop Clubhouse™ Playset**

I have _____ set(s).



B3201 Polly Pocket!™ Spa Day™
I have _____ set(s).



ENCLOSE THIS PAGE WITH YOUR RETURN

Polly Pocket Playsets

Discontinue use of these playsets immediately

**B7118 Polly Pocket!™ Polly Place™
Totally Tiki Diner™ Playset**

I have _____ set(s).



G8605 Polly Pocket!™ Quik-Clik™ Boutique

I have _____ set(s)



**H1537 Polly Pocket!™ Quik-Clik™
City Pretty Playset**

I have _____ set(s).



ENCLOSE THIS PAGE WITH YOUR RETURN

Polly Pocket Playsets
Discontinue use of these playsets immediately

**H1538 Polly Pocket!™ Quik-Clik™
Sporty Style Playset**

I have _____ set(s).



**H3211 Polly Pocket!™
Totally Zen™ Playset**

I have _____ set(s).



ENCLOSE THIS PAGE WITH YOUR RETURN

Information Page

Please review your information above and total the number of sets you own in the spaces provided below.

- _____ B2632 Polly Pocket!™ Polly Place™ Hangin'-Out House™ Playset
- _____ B3158 Polly Pocket!™ Polly Place™ Treetop Clubhouse™ Playset
- _____ B3201 Polly Pocket!™ Spa Day™
- _____ B7118 Polly Pocket!™ Pollyplace™ Totally Tiki Diner™ Playset
- _____ G8605 Polly Pocket!™ Quik-Clik™ Boutique
- _____ H1537 Polly Pocket!™ Quik-Clik™ City Pretty Playset
- _____ H1538 Polly Pocket!™ Quik-Clik™ Sporty Style Playset
- _____ H3211 Polly Pocket!™ Totally Zen™ Playset
- _____ **TOTAL NUMBER OF SETS**

The value of your return will be carefully assessed and a voucher for the value of the playset(s) will be sent to you within 8 - 12 weeks.

Please note: Any Polly Pocket Playsets sent to Mattel that are determined not included in the recall will be returned to you at the address below.

Please enter your name, address and phone number:

Name: _____

Address: _____

Home Phone Number: _____

ENCLOSE THIS PAGE WITH YOUR RETURN

Parts to be Returned

For the B2632 Polly Pocket!™ Polly Place™ Hangin'-Out House™ Playset
Please return the following 29 pieces:



Pieces to be Returned: 1 Sink, 1 bathtub, 1 bunk beds, 1 gray camera, 1 gray stove, 1 refrigerator, 1 orange teddy bear, 1 magenta shelf, 1 magenta mirror, 1 magenta table with benches, 1 magenta couch, 1 orange mirror, 1 orange chair, 1 orange dresser, 1 red round chair, 1 blue mirror, 1 blue chair, 1 blue coffee table, 1 red sink, 1 umbrella, 1 flower pot, 1 TV, 1 red picture frame, 1 gray grill, 1 towel rack, 1 puppy and 3 figures (Polly, Shani & Lila)

For the B3158 Polly Pocket!™ Polly Place™ Treetop Clubhouse™ Playset
Please return the following 14 pieces:



Pieces to be Returned: 2 purple sleeping bags (1 with a yellow pillow and 1 with a teal pillow), 1 cat, 1 toy box, 1 lantern, 1 chair, 1 bookcase, 1 cat bed, 1 rug, 1 picture frame, 1 radio, 1 telescope and 2 figures (Rick & Polly)

Parts to be Returned

B3201 Polly Pocket!™ Spa Day™

Please return the following 8 pieces:



Pieces to be Returned: 1 Blue staircase, 1 purple sink, 1 purple hair dryer, 1 yellow chair, 1 orange beautician station with mirror, 1 purple hair accessories shelf and 2 figures (Polly and Lila)

B7118 Polly Pocket!™ Polly Place™ Totally Tiki Diner™ Playset

Please return the following 15 pieces:



Pieces to be Returned: 2 purple sun chairs, 1 surfboard, 1 cash register, 1 juke box, 1 drive-thru sign, 1 palm tree, 1 ceiling fan, 1 tiki lamp, 1 orange beverage dispenser, 1 teal BBQ grill, 1 orange rectangle with discs, 1 pink car and 2 figures (Polly and Rick)

Parts to be Returned

G8605 Polly Pocket!™ Quik-Clik™ Boutique

Please return the following 34 pieces:



Pieces to be Returned: 2 hats, 1 blonde wig, 2 blonde hair extensions, 1 boutique, 1 mannequin, 4 hair flowers, 3 blue hangers, 3 green hangers, the front and back of: a purple dress, magenta shirt, magenta pants, pink and green striped dress, magenta skirt, pink skirt, orange shirt, pink dress, and 1 figure (Polly)

Parts to be returned

H1537 Polly Pocket!™ Quik-Clik™ City Pretty Playset

Please return the following 23 pieces:



Pieces to be Returned: 2 brunette wigs, 2 brunette hair extensions, 4 pink hangers, 2 purple flower hair bows, 1 hat, 1 mannequin, the front and back of: silver pants, silver dress, purple skirt, purple tank top, green and purple dress, and 1 figure (Lila).

H1538 Polly Pocket!™ Quik-Clik™ Sporty Style Playset

Please return the following 27 pieces:



Pieces to be Returned: 4 magenta hangers, 1 mannequin, 4 orange hair extensions, 1 orange wig and the front and back of: a polka-dot dress, blue tank top, blue skirt, magenta jacket, purple pants, purple tube top, green shorts and green tube top and 1 figure (Lea)

Parts to be returned

H3211 Polly Pocket!™ Totally Zen™ Playset

Please return the following 29 pieces:



Pieces to be Returned: 4 red hangers, 4 brunette hair extensions, 1 brunette wig, the front and back of: purple shorts, red flowered tank top, pink sweater, purple tank top, pink and teal pants, flowered dress, teal flowered tank top, teal hat, pink striped pants and 1 figure (Shani).

Discontinue use of these playsets immediately.

Please enclose all pieces in an appropriate envelope or mailing container. You may use the enclosed pre-paid mailing label to send your returns to Mattel. Please follow the instructions as stated on the mailing label.

The value of your return will be carefully assessed and a voucher for the value of the playset(s) will be sent to you within 8 - 12 weeks.

If you have any questions, please do not hesitate to call our Consumer Relations Department, toll-free, at 1-888-479-2670, Monday through Friday, between 9 AM and 7 PM Eastern Time, and Saturday between the hours of 11 AM and 5 PM Eastern Time.