

This is a battery-operated product.
1 flyer (00007-1849G6) is required
to be placed inside the packaging.

 
BATTERY INSTALLATION / REPLACEMENT

- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Remove batteries and dispose of them safely. Install 3 new button-cell AG13 (LR44) batteries in the orientation (+/-) shown.
- Replace battery cover and tighten screw.
- Replace the batteries if the sounds distorts or the lights dim.

Battery Safety Information

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.

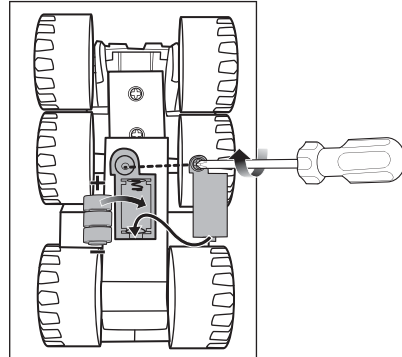


- Only batteries of the same or equivalent type as recommended are to be used.
 - Batteries are to be inserted with the correct polarity.
 - Exhausted batteries are to be removed from the product.
 - The supply terminals are not to be short-circuited.
 - Dispose of battery(ies) safely.
 - Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Protect the environment by not disposing of this product with household waste [2002/96/EC]. Check your local authority for recycling advice and facilities.




TO PLAY

 
1.

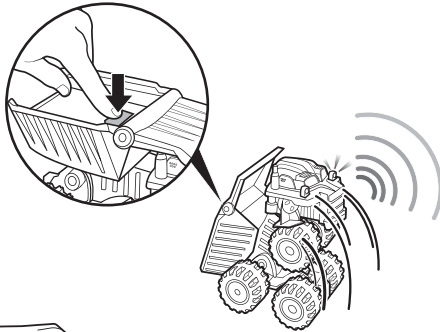

 2.

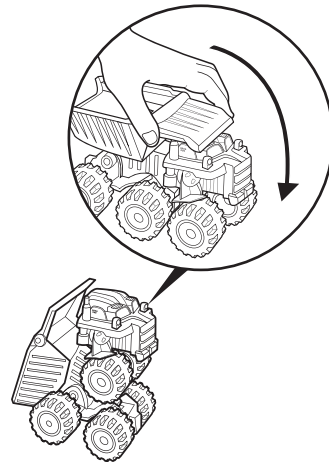

 3.

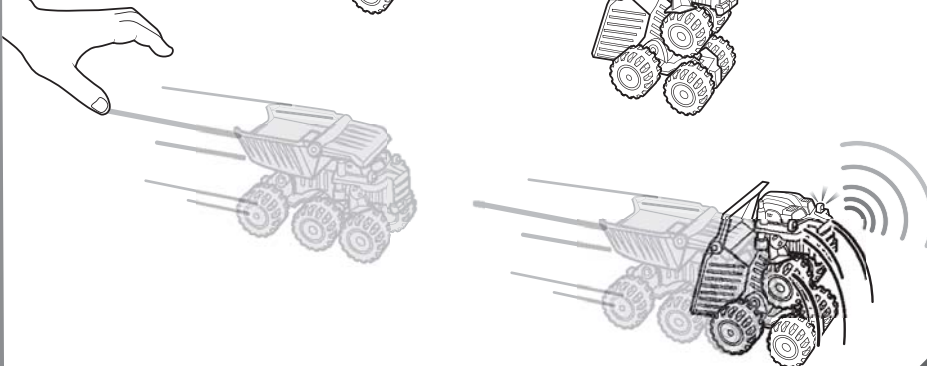


MATCHBOX

REAL TALKING ROCKY™ INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

 CONTENTS / 3+

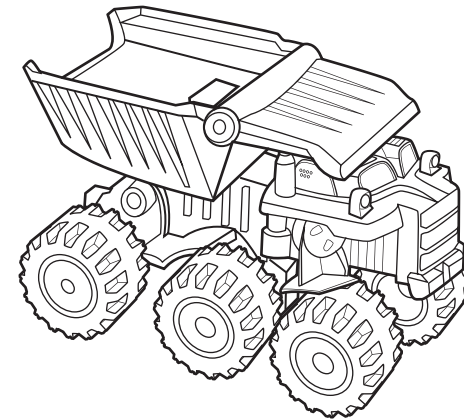

R0844-0920
ASST. R0843



Not intended for outdoor use.
Sand, dirt, and water will cause malfunction.

© 2009 Mattel, Inc. All Rights Reserved. Consumer Relations – Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. – 1-800-524-8697. service.mattel.com. • Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697. • Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303 • Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. • Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. • Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.

This is a battery-operated product. 1 flyer (00007-1849G6) is required to be placed inside the packaging.

 
BATTERY INSTALLATION / REPLACEMENT

- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Remove batteries and dispose of them safely. Install 3 new button-cell AG13 (LR44) batteries in the orientation (+/-) shown.
- Replace battery cover and tighten screw.
- Replace the batteries if the sounds distorts or the lights dim.

Battery Safety Information

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.

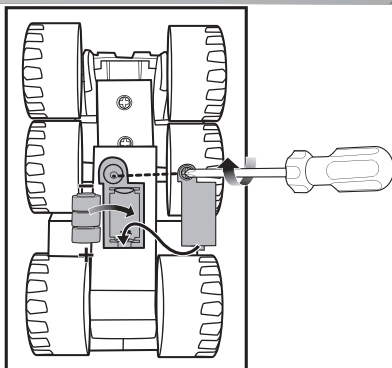


- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.




Protect the environment by not disposing of this product with household waste [2002/96/EC]. Check your local authority for recycling advice and facilities.

TO PLAY

 
1.

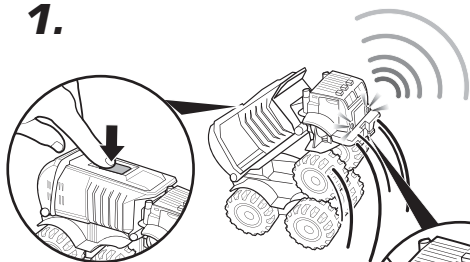

 2.

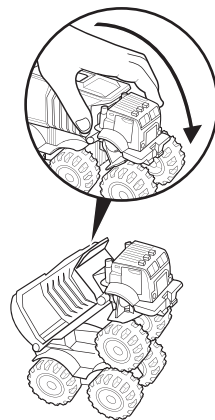

 3.

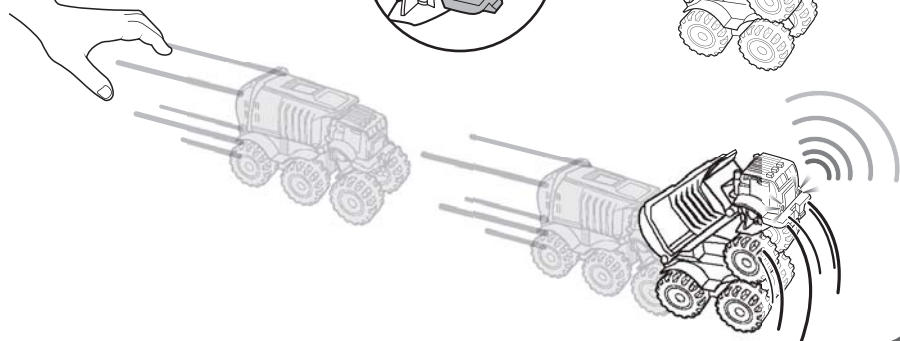


MATCHBOX

REAL TALKING STINKY™ INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

 CONTENTS / 3+

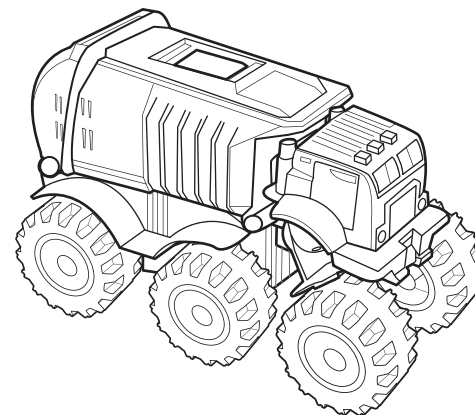

R0845-0920
ASST. R0843



Not intended for outdoor use.
Sand, dirt, and water will cause malfunction.

© 2009 Mattel, Inc. All Rights Reserved. Consumer Relations – Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. – 1-800-524-8697. service.mattel.com. • Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697. • Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303 • Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. • Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. • Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.