



TO PLAY


Note: All green buttons are launch buttons.

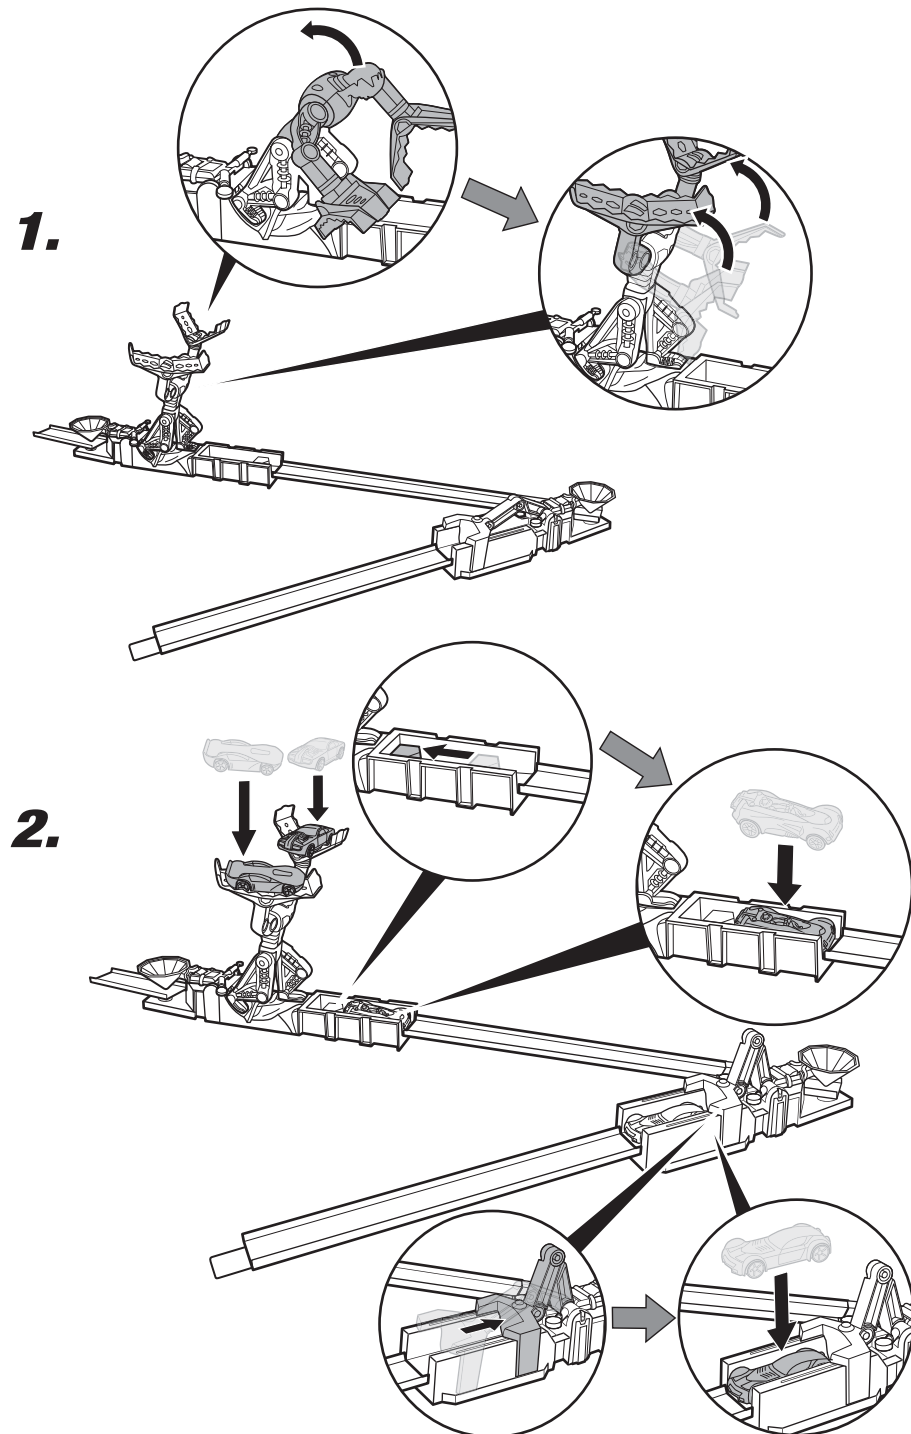

3.

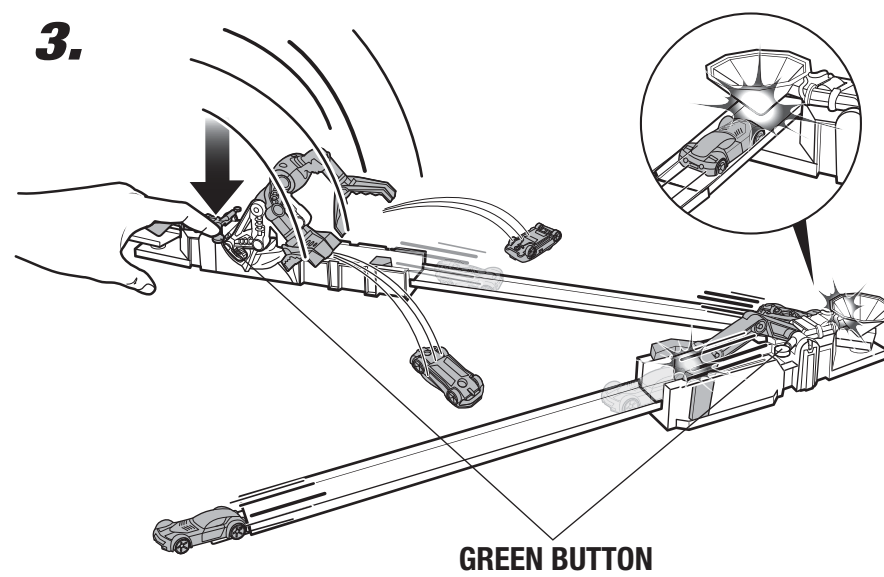

MORE WAYS TO PLAY

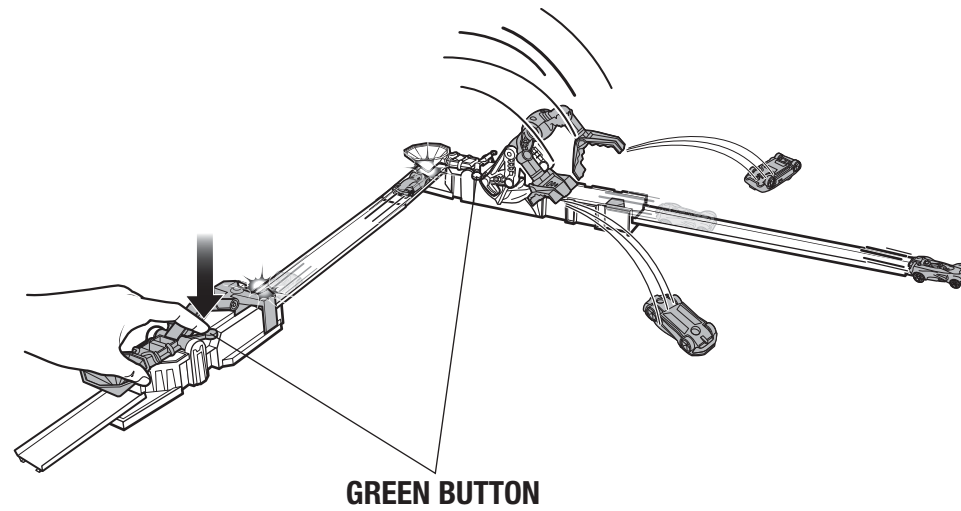


Connects with other Trick Tracks sets.



ANDROID ATTACK™

INSTRUCTIONS


CONTENTS

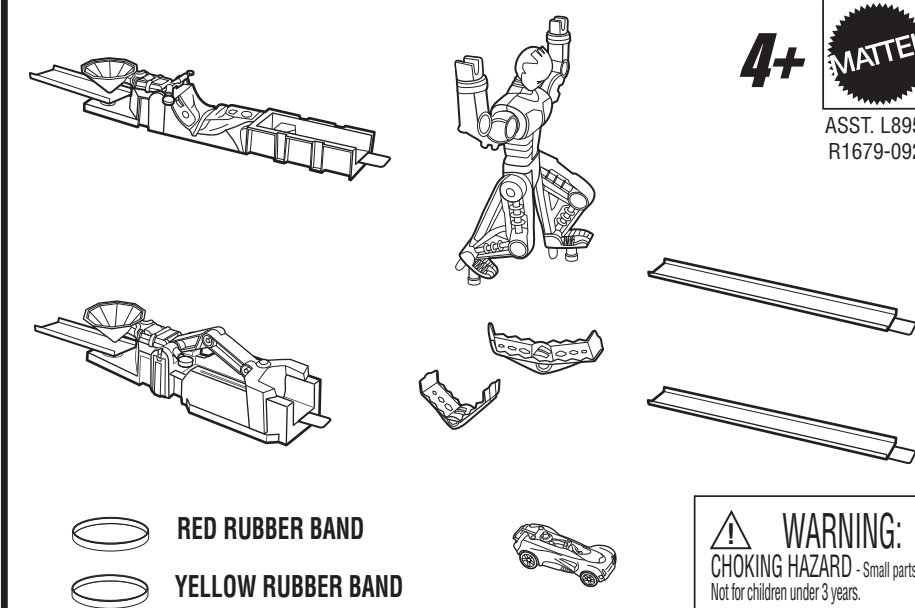


© 2010 Mattel, Inc. All Rights Reserved. Mattel, Inc. 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. • Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697. • Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. • Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312 Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. • Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 P.J. Tel:03-78803817, Fax:03-78803867. service.mattel.com

ASSEMBLY


1.

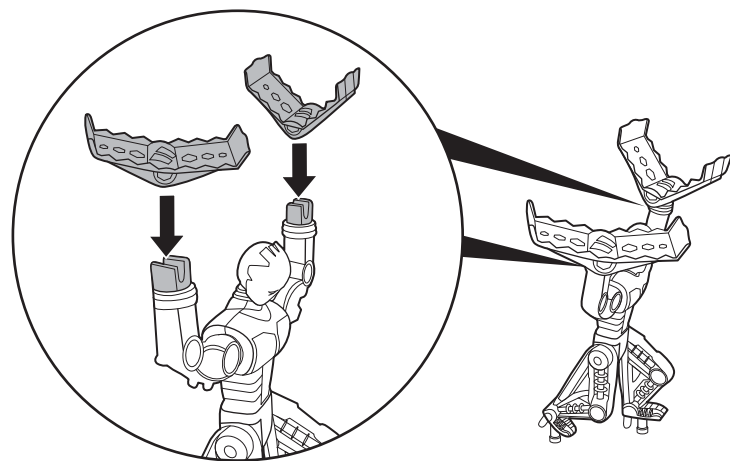

2.

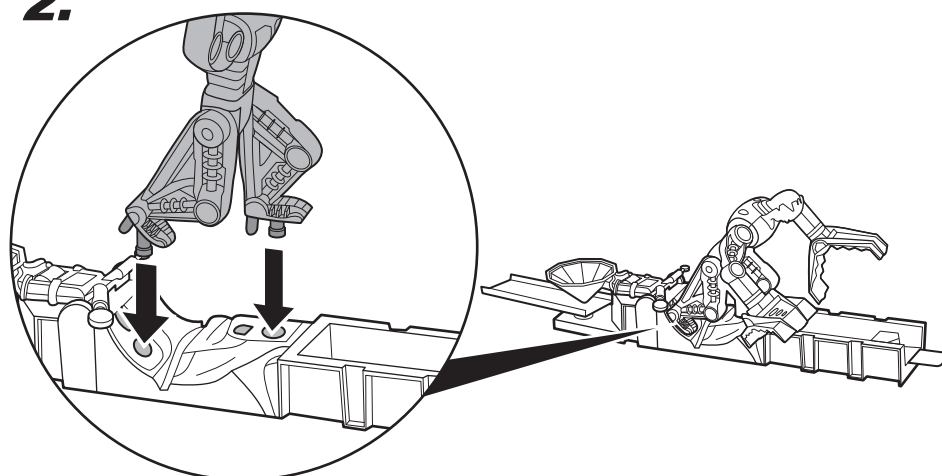

3.

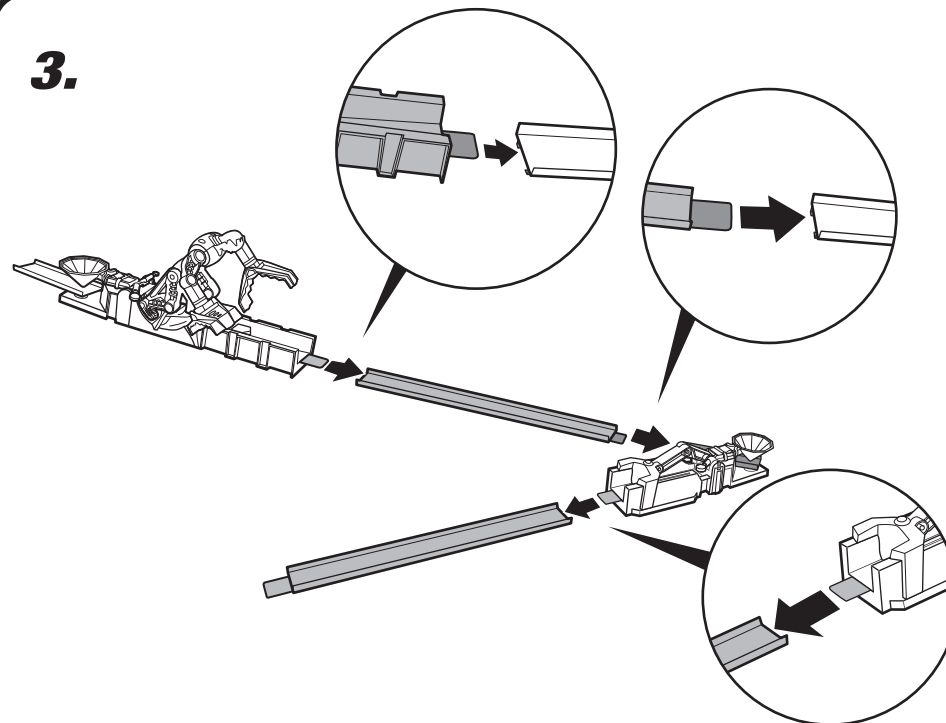


REPLACE RED RUBBER BAND

ADULT SUPERVISION REQUIRED.


1.



2.

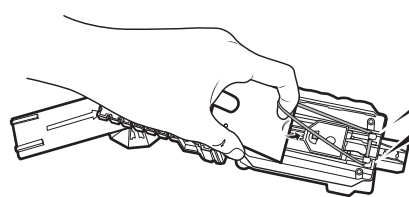


3.

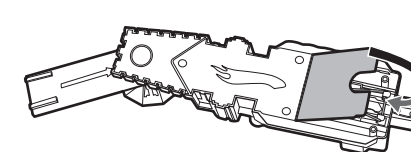


REPLACE YELLOW RUBBER BAND

ADULT SUPERVISION REQUIRED.

1.

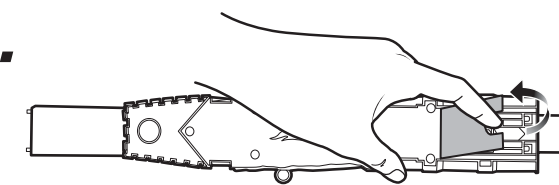

2.

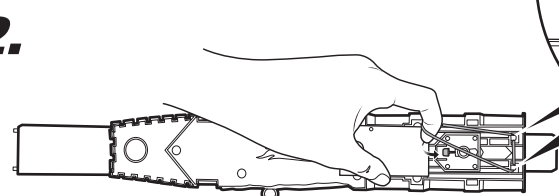

3.

