



Bins sold separately and subject to availability.

Important Information



WARNING

CHOKING HAZARD - Small Parts

Not suitable for children under 3 years.

- Please keep this instruction sheet for future reference, as it contains important information.
- Adult assembly is required.
- Tool required for assembly: Phillips screwdriver (not included).
- Only use the washable markers that came with this toy. Do not use permanent markers on the easel.
- To remove markings from skin, use soap and water.
- Replace the cap on the markers after each use.
- Marker and crayon may stain fabrics and other surfaces. Avoid contact with carpet, clothing, walls and furniture.
- Adult supervision is recommended.

Assembled Parts



CAUTION


This package contains small parts in its unassembled state.
For adult assembly only.



2 Legs



Shelf

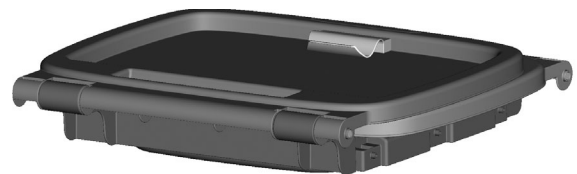

Easel




#8 x 3/4" Screw – 12


Shown Actual Size

Tighten and loosen all screws with a Phillips screwdriver.
Do not over-tighten.


Assembly

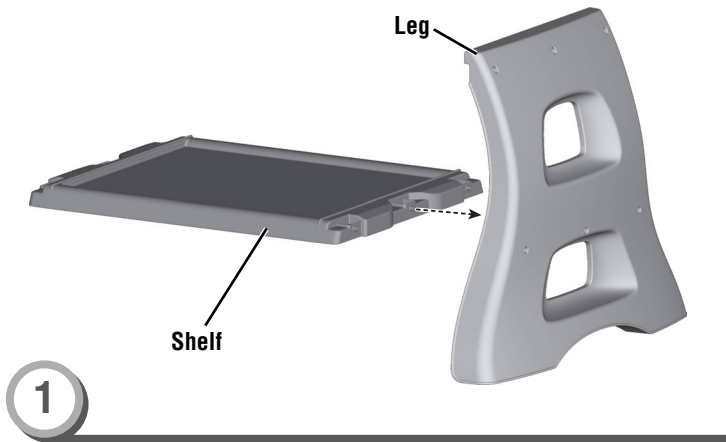


- Fit the end of the shelf into the lower groove in a leg as shown.

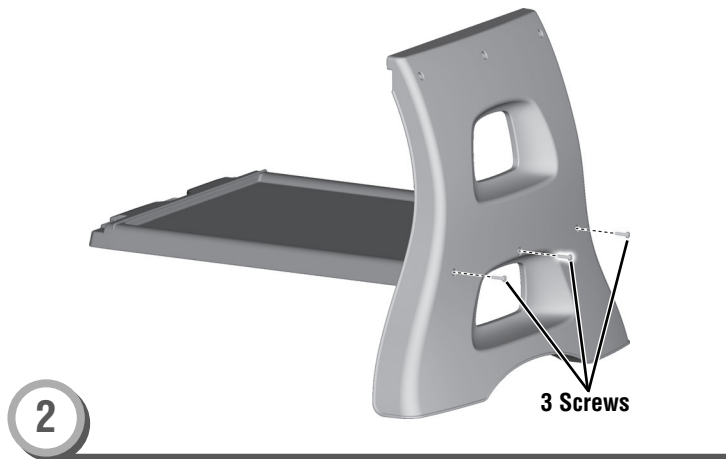


- Insert three screws into the holes in the leg and tighten.

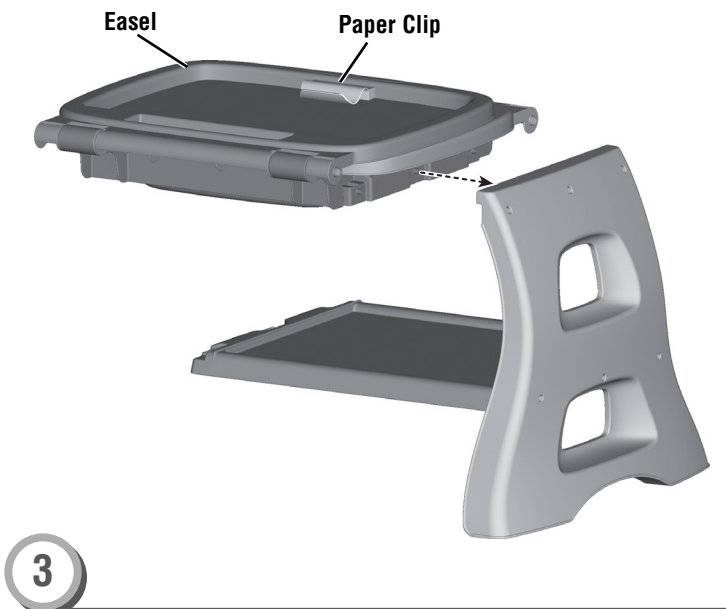


- Position the easel with the paper clip facing up. Fit the edge of the easel into the upper groove in the leg assembly, as shown.

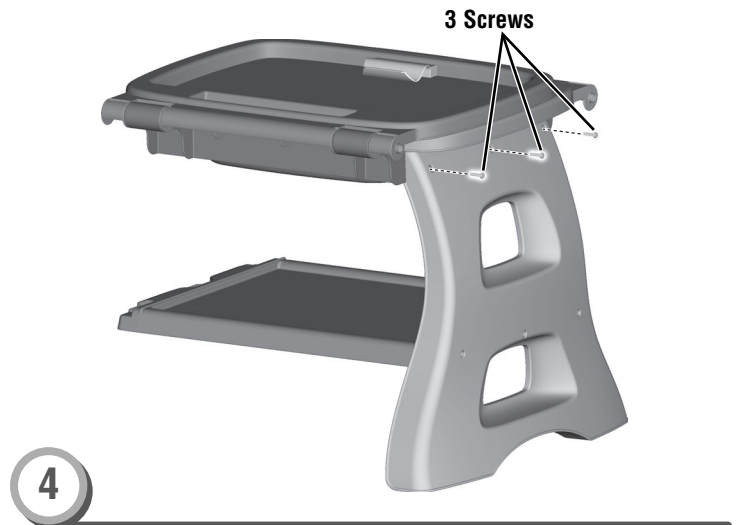

- Insert three screws into the holes in the leg and tighten.

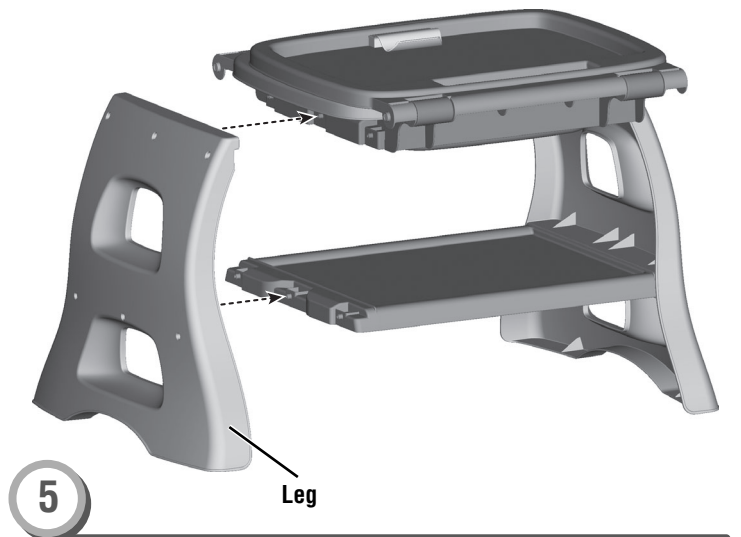

- Position the remaining leg onto the opposite end of the assembly.
- Fit the easel and the shelf into the grooves in the leg.

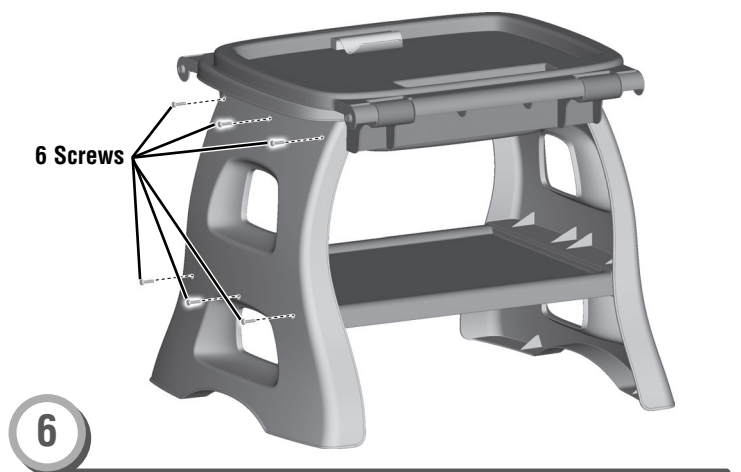


- Insert six screws into the holes in the leg and tighten.

Easy Conversion

Use the activity center as an easel or as a project table!

Art Easel

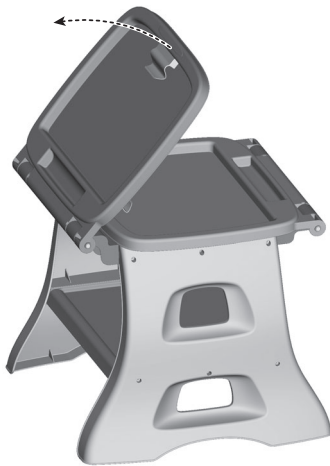


1

- First, lift the top panel.



2


- Next, lift the bottom panel.

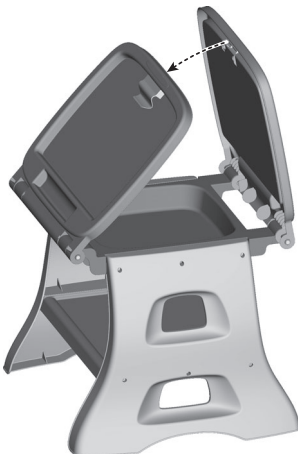

3


- Then, snap the both panels together, as shown.

Project Table

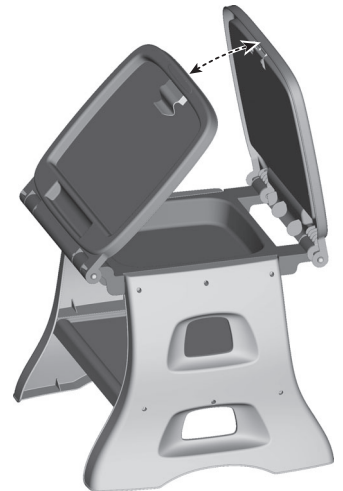


1

- First, pull apart the panels, as shown.

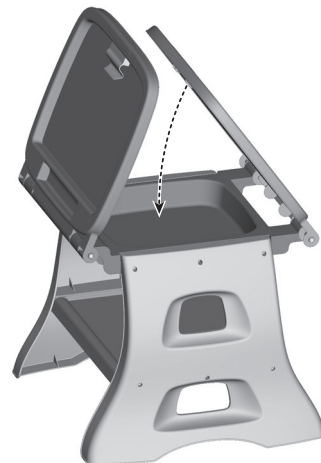

2



- Next, lower one of the panels.

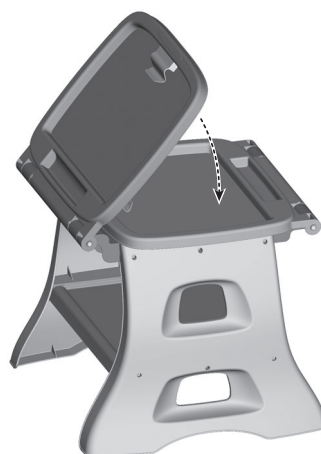

3

- Then, lower the other panel, as shown.

Customizable Activity Center

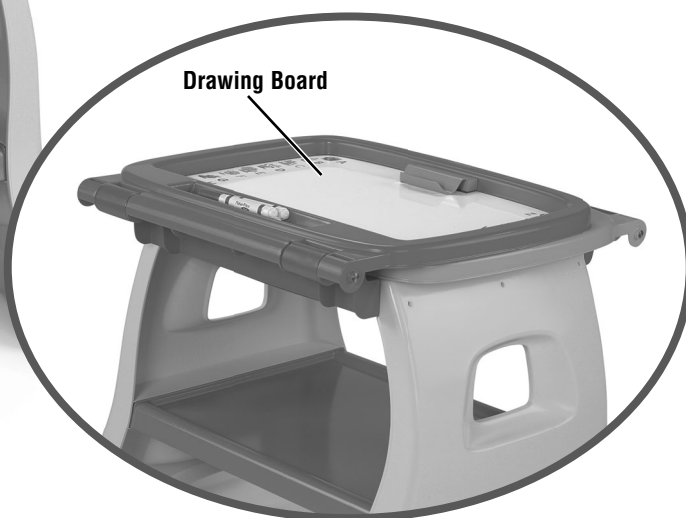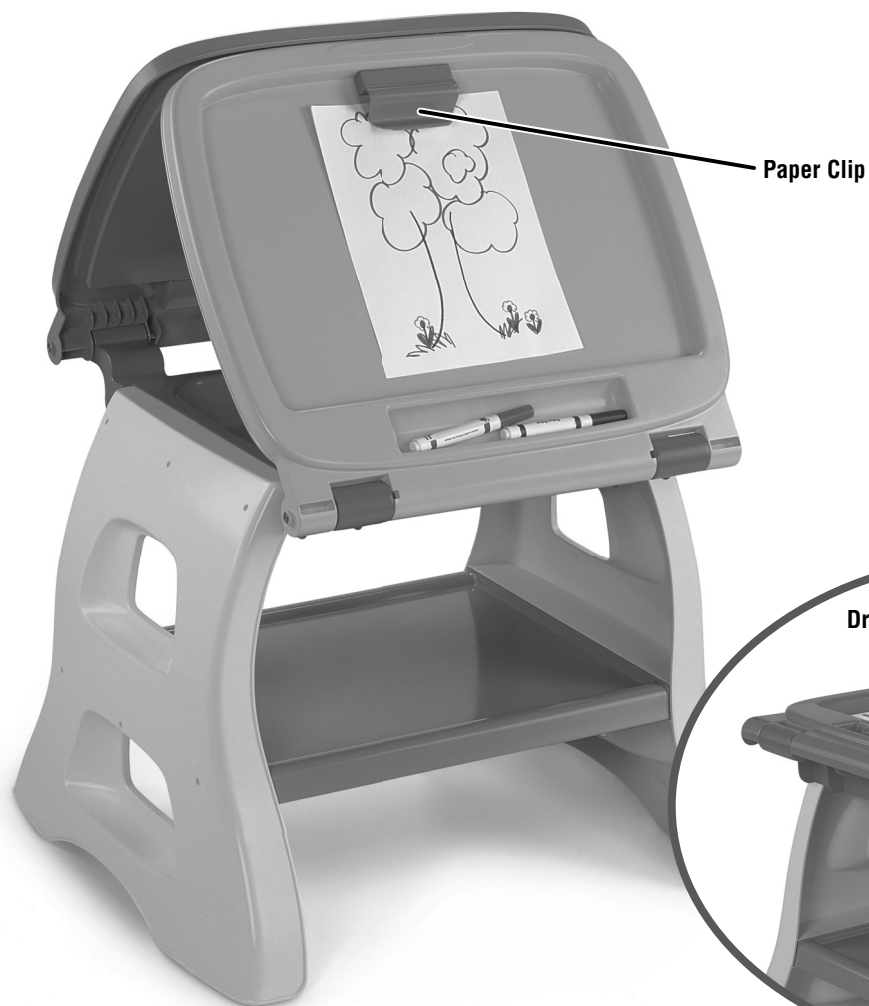

- Use the clip to hold up to 12 sheets of paper while you draw!
- Write on the drawing board with the included markers.

- You can purchase fun themed bins separately for more exciting art projects. Bins sold separately and subject to availability.

Storage



- Keep your art supplies organized in the large storage area under the easel panels.
- Store the bins (sold separately and subject to availability) on and under the shelf!

Consumer Information



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303,
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Auckland 1331, Auckland.

Care

- Wipe this product with a clean cloth dampened with a mild soap and water solution. Drawing board can be wiped clean with water.