


Fisher-Price®

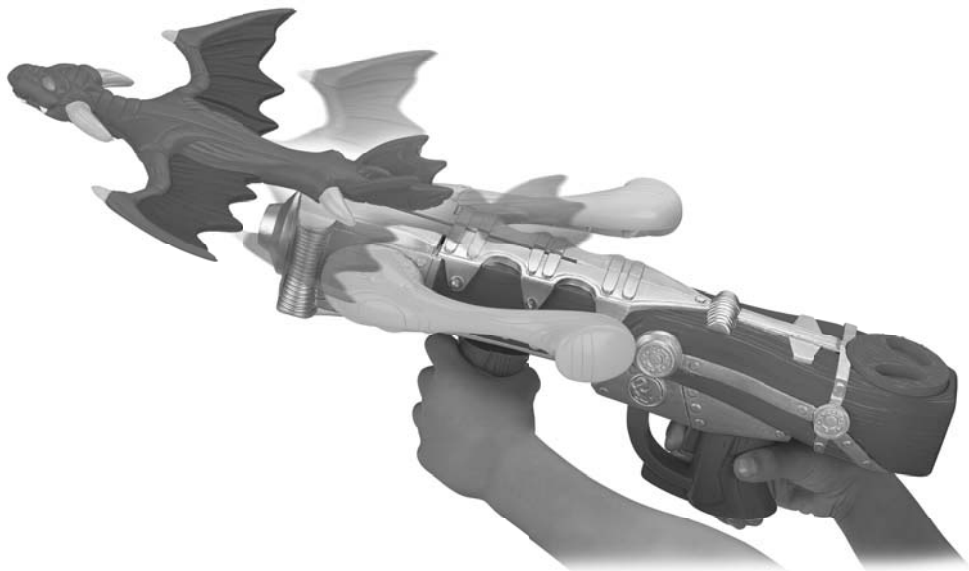

Please keep this instruction sheet for future reference, as it contains important information.
No assembly required.

Visit us on line at www.service.fisher-price.com

Call our Consumer Relations Department, toll-free at **1-800-432-5437**.

Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

For countries outside the United States:

CANADA: Questions? 1-800-432-5437. Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.
Helpline: 01628 500303. www.service.mattel.com/uk


AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870,
Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.


imaginext
www.imaginext.com

Watch the Dragon Fly!

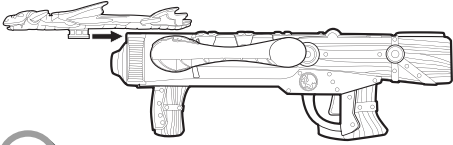


1

- Fit the tab on the bottom of the dragon into the "T" end of the slot in the launcher.

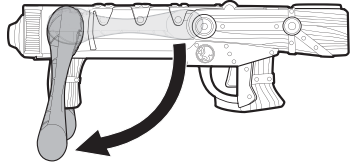

4

- To use the activation disk with a figure, first lower the stabilizers.

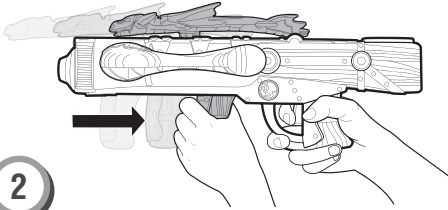


2

- Pull the front handle back until it **"clicks"** into position.



5

- Now, turn the figure in the activation disk to launch the dragon.

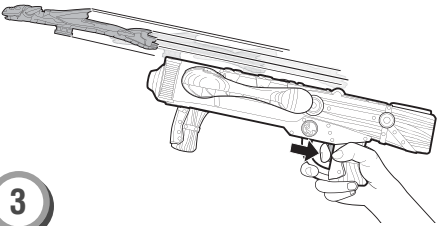

3

- Squeeze the trigger to launch the dragon.
- **Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range.**

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

Tip: You can make minor repairs to your dragon using adhesive tape. Do not use glue.