

Fisher-Price®

R8639



Sit & Play
坐坐&玩玩



Tummy Time
抬头锻炼



Crawl Along
爬行


www.fisher-price.com
www.fisher-price.com.cn

Consumer Information

消费者信息

- Please keep this instruction sheet for future reference, as it contains important information.
- Requires two “AA” batteries (included) for operation.
- Adult assembly is required for battery replacement.
- Tool required for battery replacement: Phillips screwdriver (not included)
- Wipe this toy with a clean cloth. Do not immerse.
- This toy has no consumer serviceable parts. Please do not take this toy apart.
- 说明书中包含重要内容，请妥善保存以供日后参考。
- 本产品须由三节五号电池（内含）驱动。
- 电池替换须由成人完成。
- 电池替换所需工具：螺丝起子（内含）。
- 请使用干净的清洁布擦拭本款玩具。请勿将玩具浸入洗涤液中。
- 本款玩具没有供消费者使用的零件。请勿拆卸本玩具。

Battery Replacement 电池替换

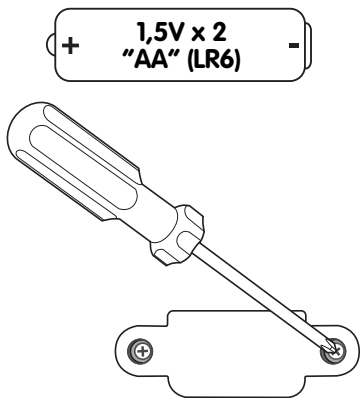

For best performance, we recommend replacing the batteries that came with this toy with two, new "AA" (LR6) alkaline batteries.

- Locate the battery compartment on the bottom of the toy.
- Loosen the screws in the battery compartment door and remove it.
- Remove the exhausted batteries and dispose of them properly.
- Insert two, new "AA" (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws.
- If this product begins to operate erratically, you may need to reset the electronics. Slide the power/ volume switch off, then back on.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries.

为了让玩具发挥其最好的性能，我们推荐使用玩具中附带的二节新的五号碱性电池来替换旧电池。

- 电池仓门位于玩具的底部。
- 使用螺丝起子松开电池仓门。将电池仓门移除。
- 移除耗尽的电池，并妥当处置废弃电池。
- 插入二节新的五号**碱性**电池。
- 将电池仓门恢复原位，并拧紧螺丝。
- 如果产品开始出现操作异常，您可能需要重置电子装置。将电源/音量开关滑至关闭状态，然后再重新开启。
- 如果发现玩具发出的声音或灯光变弱或停止，则须由成人更换电池。



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.
- 为保护环境，请勿将本产品与家庭垃圾一起丢弃(2002/96/EC)。请与当地权威机构联系，以获取循环利用的建议和设备。

Battery Safety Information

电池安全使用说明书


In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

在一些特殊的环境下，电池可能会泄漏内部液体，这可能会引起化学燃烧或损毁产品。请尽量避免电池泄漏：

- 请勿混用新旧电池或不同类型的电池：碱性电池、标准（碳-锌）电池或充电电池（镍-镉）。
- 请按电池仓内的指示插入电池。
- 如果长时间不使用本产品，请取出电池。请从产品中取出电量耗尽的电池。请安全处置废弃电池。请勿将废弃电池丢入火中。电池可能会爆炸或泄漏。
- 切勿造成电池接头短路
- 仅使用我方推荐的同款或相同类型的电池。
- 请勿给非充电电池充电。
- 充电前，请将充电电池从产品中取出。
- 如果使用移动式充电电池，请务必在成人的监督下进行充电。

Lively Music and Dancing Lights! 轻快的音乐以及舞动的灯光！

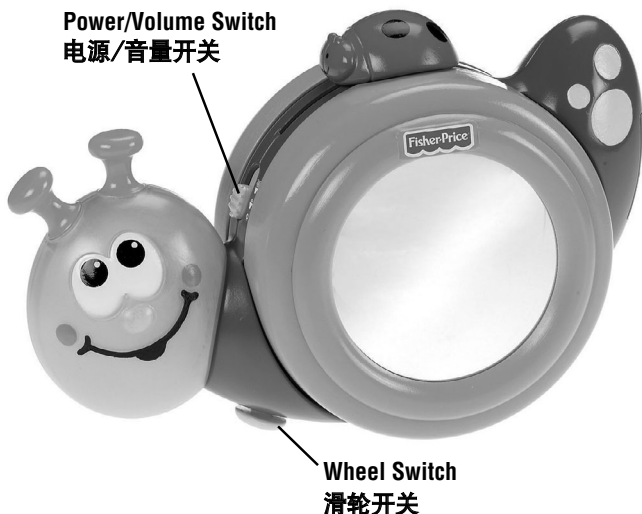

- Slide the power/volume switch to ON with low volume 🗣️ or ON with high volume 🗣️🗣️.

Tummy Time

- Slide the wheel switch down to lock the wheels in place.
- Bat the snail to watch it light up, and listen to music and other silly sounds!

Sit & Play

- Slide the wheel switch down to lock the wheels in place.
- Rock the snail for lights and fun sounds!

Crawl Along

- Slide the wheel switch up to unlock.
- Roll the snail for fun lights and sounds!
- When finished playing with this toy, slide the power/volume switch OFF ○.

- 滑动电源/音量开关至开启低音量 🗣️，或开启高音量 🗣️🗣️。

抬头锻炼

- 将滑轮开关滑下，锁住车轮。
- 拍打蜗牛，看灯光亮起，听音乐响起，还能听到其他有趣的声效哦！

坐坐&玩玩

- 将滑轮开关滑下，锁住车轮。
- 摇动蜗牛，便能看到蜗牛发光，还会听到有趣的声效哦！

爬行

- 将滑轮开关向上滑动，解锁滑轮。
- 滑动蜗牛，蜗牛便会亮起有趣的灯光效果，响起各种声效哦！
- 玩具使用完毕后，请将电源/音量开关调至关闭状态○。



Mattel Barbie (Shanghai) Trading
Co., Ltd. Room 2201, 2207,
22/F., Ascendas Plaza,
333 Tian Yao Qiao Road,
Shanghai 200030, P.R.C.

美太芭比(上海)贸易有限公司
上海市天钥桥路333号
2201、2207室中国消费者
免费咨询专线: **800-820-6939**

Fisher Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2011 Mattel, Inc. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, Inc.