



# IMPORTANT!

Before first time use, calibrate the touch screen to the stylus.



- To calibrate the stylus to the touch screen, insert the tip of the stylus into the **Calibration Hole**  on the back of iXL™.
- Follow the instructions on the screen and touch each mark with the stylus. Press any button when you are finished to exit the calibration screen.

Fisher Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2010 Mattel, Inc. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, Inc., unless otherwise indicated.