




We've Made a Change!

The screws holding the seat in place are not removable. Simply use a Phillips screwdriver to loosen (to remove the seat) and tighten (to attach the seat) the screws.

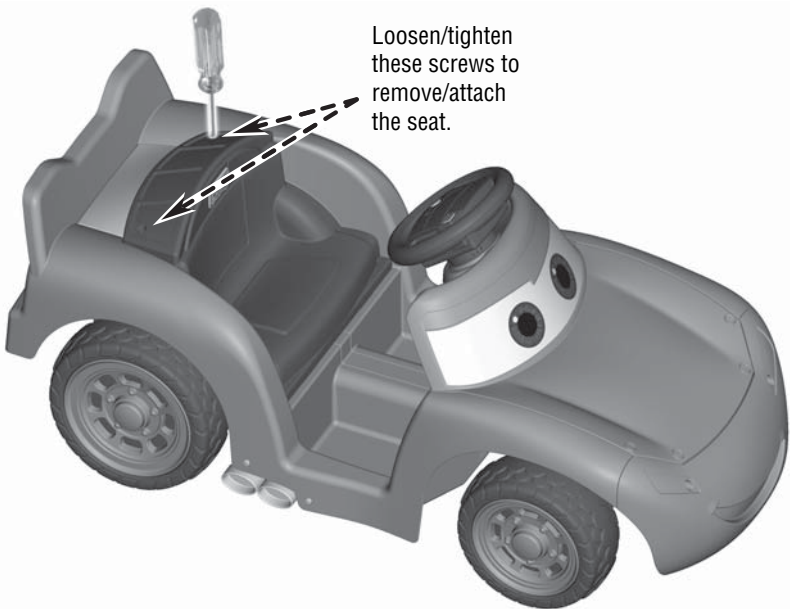

Loosen/tighten these screws to remove/attach the seat.

© 2010 Disney/Pixar.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, New York 14052 U.S.A.
©2010 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc. unless otherwise indicated.