 



V. BATTERY INSTALLATION

Requires 3 AG13 (LR44) Button Cell batteries for the vehicle and 2 AG13 (LR44) Button Cell batteries for the transmitter. Batteries included are not for "Try Me". They are ready to run. There are 3 additional batteries included for the vehicle.

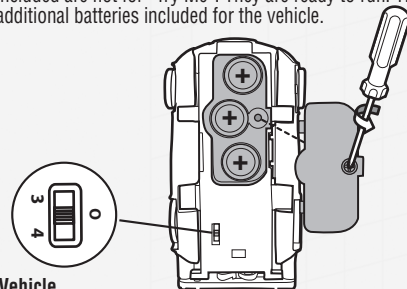

Vehicle

 1. Remove the battery cover as shown. Remove the exhausted batteries and dispose of properly.
2. Install 3 fresh AG13 (LR44) Button Cell batteries, with polarity (+/-) as shown inside the battery compartment.
3. Replace the battery cover and tighten screw.

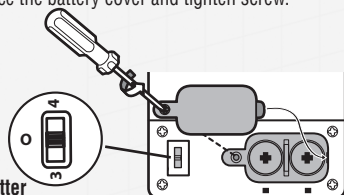


Transmitter

1. Remove the battery cover as shown. Remove the exhausted batteries and dispose of properly.
2. Install 2 fresh AG13 (LR44) Button Cell batteries, with polarity (+/-) as shown inside the battery compartment.
3. Replace the battery cover and tighten screw.

VI. QUICK TIPS

 1. When your vehicle starts to lose power, it may lose functionality or performance. It's time for fresh batteries. Your vehicle's running time varies depending on your driving style.
2. Interference can affect your vehicle's performance. Interference can be caused by other I/R devices like a TV remote control or other remotes in the house. Try to stay away from these!
3. Point the transmitter toward the vehicle. If your vehicle gets too far away, it won't work properly.
4. Don't drive your vehicle in sand or through water or snow. If your vehicle does get wet, wipe it with a towel and allow to dry completely overnight.
5. Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for storage.
6. Do not obstruct the line of sight.
7. This vehicle works better indoors than outdoors where sunlight can sometimes interfere with the I/R.
8. If the vehicle malfunctions, please turn the vehicle and the transmitter's power switch OFF and ON again. This should reset your vehicle and let you resume normal operation.
9. For longer lasting batteries, please remember to switch the vehicle and the transmitter OFF after play.

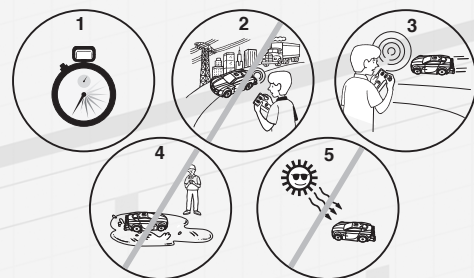

VII. CONSUMER INFORMATION

Note to adults: To ensure that the child's play is both safe and fun, please review all operating instructions and safety rules with your child.

Safety Tips

- NEVER drive your vehicle on streets! They're for real cars!
- DO NOT pick up vehicle while in motion.

CAUTION: To prevent entanglement, keep hair away from wheels.

- Keep fingers, hair and loose clothing away from the tires and the wheel hubs while the vehicle is switched ON.
- Adult supervision is recommended when this vehicle is being operated.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.

- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

WARNING: Note to Adults: Inserting or changing batteries must be completed by an adult with the appropriate tools to open and close the battery compartment.



Protect the environment by not disposing of this product with household waste [2002/96/EC]. Check your local authority for recycling advice and facilities.

For product sold in USA

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be

determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

© 2010 Mattel, Inc. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. • Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697. • Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. • Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. • Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. • Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867. service.mattel.com



Keep these instructions for future reference as they contain important information. **IMPORTANT:** Please read all "Consumer Information" before operating your vehicle.

 
CAUTION: Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.

I. CONTENTS / FEATURES

Vehicle
Transmitter


Vehicle

- 1 Transformation Button: Press to pop-up for operation
- 2 Fold Button: Press to fold flat for storage

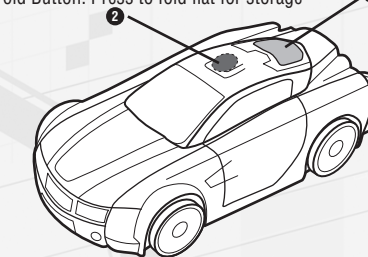

Vehicle

 
- 1 ON-3/4 (Channel 3 or Channel 4) / OFF(O) switch
- 2 Battery cover

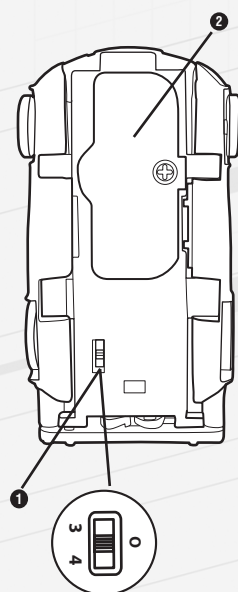

To operate your Stealth Rides™ vehicle, ensure the channel switch on both the vehicle and the transmitter are on the same number.

Transmitter

 
- 1 Control: forward / reverse / right / left
- 2 ON-3/4 (Channel 3 or Channel 4) / OFF(O) switch
- 3 Battery cover

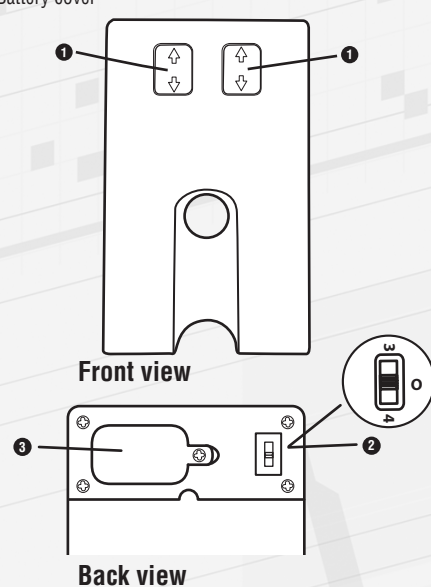

If you are racing another Stealth Rides™ vehicle and your transmitter and vehicle are switched to channel 3, the other vehicle and transmitter needs to be switched to channel 4.

II. VEHICLE

 - 1 Remove vehicle from transmitter and place on play surface.
- 2 Press the Transformation Button to transform.
- 3 Hold vehicle between thumb and finger. Then press the Fold Button to fold flat for storage.

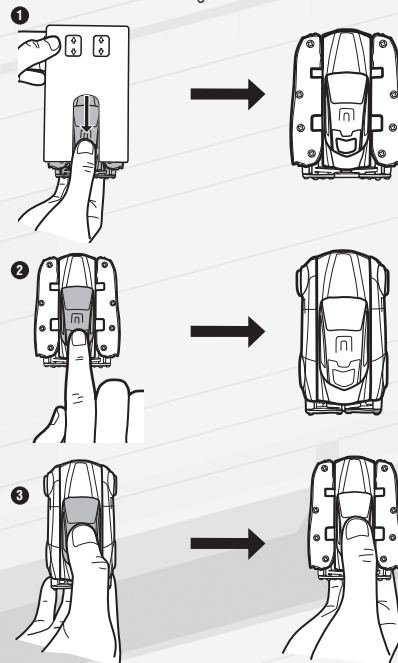


III. VEHICLE OPERATION


- 1 Forward



 - 2 Reverse

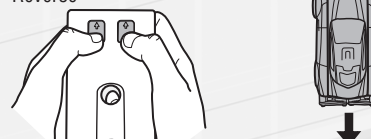


- 3 Forward right

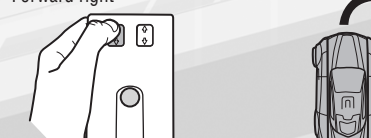 



- 4 Forward left



 - 5 Backward right

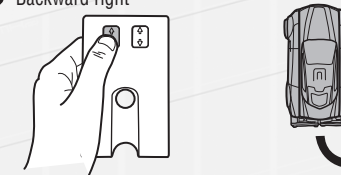

- 6 Backward left

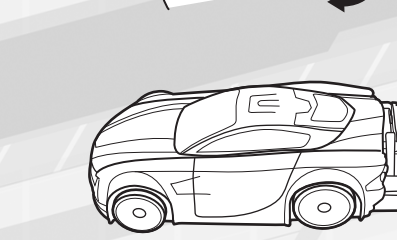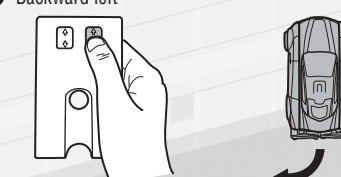  

When you leave the vehicle and transmitter idle, they will automatically turn off. To resume play, turn the vehicle and transmitter off and then on again.

IV. STORAGE

- 1 To fold flat, be sure to press the Fold Button.
- WARNING! THE VEHICLE WILL BREAK IF IT IS FOLDED MANUALLY BY BENDING THE SIDES.**

