

LET'S PLAY!



Flynn doll not included.

Flynn doll not included.

CONSUMER INFORMATION  
Need Assistance? Visit [service.mattel.com](http://service.mattel.com) or call 1-800-524-8887  
(US and Canada only)  
SERVICE.MATTEL.COM

Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697.  
Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303.  
Mattel Australia Pty. Ltd., Richmond, Victoria, 3121 Consumer Advisory Service - 1300 135 312.  
Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.  
Ditimpport & Diedarkan Oleh: Mattel SEA Ptd Ltd (995332-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran  
Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.

INSTRUCTIONS

3+ T7560-0920

CONTENTS



**WARNING:**  
CHOKING HAZARD - Small parts.  
Not for children under 3 years.


Please remove everything from the package and compare to the contents shown here.  
If any items are missing, please contact your local Mattel office.

Keep these instructions for future reference as they contain important information.

© 2010 Mattel, Inc. All Rights Reserved.

INSTRUCTION SHEET SPECIFICATIONS


Toy: DISP RAP\_CASTLE-TOWER  
Toy No.: T7560  
Part No.: 0920  
Trim Size: 25" W x 11" H  
Folded Size: 8.5" W x 11" H  
Type of Fold: 3 panel  
# colors: One  
Colors: Black  
Paper Stock: White Offset  
Paper Weight: 70 lb.  
EDM No.:

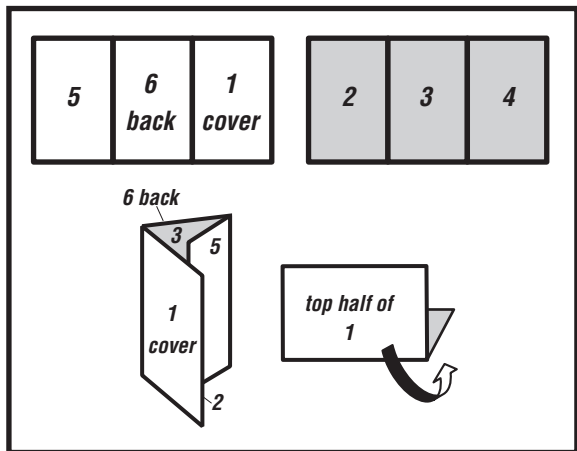

ASSEMBLY

Battery Replacement

Batteries included are for demonstration purposes only. Replace batteries when lights become dim. This toy requires 3 AG13(LR44) button cell batteries. To replace batteries, use a Phillips head screwdriver (not included) to open the battery cover. Remove and set aside. Insert 3 fresh AG13(LR44) button cell batteries as shown. Replace battery cover and screw shut. For longer life use only alkaline batteries.

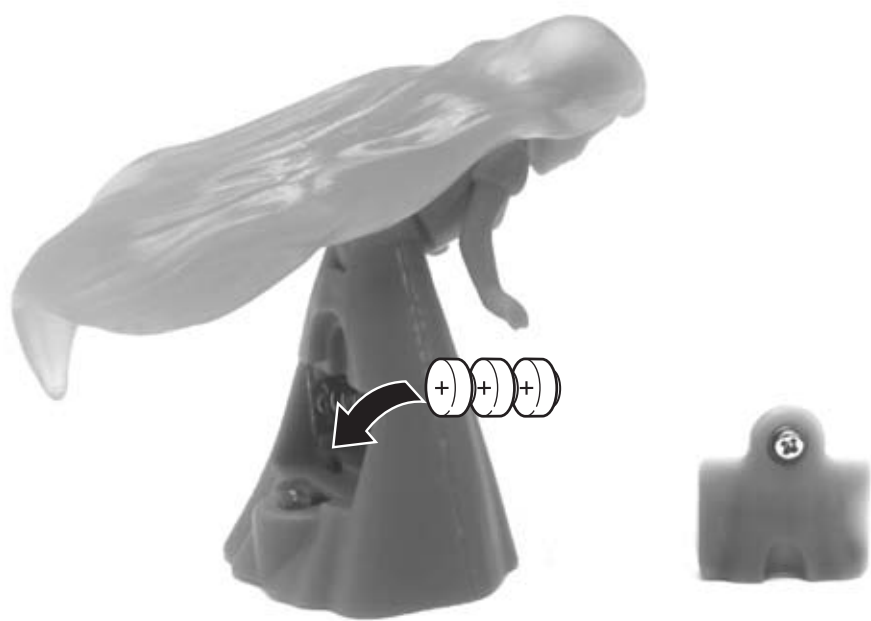

BATTERY SAFETY INFORMATION

- In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:
- Non-rechargeable batteries are not to be recharged.
  - Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
  - Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
  - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
  - Do not mix old and new batteries.
  - Only batteries of the same or equivalent type as recommended are to be used.
  - Batteries are to be inserted with the correct polarity.
  - Exhausted batteries are to be removed from the product.
  - The supply terminals are not to be short-circuited.
  - Dispose of battery(ies) safely.
  - Do not dispose of this product in a fire. The batteries inside may explode or leak.

Protect the environment by not disposing of this product with household waste [2002/96/EC]. Check your local authority for recycling advice and facilities.

