




www.fisher-price.com



Please keep this instruction sheet for future reference, as it contains important information.
Requires 3 "AA" batteries and 15 "AAA" batteries (included) for operation.
Adult assembly is required.
Tool required for battery replacement: Phillips screwdriver (not included).

Assembled Parts

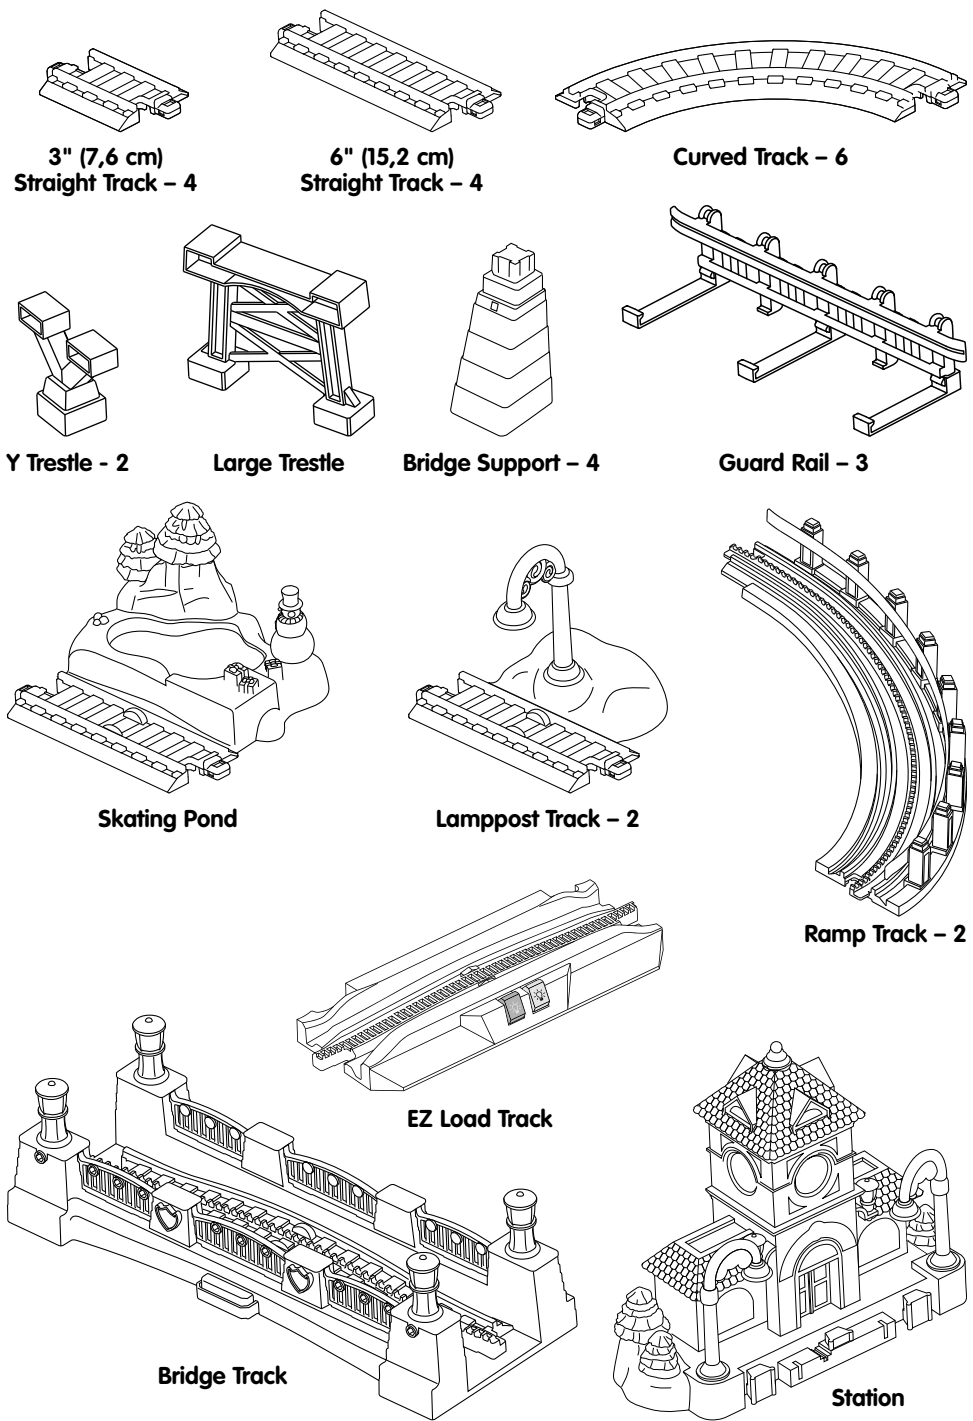

Consumer Information

FCC Statement (United States Only)
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

ICES-003

- This Class B digital apparatus complies with Canadian ICES-003.
- Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003

- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.
- L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Consumer Information

CONSUMER ASSISTANCE
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)
service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.


Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.




Battery Replacement

For best performance, replace the batteries that came with this toy with **alkaline** batteries. We recommend using **alkaline** batteries for longer battery life.

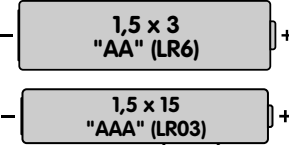


- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

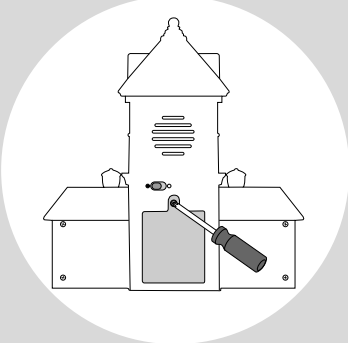

Station


- Loosen the screw in the battery compartment door and remove the door.
- Insert three “AA” (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If the station begins to operate erratically, you may need to reset the electronics. Slide the power switch off and then back on.

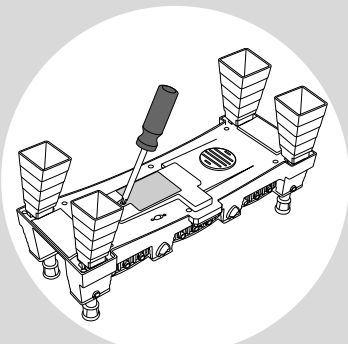

Bridge


- Loosen the screw in the battery compartment door and remove the door.
- Insert three “AAA” (LR03) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If the bridge begins to operate erratically, you may need to reset the electronics. Slide the power switch off and then back on.

Battery Replacement

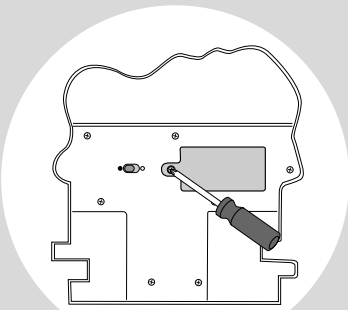


Skating Pond

- Loosen the screw in the battery compartment door and remove the door.
- Insert two “AAA” (LR03) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If the skating pond begins to operate erratically, you may need to reset the electronics. Slide the power switch off and then back on.

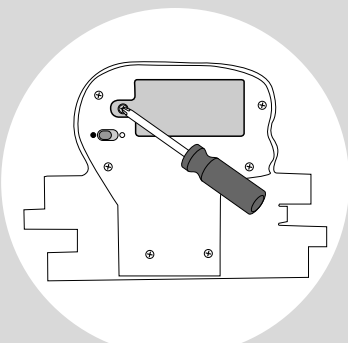

Lamppost

- Loosen the screw in the battery compartment door on the bottom of each lamppost and remove each door.
- Insert two “AAA” (LR03) **alkaline** batteries in each battery compartment.
- Replace each battery compartment door and tighten each screw.
- If one of the lampposts begins to operate erratically, you may need to reset the electronics. Slide the power switch off and then back on.

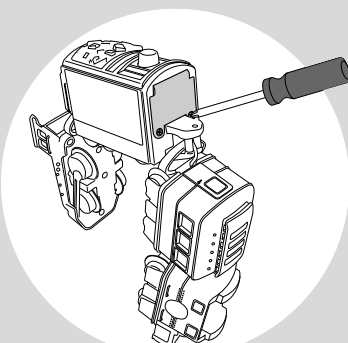


Train

- Loosen the screws in the battery compartment door and remove the door.
- Insert three “AAA” (LR03) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws.
- If the train begins to operate erratically, you may need to reset the electronics. Remove the batteries and replace them.

IMPORTANT! Under normal use conditions, the batteries in the vehicle will require replacement more often than the batteries in the remote controller. For additional information, see the troubleshooting section.

Battery Replacement

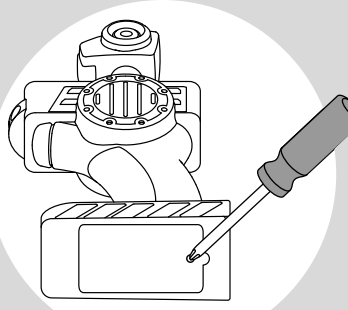

Remote Controller

- Loosen the screw in the battery compartment door and remove the door.
- Insert three “AAA” (LR03) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If the remote controller begins to operate erratically, you may need to reset the electronics. Remove the batteries and replace them.


- When sounds/lights/movement from this toy become faint or stop, it's time for an adult to change the batteries.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Assembly and Setup

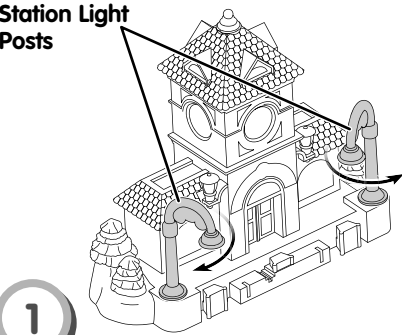


1

- Swing the station light posts out.

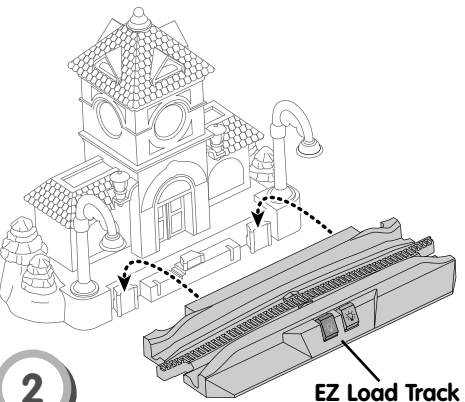


2

- Fit the EZ load track onto the tabs on the front of the station.

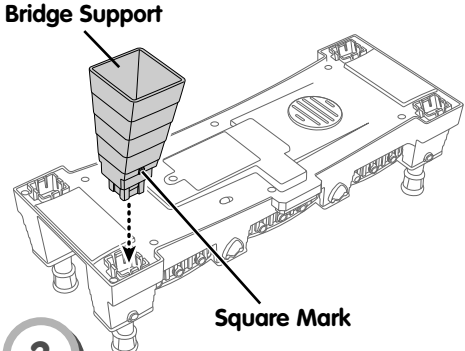

3

- Locate the square mark on a bridge support. Make sure the square is facing out, and “snap” the support into the underside of the bridge, as shown.
- “Snap” the remaining supports into the bridge.

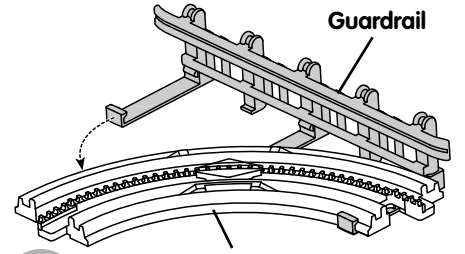

4

- “Snap” the guardrails to the curved tracks.

Assembly and Setup

5

Y Trestle

Ramp Track

6

Decorate the track! Fit the wreaths and trees onto the posts anywhere around the track assembly.

- “Snap” a Y trestle onto the bottom of a ramp track with guardrail.
- Repeat this procedure to assemble the other Y trestle to the ramp track with guardrail.

9

Track Layout

10

All Aboard!

Hint: We do not recommend using the vehicle on carpets. For best performance, use on hard, flat surfaces.

READY LIGHT

POWER BUTTON

4-Position Remote Controller

1 2 3 4

1 FORWARD (WITH SOUND EFFECTS)

2 FORWARD

3 OFF

4 REVERSE

- Press the power button on top of the middle train car. The ready light turns on.
- Hold the remote controller with the stick facing you. Point the remote controller toward the vehicle and push the stick forward 1. The vehicle moves forward.
- Pull the stick back a little to stop the vehicle 3.
- Pull the stick all the way back and the vehicle travels in reverse 4. Release the stick to stop 3.

Hints:

- If you do not operate the remote controller for a few minutes, the vehicle shuts off and the ready light turns off. Press the vehicle power button and operate the remote controller to restart.
- This toy works best if you have a clear path between the remote controller and the vehicle.
- Point the remote controller at the vehicle. The maximum range of the remote controller is about 12 feet (3,7 m).
- Wipe the toy with a clean, damp cloth. Do not immerse.

12

11

Let's Go!



- Locate the power switch on the bottom of the station, bridge, skating pond and lamp posts. Slide each power switch ON ●.
- Drive the train around the track for fun sounds and lights!


Lots of Holiday Fun!




- Watch the lights when the train drives past the skating rink or lamp posts.



- Listen to holiday music and watch the station light up when the train passes.
- Press the button on top of the station to light up the clock tower.
- Press the buttons on the front of the station for more festive lights!

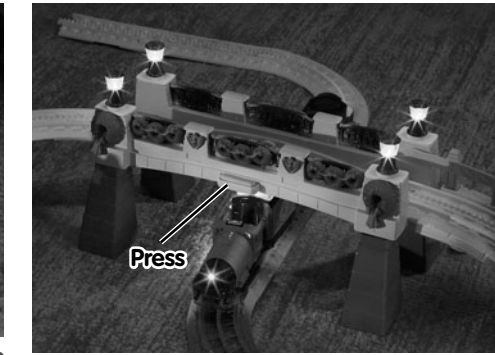



- Drive the train over the bridge for even more sounds and lights.
- Press the button on the side of the bridge to hear a holiday tune.
- When you are finished playing with this toy, slide the power switch on the station, bridge, skating pond and lampposts OFF ○.

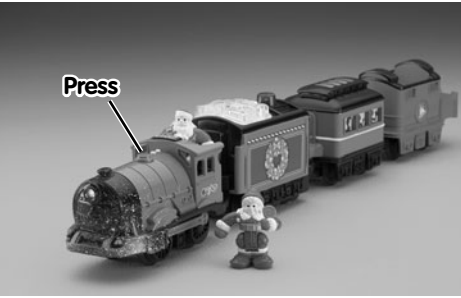

- Press the button on the top of the front train car to see it light up.

Care and Storage

IMPORTANT! Remove all batteries from the station, bridge, skating pond, lamppost, train and remote controller **BEFORE long-term storage** of this product.

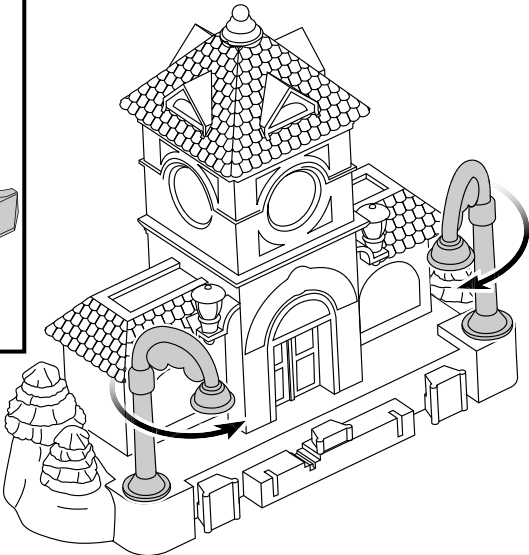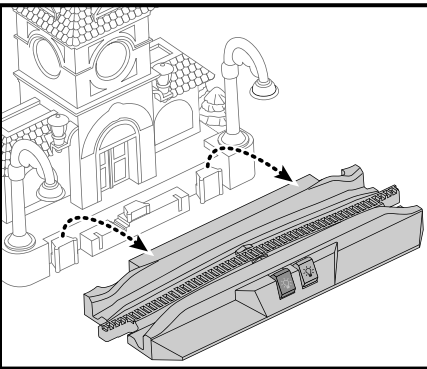

- Wipe this toy with a clean, damp cloth. Do not immerse this toy.
- This product has no consumer serviceable parts. Do not take this toy apart.
- All the parts easily store inside the box.
- Remove the EZ load track from the front of the station.
- Swivel the lamp posts inward, before storing the station.

Troubleshooting

PROBLEM	SOLUTION
Vehicle drives slowly	Battery power in the vehicle may be weak. Replace all three batteries in the vehicle with fresh, alkaline batteries.
	The wheels on the vehicle may be dirty. Wipe them with a clean cloth.
Vehicle does not respond to the remote controller	Battery power in the remote controller may be weak. Replace all three batteries in the remote controller with fresh, alkaline batteries.
	You may be beyond the maximum range of the remote controller, which is about 12 feet (3,7 m).
	You may not have a clear path between the remote controller and the vehicle. This toy works best when there are no obstructions between the vehicle and the remote controller.
	Bright sunlight or fluorescent lights may affect the range of the remote controller. Try dimming the room you are playing in.
	The vehicle may have shut off. If you do not operate the remote controller for a few minutes, the vehicle shuts off automatically and the ready light turns off. Press the power button on the vehicle, and operate the remote controller to restart.