



TouchPad

 
INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

WHAT'S INCLUDED

Your Learn Through Music TouchPad Interactive Learning System consists of two main components:

1. TouchPad
2. Software Cartridge

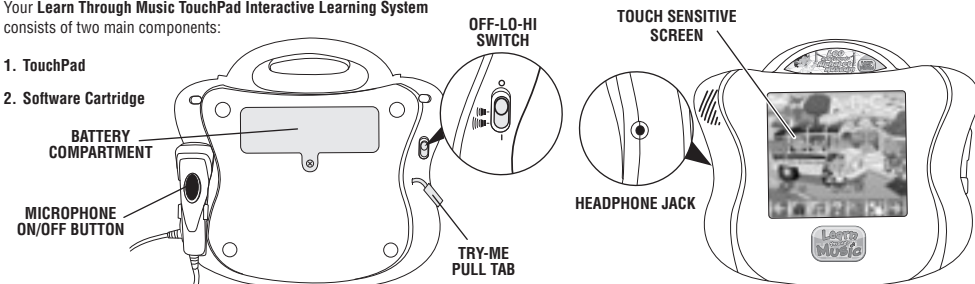

BEFORE YOU BEGIN

- Remove and discard the "Try Me" pull-tab, located on the back of the TouchPad next to the battery compartment (see battery diagram). Once the TRY ME pull tab is removed, the toy will perform its full play pattern as described below.
- Be sure the **OFF / LOW / HIGH SWITCH** is in either the **LOW** volume or **HIGH** volume position. The OFF / LOW/ HIGH SWITCH is also located on the back of the TouchPad, next to the battery compartment.

HOW TO PLAY

- Insert the cartridge face-front into the TouchPad, as shown; be sure you hear the cartridge click into place before you begin play.
- Touch the screen to begin play.
- Each software cartridge has several different play screens. Scroll through the screens by either:
 - Swiping your finger left or right across the screen, or
 - Pressing the **SCROLL LEFT** or **SCROLL RIGHT** buttons.

 
 
NOTE: The "swiping" feature works best if you swipe across the screen with just one finger as opposed to several fingers.

- Follow the directions for each screen. At any time you can press any of the following buttons:
 - **Music** - Plays a song
 - **Game** - Activates a bonus game
 - **Question** - Asks a question
 - **Home** - Returns you to the first screen
 - **Secret Spot** - Reveals a hidden secret



- You can also press the button on the microphone at any time to sing along with the music.
- If there is no cartridge inserted into the TouchPad, you can still press the screen for music and lights.

- Push down on both sides of the cartridge until you hear both sides click into place.

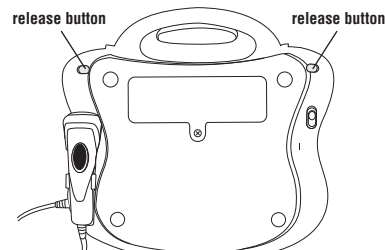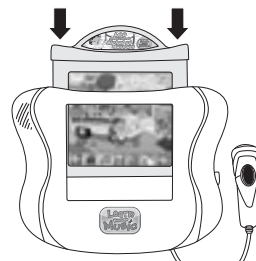

- To remove the cartridge, simply press the two release buttons on the TouchPad outwards, as shown. The cartridge will unlock and pop up slightly so you can pull it out easily.

BATTERY SAVE MODE

If the TouchPad is not played with for more than five minutes, it will automatically shut-off to preserve battery life. To resume play, simply touch the screen. Switching the power switch to OFF and then back ON will also restart the TouchPad.

 
BATTERY REPLACEMENT

Please keep these instructions for future reference as they contain important information.

BATTERY INSTALLATION:

Unscrew and lift away cover from back of product. Replace batteries as indicated inside the battery compartment. Batteries included are for demonstration purposes only. For longer life use only alkaline batteries. If this toy begins to operate erratically, you may need to reset the electronics. Remove the batteries from the toy and replace it. Requires 4 "AA" (LR6) Batteries.

REQUIRED TOOL: PHILLIPS SCREWDRIVER (NOT INCLUDED).

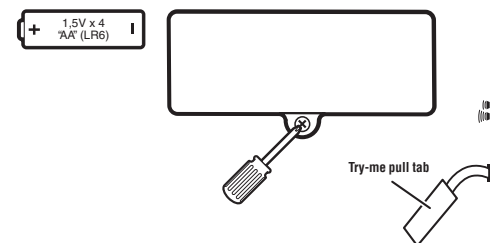

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

 
- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

- THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.
- CET APPAREIL NUMERIQUE DE LA CLASSE B EST CONFORME A LA NORME NMB-003 DU CANADA.

- Operation is subject to the following two conditions: (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- L'utilisation de ce produit est sujette aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

"When exposed to electrostatic discharge, the product may malfunction. You may reset the switch or replace the batteries to resume normal product operation."

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052, U.S.A.
PRINTED IN CHINA. Manufactured for Fisher-Price. ©2011 Mattel, Inc. All Rights Reserved.
 ® and ™ designate U.S. trademarks of Mattel, Inc., Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.



ID: V5864-0920 G2

CONSUMER ASSISTANCE

1-888-892-6123 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2: www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

04/18/2011 Remark for G2 -updated the copy

04/06/2011 Remark for G1 -added the copy on "how to play" section

Item No : V5864-0920
 Version : US English
 Size : 5.5"(W) x 8"(H)
 Paper : Woodfree paper 80 gsm
 Color : Black
 Date : 04/06/2011 (Tracy Mui)