

#### BATTERY REPLACEMENT:

- ADULTS NOTE: Batteries included are for demonstration purposes only.
- Remove batteries included for demonstration purposes and dispose of them safely.
- To replace batteries, use a Phillips head screwdriver (not included) to open the battery cover. Remove and set aside.
- Install 3 new button cell (AG13, LR44) batteries as shown. Replace battery cover and tighten screws.
- Before immersing toy in water, be sure batteries are in place with battery cover tightly secured flush against back of toy.
- Replace batteries when lights dim or stop entirely.

Mermaid is fully immersible. Water toys sometimes get messy. Protect play surfaces before use. Drain, rinse, clean and dry all items thoroughly before storing.



Protect the environment by not disposing of this product with household waste [2002/96/EC]. Check your local authority for recycling advice and facilities.

#### BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:


- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697.  
 Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303.  
 Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.  
 Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.  
 Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.  
 (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe,  
 Persiaran Tropicana Golf Country Resort, 47410 PJ.  
 Tel:03-78803817, Fax:03-78803867.

#### CONSUMER INFORMATION

Need Assistance? Visit [service.mattel.com](http://service.mattel.com) or call 1-800-524-8697 (US and Canada only).

[SERVICE.MATTEL.COM](http://SERVICE.MATTEL.COM)

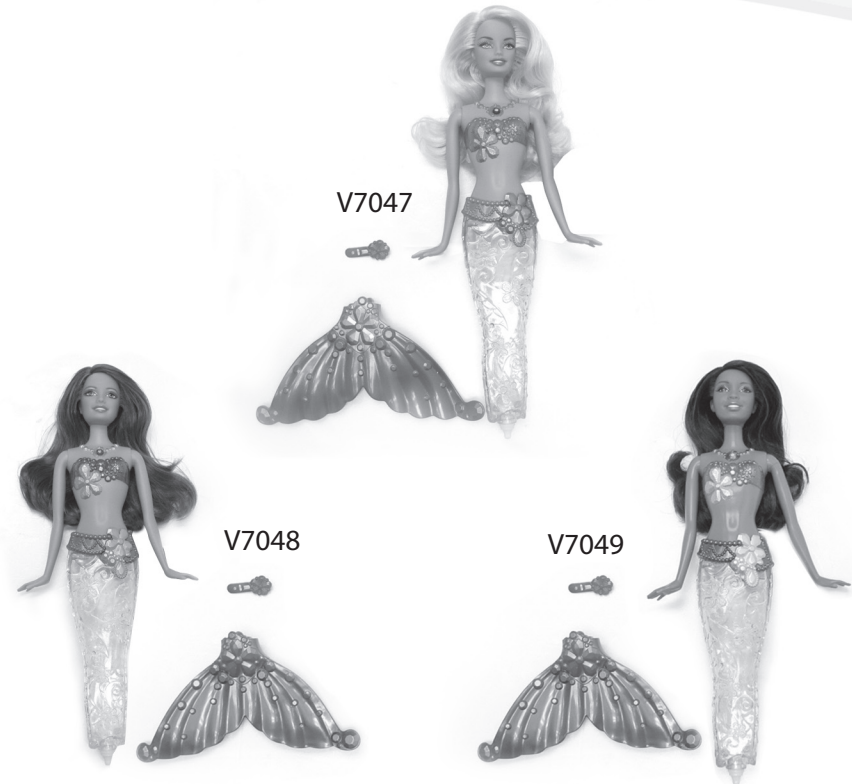



Doll cannot stand alone.  
 Each set sold separately, subject to availability.

Contents: Please remove everything from the package and compare to the contents shown here. If any items are missing, please contact your local Mattel office. Keep these instructions for future reference as they contain important information.



V7047-0920  
 V7048-0920  
 V7049-0920

**WARNING:**  
 CHOKING HAZARD - Small parts.  
 Not for children under 3 years.

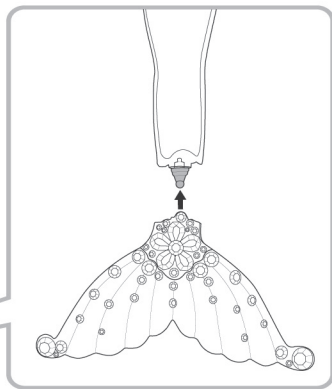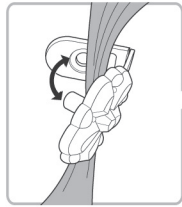

One-time snap assembly



Press ...  
tail lights up in and out of water.

