

Fisher-Price®



**Please keep this instruction sheet for future reference,
as it contains important information.
Actual product may appear different than the one
shown in the photo.**

Toy Washing Instructions

- For best results, wash this toy within 48 hours after doodling.
- Place the toy in a pillow case. Machine wash in cold water on the gentle cycle. Do not use bleach.
- Do not tumble dry unless all marker stains are removed from the toy. Tumble drying can cause stains to set. Tumble dry on low heat.

Consumer Information

- Only use the washable markers that came with this toy.
- Replace the cap on the marker after each use.
- Markers may stain other fabrics and surfaces. Avoid contact with carpet, clothing, walls and furniture.
- Some markings on other surfaces may be removed on surfaces using an alcohol-based hand sanitizer. We recommend that an adult apply a small amount of hand sanitizer to a paper towel, tissue or cotton swab and then wipe the stain. Be sure to test the use of hand sanitizer in an inconspicuous area first.
- To remove markings from skin, use soap and water.



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)

1300 135 312 (Australia)

 service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.

Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Fisher-Price, Inc., a subsidiary of Mattel, Inc.,
East Aurora, New York 14052, U.S.A.

©2010 Mattel, Inc. All Rights Reserved. ® and ™
designate U.S. trademarks of Mattel, Inc.