

**Fisher-Price®**

**W1910**



Please keep this instruction sheet for future reference,  
as it contains important information.


Requires three "C" batteries (included) for operation.

Adult assembly is required.


Tool required for battery replacement: Phillips screwdriver (not included).

**[www.fisher-price.com](http://www.fisher-price.com)**

# Assembled Parts

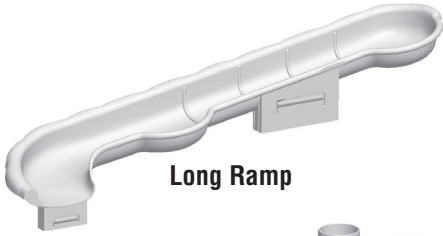

Long Ramp

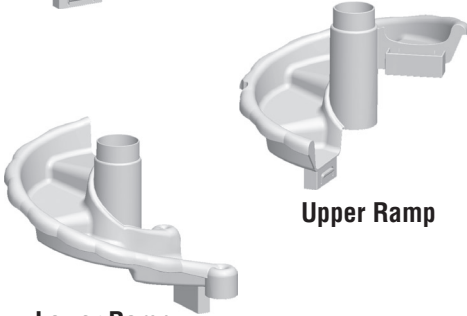

Upper Ramp

Lower Ramp



 
Ferris Wheel



Canopy




Tube




Ramp Base


# Assembly

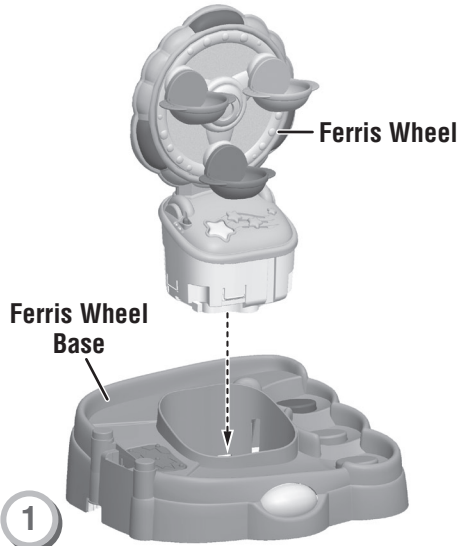

- Insert and **“snap”** the ferris wheel into the ferris wheel base.

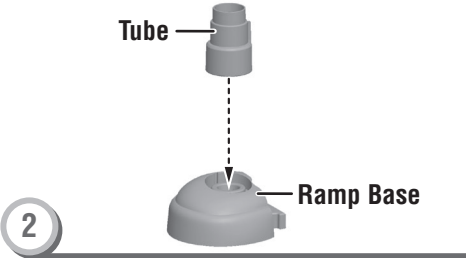


- Insert and **“snap”** the tube into the ramp base.

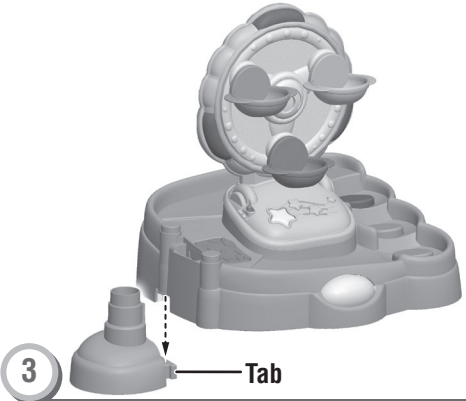


- Fit the ferris wheel base onto the tab on the ramp base.

Ferris Wheel Base


# Assembly

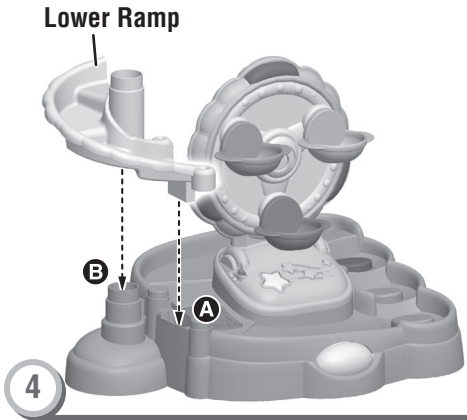


- First, "snap" the tab on the lower ramp into the slot in the ferris wheel base **A**.
- Then, fit the lower ramp tube onto the base tube **B**.

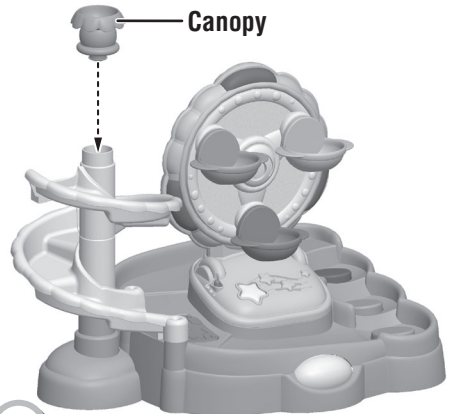

- Insert and "snap" the canopy into the tube on the ramp assembly.

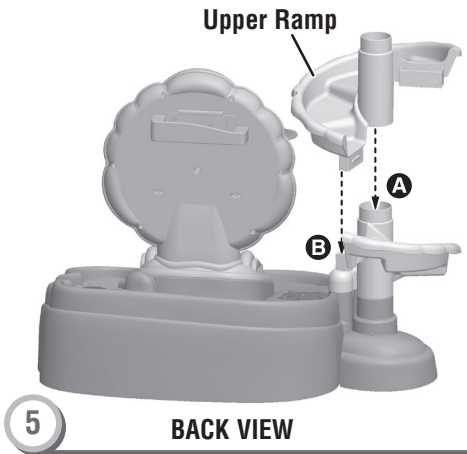

- First, fit the upper ramp tube onto the lower ramp tube **A**.
- Then, "snap" the tab on the upper ramp into the slot on the lower ramp **B**.

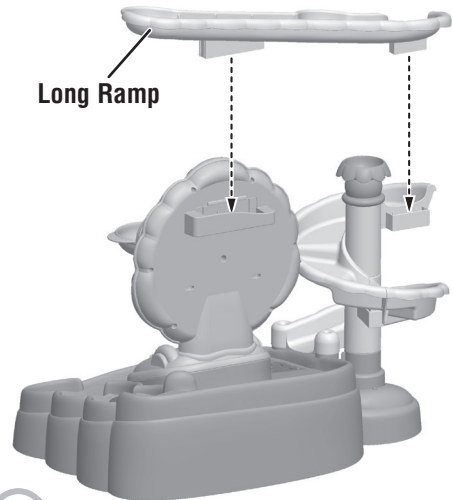

- Fit the tabs on the long ramp into the slot in the ferris wheel and upper ramp.
- Push each tab to "snap" in place.

# Consumer Information



## CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)  
1300 135 312 (Australia)

**service.fisher-price.com**

---

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers: 1-800-382-7470.

---

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk)

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

## Care

- Wipe this toy with a clean, damp cloth. Do not immerse.
- This toy has no consumer serviceable parts. Do not take this toy apart.

## ICES-003

- This Class B digital apparatus complies with Canadian ICES-003.
- Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## NMB-003

- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.
- L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes:
  - (1) il ne doit pas produire de brouillage et
  - (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

## FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.


This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

# Battery Replacement

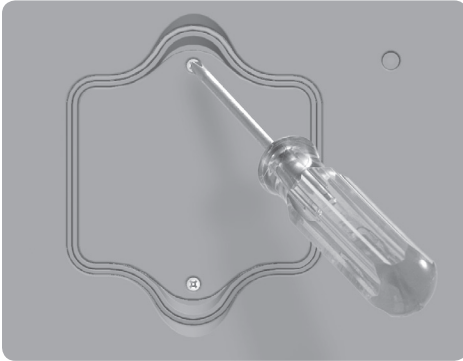


**For best performance, we recommend replacing the batteries that came with this toy with three, new “C” (LR14) alkaline batteries.**

- Locate the battery compartment on the bottom of the toy. Loosen the screws in the door with a Phillips screwdriver and remove it.
- Remove the exhausted batteries and dispose of them properly.
- Insert three, new “C” (LR14) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.
- When sounds, light or motion from this toy become faint or stop, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

 
# Battery Safety Information






In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.
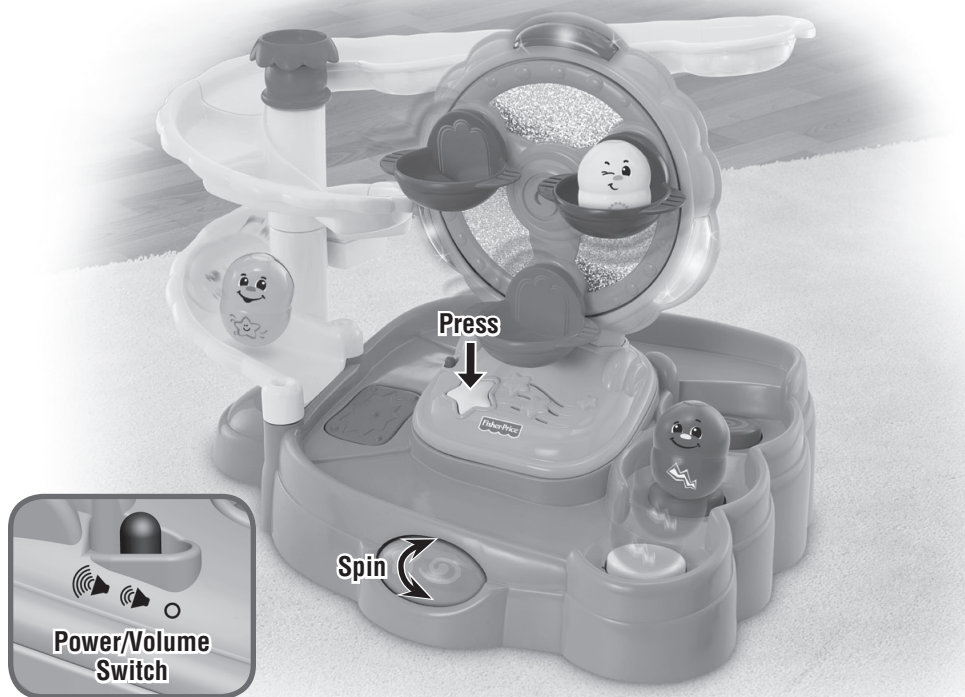
# Ready, Set, Tumble!



- Slide the power/volume switch to ON with low volume  or ON with high volume .
- Press the star button or spin the roller to start the ferris wheel with music and lights!
- Place a tumbler on the ramp for end-over-end action. Then, watch them pop up the magic steps for pop-up, tumble-down fun!
- When you are finished playing with this toy, slide the power/volume switch OFF .