 




# Fantastic Gymnastics Dora

 
Please keep these instructions for future reference as they contain important information.

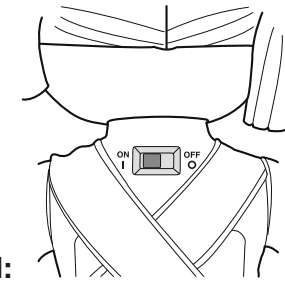

### BEFORE YOU BEGIN:

Be sure the ON/OFF switch is in the ON position. The ON/OFF switch is located on the back of Dora's neck, above the battery compartment.

Turn Dora's head so she is facing forward before she begins to play.

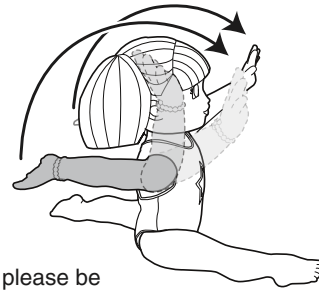


### PLEASE NOTE:

When adjusting Dora's arms, please be aware that Dora's arms only move in one direction (upwards when behind her; downwards when in front of her). Do not force the arms to move in the opposite direction – this will cause damage to the toy.


## HOW TO PLAY

 Place Dora in one of the following 4 positions to start:

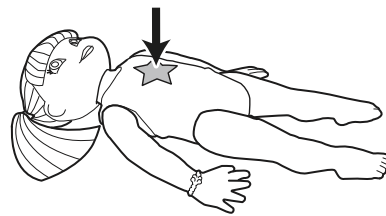

### 1 ON HER BACK WITH ARMS DOWN

 - Lay Dora on her back with her arms down and press the button on her chest.
- Dora will perform a "warm-up" sequence, followed by her floor routine, which includes:
  - Leg Lifts
  - A Backbend
  - A Backbend With Kicks
  - A Handstand
  - A Handstand Split
- Dora will then land on the floor in a "Push-Up" position.

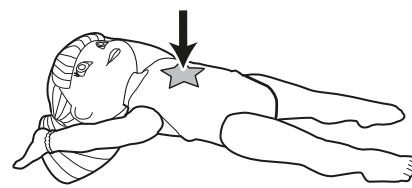


### 2 ON HER BACK WITH ARMS UP

- Lay Dora on her back with her arms up and press the button on her chest.
- Dora will count off while doing "Toe Touches".


### NOTE:

 - For best performance, use on a hard, flat surface.
- If Dora malfunctions in any way, you can re-set her by turning her OFF and then ON again using the ON/OFF switch.

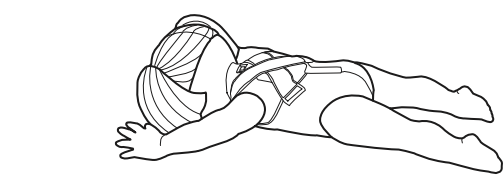


### 3 ON HER TUMMY WITH ARMS UP

 - Lay Dora on her tummy with her arms up.
- She will raise herself up into a "Push-Up" position.

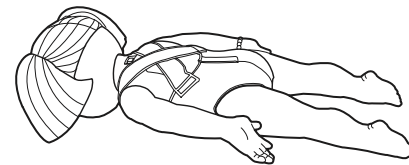

### 4 ON HER TUMMY WITH ARMS DOWN

 - Lay Dora on her tummy with her arms down.
- She will raise herself up into a "Split".
- She will then ask, "Will you help me stretch my arms up?"
- Move her arms into the upright position.


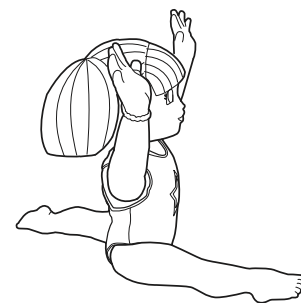


- She will then say, "Hold my hands and lift me up to check my super split move".
- Hold Dora by the hands and lift her while she's in the split position and she will do her special "Super Splits".

### BATTERY INSTALLATION:

  Unscrew and lift away cover from back of product.  
 Replace batteries as indicated inside the battery compartment.  
 Batteries included are for demonstration purposes only.  
 For longer life use only alkaline batteries.  
 If this toy begins to operate erratically, you may need to reset the electronics.  
 Remove the batteries from the toy and replace them.  
 Requires 4 "AA" (LR6) batteries.

Move switch the ON position for full play mode.

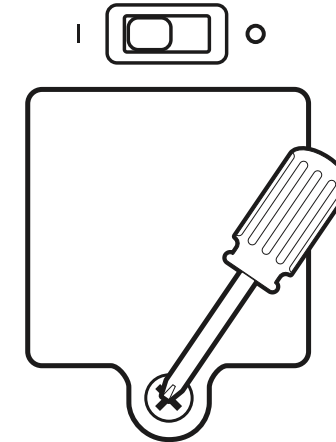

REQUIRED TOOL: PHILLIPS SCREWDRIVER (NOT INCLUDED).

### BATTERY SAFETY INFORMATION

- In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:
- Non-rechargeable batteries are not to be recharged.
  - Rechargeable batteries are to be removed from the product before being charged.
  - Rechargeable batteries are only to be charged under adult supervision.
  - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
  - Do not mix old and new batteries.
  - Only batteries of the same or equivalent type as recommended are to be used.
  - Batteries are to be inserted with the correct polarity.
  - Exhausted batteries are to be removed from the product.
  - The supply terminals are not to be short-circuited.
  - Dispose of battery(ies) safely.
  - Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

- THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.
- CET APPAREIL NUMERIQUE DE LA CLASSE B EST CONFORME A LA NORME NMB-003 DU CANADA.

- Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- L'utilisation de ce produit est sujette aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

**CONSUMER ASSISTANCE**  
 1-800-432-5437 (US & Canada)  
 1300 135 312 (Australia)  
**service.fisher-price.com**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers: 1-800-382-7470.

#### Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

©2012 Viacom International Inc. All Rights Reserved. Nickelodeon, Nick Jr., Dora the Explorer and all related titles, logos and characters are trademarks of Viacom International Inc.

©2012 Mattel. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, except as noted. PRINTED IN CHINA. Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.



Item No : W2181-0920  
Version : US  
Size : A4  
Paper : Woodfree paper 70 gsm  
Color : Black  
Date : 03/14/12 (Vita)