

Fisher-Price®


W2620



Overhead Gym




Tummy-time fun

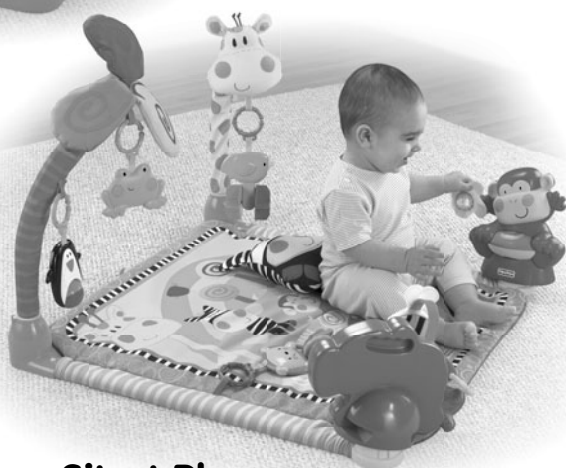

Sit-at Play

www.fisher-price.com

 Parts



Giraffe



Palm Tree




Zebra Bolster



2 Supports




Elephant Mirror

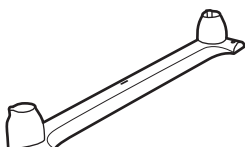

Cross Brace




Bee

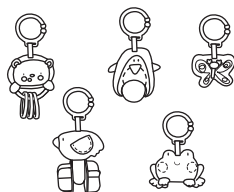

5 Hanging Toys




Monkey Toy

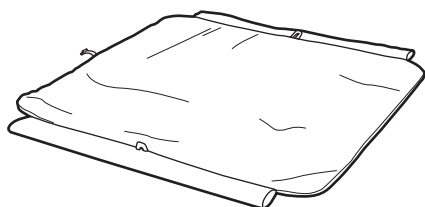


Quilt

One-Time Assembly

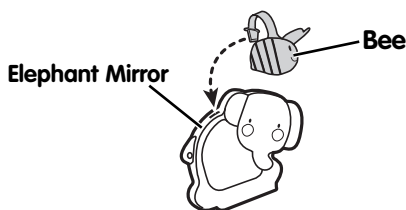


- Fit the tab on the end of the bee into the socket in the elephant mirror. Push to "snap" in place.

Setup

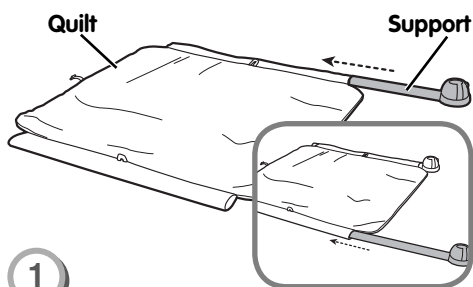

1


- Place the quilt, print side up, on a flat surface.
- Slide a support through each sleeve in the quilt, as shown.

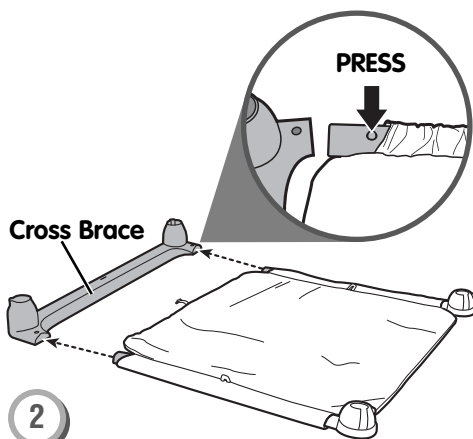


2

- While pressing the button on the end of each support, fit them into the openings on the cross brace. Make sure you hear a "click".


Setup

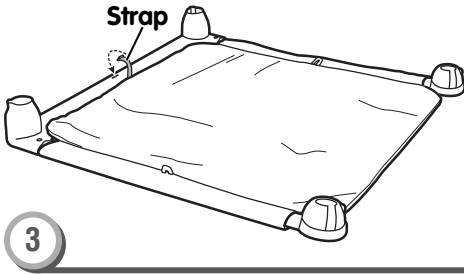

- Fit the end of the strap on the quilt into the slot on the cross brace.

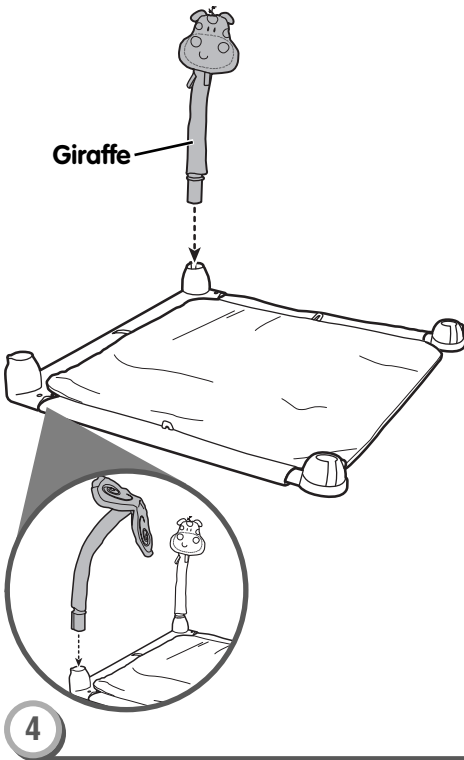


- Fit the giraffe and palm tree into the sockets in the cross brace.

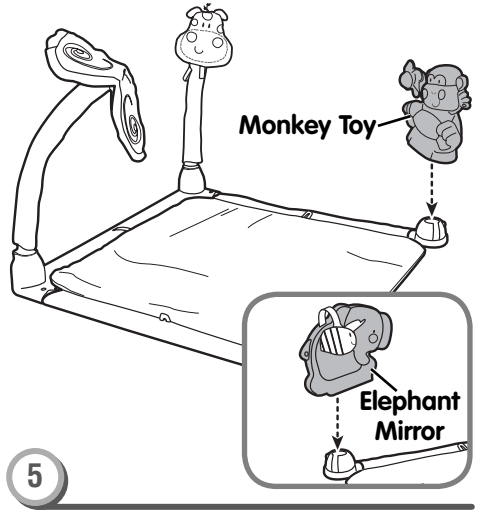

- Fit the monkey toy and elephant mirror onto the posts.

Hint: These toys are designed to fit onto the posts one way. If a toy does not seem to fit, try the other post.

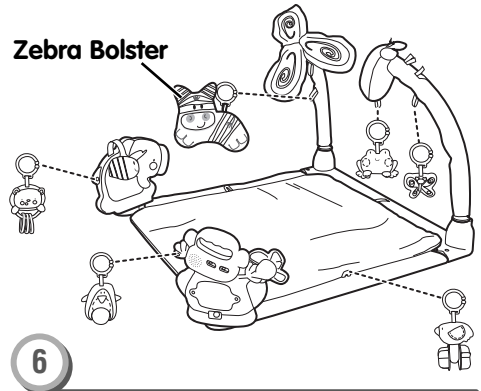

- Attach the zebra bolster to the palm tree (or the giraffe).
- Attach the hanging toys to the loops around the gym.

Consumer Information



CONSUMER ASSISTANCE
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)
service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

- Please keep this instruction sheet for future reference, as it contains important information.
- Adult assembly is required.
- Requires three "AA" batteries (included) for monkey toy operation. Required tool for battery replacement: Phillips screwdriver (not included).

Care

- Machine wash the quilt and zebra bolster in cold water on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- Surface wash all other parts of this toy with a mild cleaning solution and damp cloth. Do not use bleach. Do not immerse the monkey toy. Rinse clean to remove residue.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.


 
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Battery Replacement

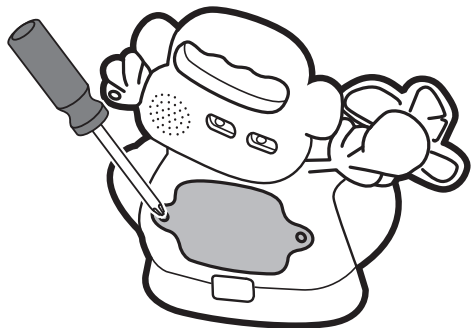

For best performance, we recommend replacing the batteries that came with this toy with three new "AA" (LR6) alkaline batteries.

- Loosen the screws in the battery compartment toy. Remove the door.
 - Remove the exhausted batteries and dispose of them properly.
 - Insert three, new "AA" (LR6) **alkaline** batteries.
 - Replace the battery compartment door and tighten the screws. Do not over-tighten.
 - If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.
 - When sounds or lights become faint or stop, it's time for an adult to change the batteries.
-  • Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

ICES-003

This Class B digital apparatus complies with Canadian ICES-003.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003


Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Lively Music!



WARNING

To prevent entanglement injury, never place gym in a crib or playpen. Never add strings, ties or other products to the gym.

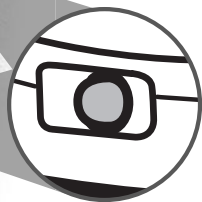

- Slide the power/volume switch on the monkey toy to ON with low volume ◀▶ or ON with high volume ◀▶▶.
- Slide the mode switch to **short play** or **long play**.
 - 🔊 **Short Play** - Spin the roller for lights and a short ditty.
 - 🎵 **Long Play** - Spin the roller for approximately 20 minutes of music.
- When you are finished playing with this toy, slide the power/volume switch OFF ○.
- Press the button on the side of the elephant and the back of the monkey to remove from the posts.