

FRONT

HotWheels
MEGA LOOP MAYHEM™
INSTRUCTIONS

Keep these instructions for future reference as they contain important information.

CONTENTS

Requires 4 "D" (LR20) Alkaline batteries (not included). Dispose of batteries safely.

©2012 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 P.J. Tel:03-78803817, Fax:03-78803867. service.mattel.com

8.

9.

TO PLAY


1. Switch power ON and load vehicle.

2. Launch!

3. Launch more vehicles for crashing action!

BATTERY INSTALLATION


- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Install 4 new "D" alkaline batteries in the orientation (+/-) shown.
- Replace battery cover and tighten screws.
- Replace batteries when booster can no longer propel car through the track set.
- For best performance, use only alkaline batteries.

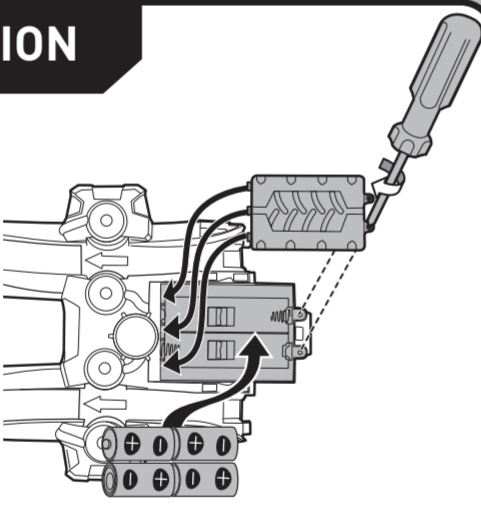

- BATTERY SAFETY INFORMATION**
- In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:
- Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are to be removed from the product before being charged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Do not mix old and new batteries.
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Batteries are to be inserted with the correct polarity.
 - Exhausted batteries are to be removed from the product.
 - The supply terminals are not to be short-circuited.
 - Dispose of battery(ies) safely.
 - Do not dispose of this product in a fire. The batteries inside may explode or leak.

Protect the environment by not disposing of this product with household waste [2002/96/EC]. Check your local authority for recycling advice and facilities.

OPERATING TIPS

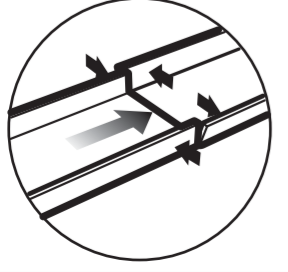

Adjust track side walls at each connection point as shown.

ASSEMBLY

1.

2.

3.

4.

5.

6.

7.

BACK

INSTRUCTION SHEET SPECIFICATIONS

Toy: HW TURBO GARAGE
 Toy No.: W3411
 Part No.: 0920
 Trim Size: 16.5" W x 8.5" H
 Folded Size: 5.5" W x 8.5" H
 Type of Fold: Single
 # colors: One
 Colors: Black
 Paper Stock: White Offset
 Paper Weight: 70 lb.
 EDM No.:
 Date: 09/05/2011

