

Color-change!



For best performance of color-change feature, please use icy cold water under 50°F/10°C. Color change goes back to the original color by applying warm water. To avoid burns do not use water that is too hot, above 120° F/48° C. Color change will last longer if you do not expose this toy to intense heat or direct sunlight for prolonged periods of time.

Water toys sometimes get messy. Protect play surfaces before use. Drain, rinse, clean and dry all items thoroughly before storing.

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1-800-524-8697 (US and Canada only).

SERVICE.MATTEL.COM

Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697.

Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303.

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.

Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 P.J. Tel:03-78803817, Fax:03-78803867.

INSTRUCTIONS

3+



CONTENTS



Doll cannot stand alone.



Please remove everything from the package and compare to the contents shown here. If any items are missing, please contact your local Mattel office.

Keep these instructions for future reference as they contain important information.

©2011 Mattel, Inc. All Rights Reserved.

INSTRUCTIONS SHEET SPECIFICATIONS

Toy: DSNY BTH BTY RPNZL

Toy No.: W5580

Part No.: 0920 - DOM

Trim Size: 5.5 " W x 8.5 " H

Folded Size: _____

Type of Fold: 2 panel

colors: One

Colors: Black

Paper Stock: White Offset

Paper Weight: 70 lb.

EDM No.: _____