



Please keep this instruction sheet for future reference,
as it contains important information.

Requires five "AAA", three "AA"
and three LR44 button cell batteries (all included).

Adult assembly is required. Tool required: Phillips screwdriver (not included).

www.fisher-price.com


Assembly



CAUTION


This package contains small parts in an unassembled state. Adult assembly is required.

Attic Roof

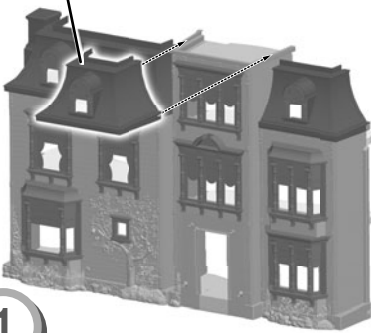

1


- Slide the attic roof onto the top of the dollhouse until it “snaps” in place.

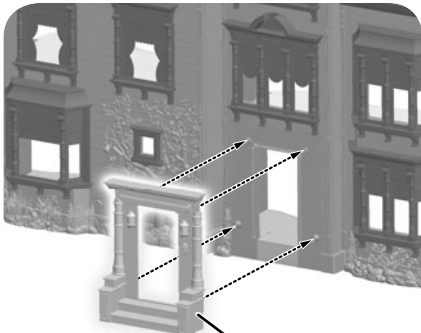

Doorway

2

- Fit the doorway onto the front of the house.

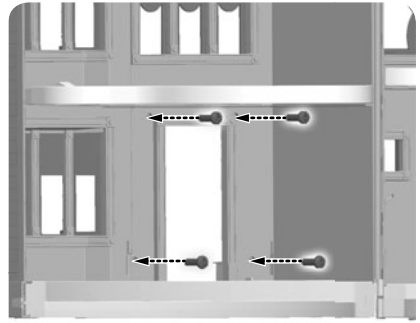


3

BACK VIEW



- From inside the house, insert four #6 x 1/2" (1,3 cm) screws into the house and tighten with a Phillips screwdriver. Do not over-tighten.

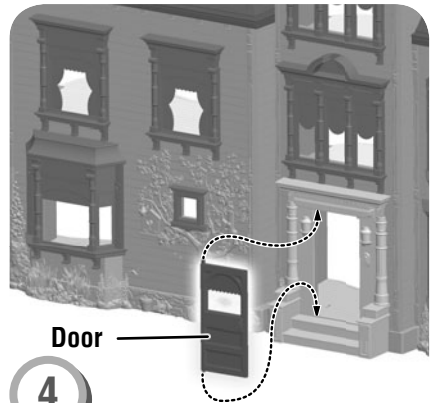



Door

4




- At an angle, fit the peg on top of the door into the hole in the top of the door frame.
- Bend the door slightly and fit the bottom peg into the hole in the bottom of the door frame.

Let's Decorate!

- Apply labels as shown in the illustrations.
- Apply the top corners of a label first and smooth downward to remove air bubbles.
- For best results, avoid repositioning a label once it has been applied.
- The label sheet also contains several extra labels you can place where ever you like.

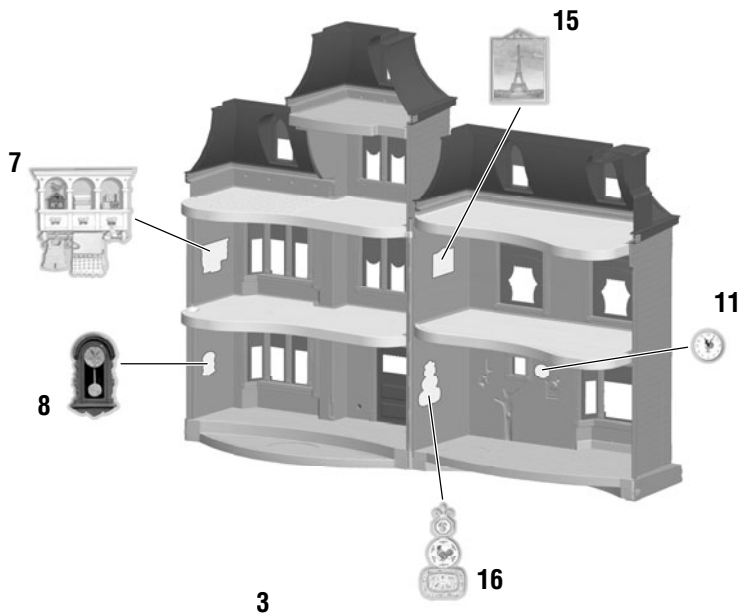
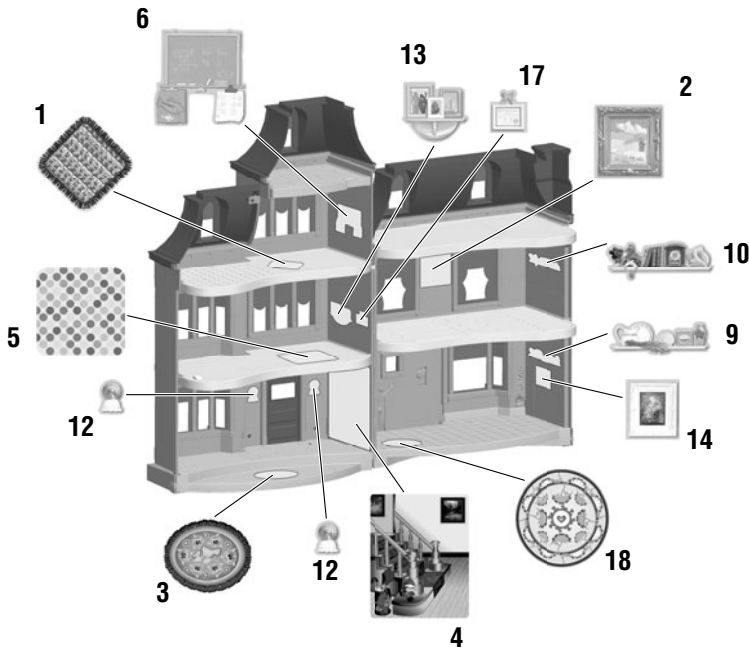


Let's Decorate!

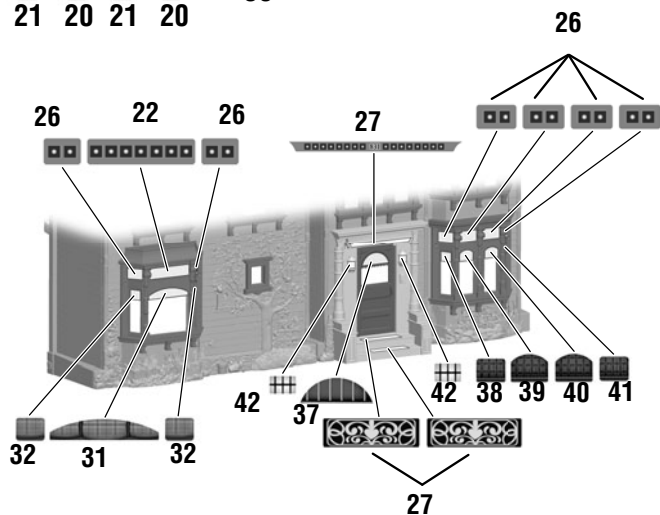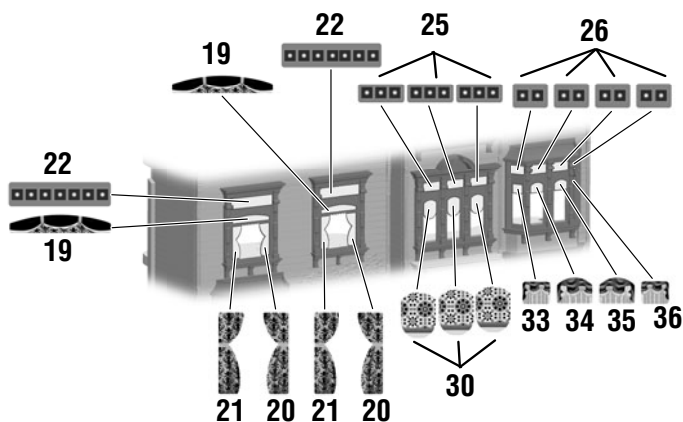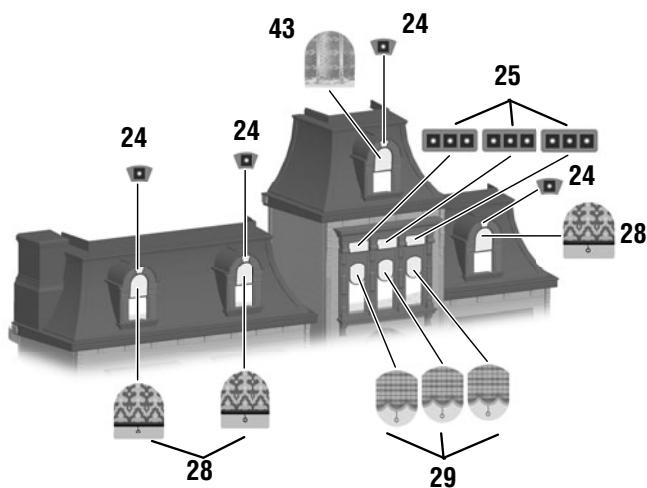

Battery Installation

 
When sounds or lights become faint or stop, it's time for an adult to change the batteries. We recommend replacing the batteries with **alkaline** batteries for longer battery life.

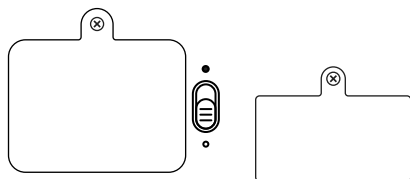



Tree

Stove

 -
- Loosen the screw in each battery compartment door with a Phillips screwdriver and remove it.
 - Insert three, new "AAA" (LR03) **alkaline** batteries in the tree and two, new "AAA" (LR03) **alkaline** batteries in the stove.
 - Replace each battery compartment door and tighten each screw. Do not over-tighten.
 - If the tree begins to operate erratically, you may need to reset the electronics. Slide the power switch off and back on.
 - If the stove begins to operate erratically, you may need to reset the electronics. Remove the batteries and reinstall.



 1.5V x 3
LR44 or equivalent

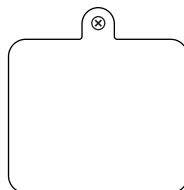

Fireplace


Wreath

-
- Loosen the screw in each battery compartment door with a Phillips screwdriver and remove it.
 - Insert three, new "AA" (LR6) **alkaline** batteries in the fireplace and three, new LR44 **alkaline** button cell batteries in the wreath.
 - Replace each battery compartment door and tighten each screw. Do not over-tighten.
 - If the fireplace or wreath begin to operate erratically, you may need to reset the electronics. Remove the batteries and reinstall.


Happy Holidays!



- Slide the power switch on the tree ON ● or OFF ○.
- Press the present under the tree for sounds and lights.

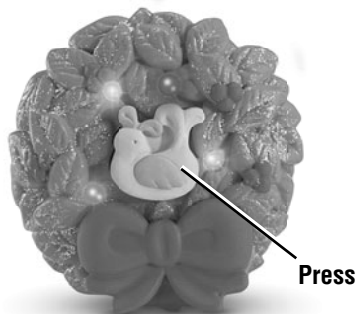

-
- Hang the wreath on the front door.
 - Press the button for lights and sounds.

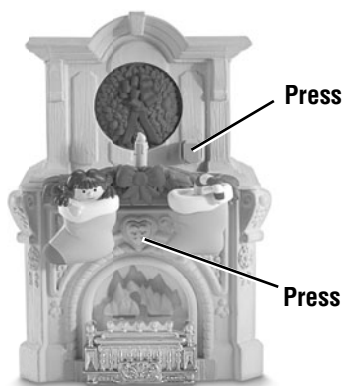


-
- Press the button on the mantle to turn the wreath and start the fire while you listen to fun tunes!
 - Press the heart button to hear more sounds.



-
- Press the button on the stove top for realistic kitchen sounds.

Storage

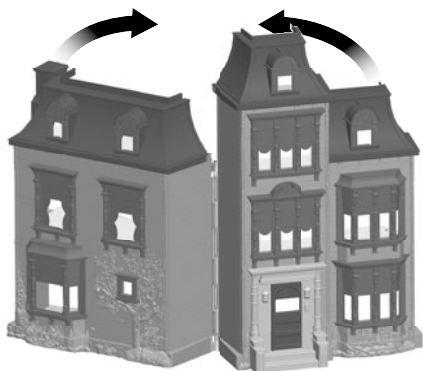

- Store everything inside the house.
- Push the sides of the house together and latch in place.
- To open the house, lift the the side of the house slightly to unlatch.



- To carry, simply grasp the attic floor and lift.

Care

- Wipe each part of this toy with a clean, damp cloth. Pillows are surface washable only. Do not immerse any part of this toy.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Consumer Information

**CONSUMER ASSISTANCE**
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)
service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:
Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.
Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk
Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.
Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

ICES-003

- This Class B digital apparatus complies with Canadian ICES-003.
- Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003

- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.
- L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.