



W5636



Please keep this instruction sheet for future reference,
as it contains important information.


Requires five "AAA", three "AA"
and three LR44 button cell batteries (included).

Adult assembly is required.

Tool required: Phillips screwdriver (not included).


www.fisher-price.com

Assembly

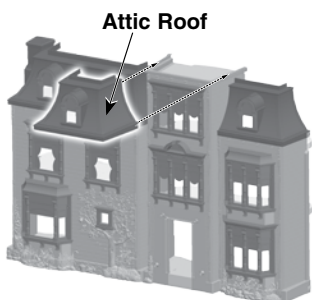

1


- Slide the attic roof onto the top of the dollhouse until it **"snaps"** in place.

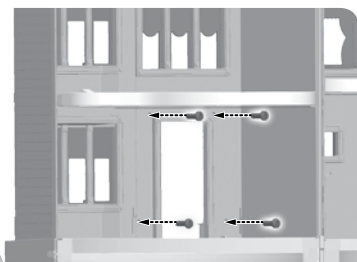

3

BACK VIEW

- Insert four #6 x $\frac{3}{4}$ " screws into the holes and tighten with a Phillips screwdriver. Do not over-tighten.

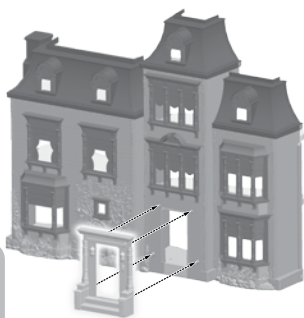

2

- Fit the porch onto the front of the house.




4




- At an angle, fit the peg on top of the door into the hole in the door-frame. Bend the door slightly and fit the bottom peg into the hole in the bottom of the doorframe.

Label Decoration

- Apply labels as shown in the illustrations.
- Apply the top corners of a label first and smooth downward to remove air bubbles.
- For best results, avoid repositioning a label once it has been applied.
- The label sheet also contains several extra labels you can place where ever you like.


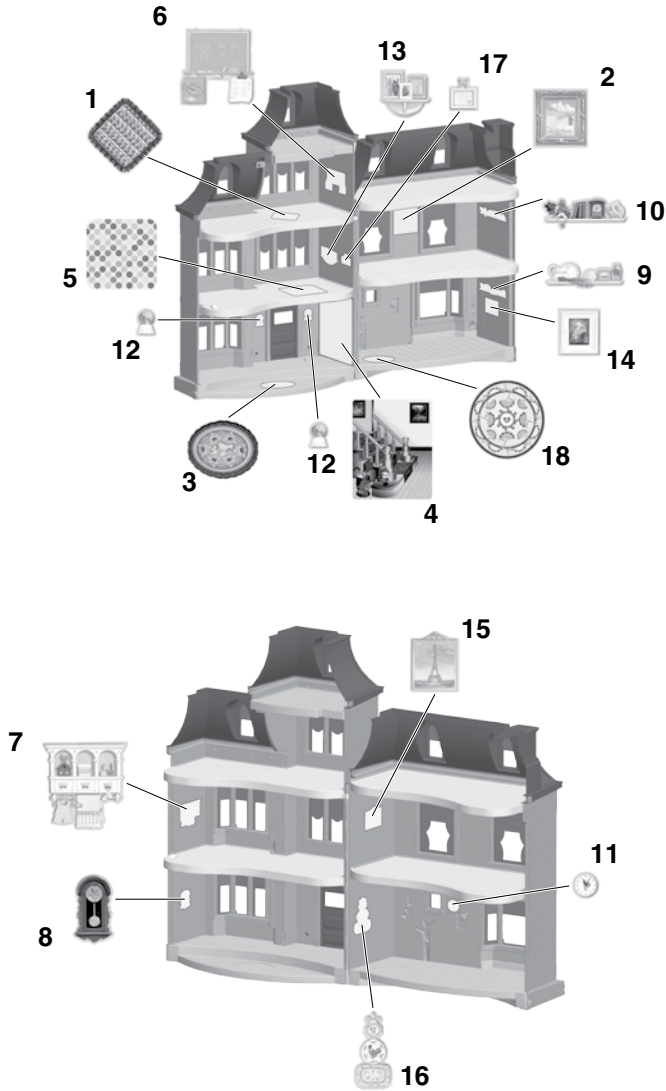


Label Decoration

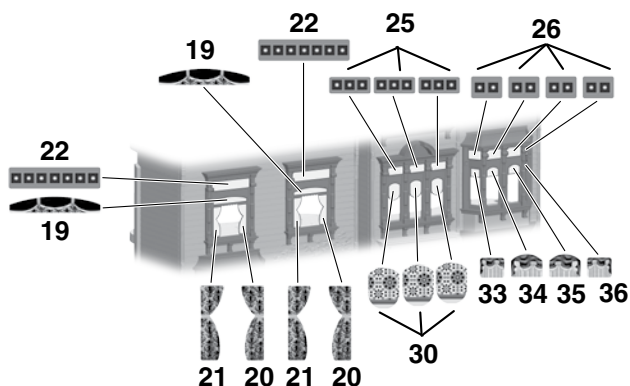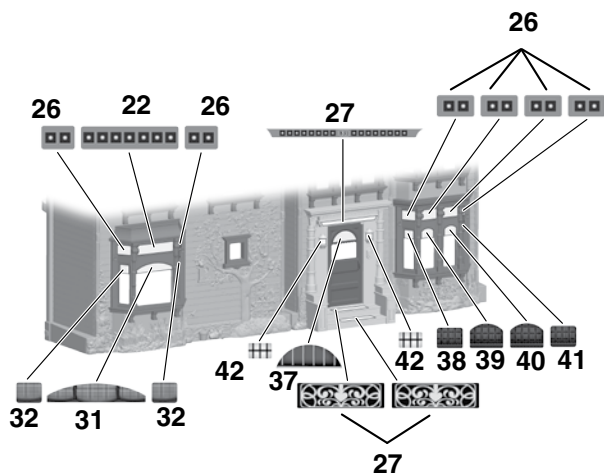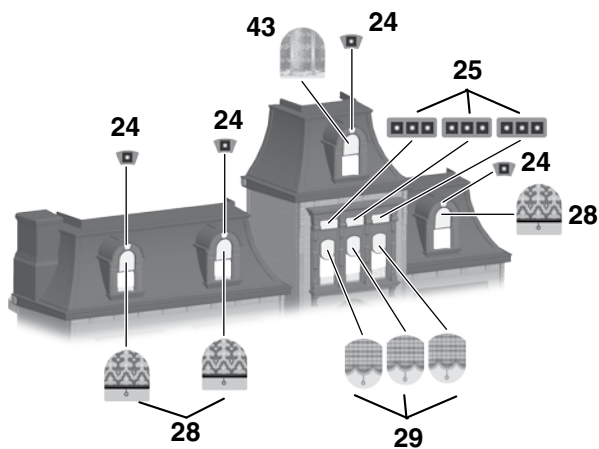


Battery Installation

 When sounds or lights become faint or stop, it's time for an adult to change the batteries. We recommend replacing the batteries with **alkaline** batteries for longer battery life.

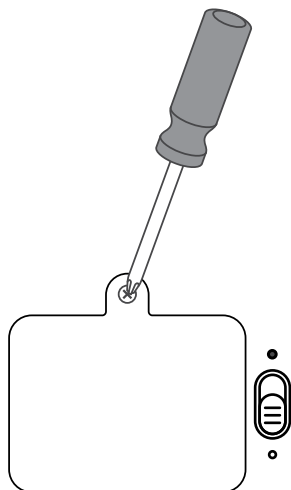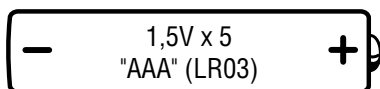

Tree


- Locate the battery compartment on the bottom of the tree.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove it.
- Insert three, new "AAA" (LR03) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not overtighten.
- If the tree begins to operate erratically, you may need to reset the electronics. Slide the power switch off and back on.

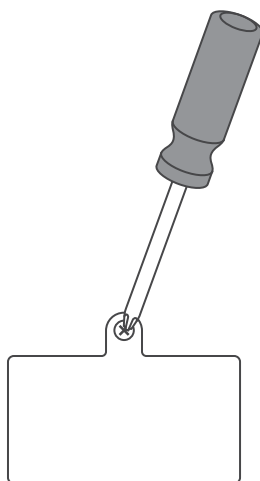


Stove

- Loosen the screw in the battery compartment door and remove it.
- Insert two, new "AAA" (LR03) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If the stove begins to operate erratically, you may need to reset the electronics. Remove the batteries and replace them.

 Battery Installation

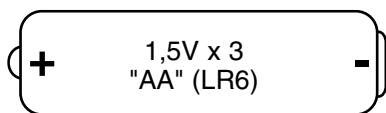


1,5V x 3 LR44

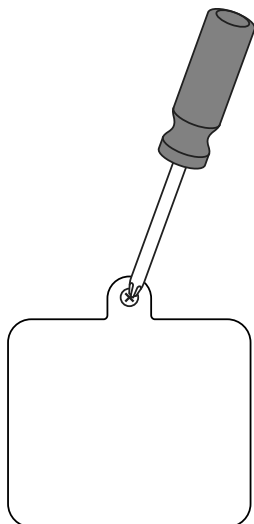

Fireplace

- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove it.
- Insert three, new "AA" (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If the fireplace begins to operate erratically, you may need to reset the electronics. Remove the batteries and replace them.

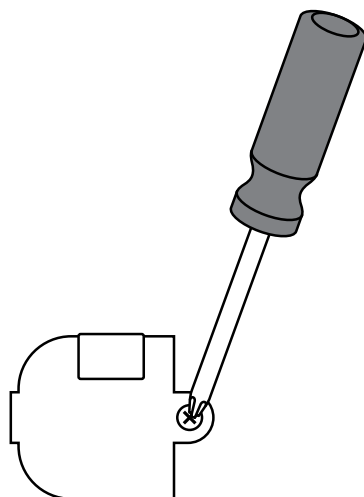

Wreath

- Loosen the screw in the battery compartment door and remove it.
- Remove the exhausted batteries and dispose of them properly.
- Insert three new LR44 **alkaline** button cell batteries.
- Replace the battery compartment door and tighten the screw.
- If the wreath begins to operate erratically, you may need to reset the electronics. Remove the batteries and replace them.

Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated on the battery compartment door.
- Remove batteries during long period of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same orequivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

ICES-003

- This Class B digital apparatus complies with Canadian ICES-003.
- Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.


NMB-003

- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.
- L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.


Fun Holiday Sounds



- Slide the power switch on the tree ON ● or OFF ○.
- Press the tree for sounds and lights.

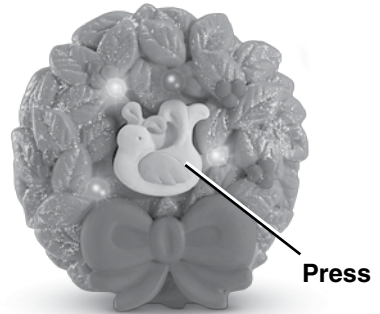

- Hang the wreath on the front door.
- Press the button for lights and sounds!

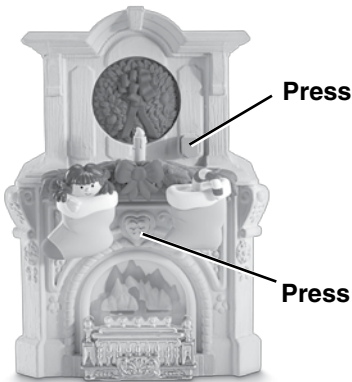


- Press the button on the mantle to turn the wreath and start the fire while you listen to fun tunes!
- Press the heart button to hear more sounds.



- Press the button on the stove to hear fun kitchen sounds!

Storage

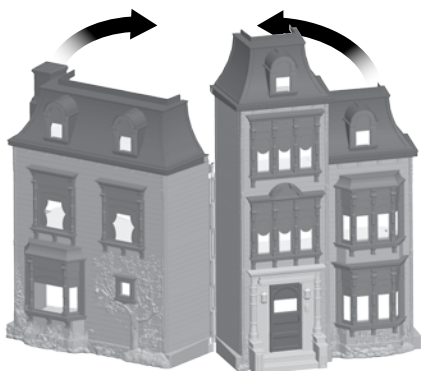

-
- Store everything inside the house. Push the sides of the house together and "snap" in place.



-
- Lift the house by the attic floor.

Care

- Wipe the toy with a clean, damp cloth. Pillows are surface washable only. Do not immerse.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Consumer Information

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CONSUMER ASSISTANCE**
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)
service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.