

**Fisher-Price®**

**iXL**  
LEARNING SYSTEM



**IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.**

**⚠ CAUTION - ELECTRIC TOY**

Not recommended for children under 3 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock.

**[www.fisher-price.com](http://www.fisher-price.com)**

# Consumer Information

## DANGER

To prevent electric shock, do not immerse in water; wipe clean with a damp cloth.

**IMPORTANT!** Before first-time use, charge the 4,8V NiMH rechargeable battery pack for 5 hours. Charge the 4,8V NiMH rechargeable battery only with the supplied charger. Do not use any other charger.

 
- Please read this booklet before first-time use. Keep these instructions for future reference, as they contain important information.
- Requires a 4,8V NiMH rechargeable battery pack (included) for operation.
- Adult assembly is required.
- Tool required to access battery compartment: flathead screwdriver or coin (not included)
- The charging station is not a toy. Do not use extension cords with the charger base.
- iXL™ Learning System not included and sold separately.
- **Adults Note:** Adult supervision is required. Periodically examine this product for damage to the cord, housing or other parts that may result in the risk of fire, electric shock or injury. If the product is damaged, do not use it.
- Even with proper care, the rechargeable battery pack will not last forever. The life of the rechargeable battery pack depends on how well you follow these instructions and the total number of hours it is used. If you should need to replace the rechargeable battery pack, contact Fisher-Price®.
- Do not connect to more than the recommended number of power supplies.
- Do not disassemble the sealed 4,8V NiMH rechargeable battery pack.
- Do not charge a battery pack that shows leakage or corrosion.
- Charger specifications: Input 120 VAC, 60 Hz; Output 9.0 VDC, 600 mA.


# One-Time Assembly




- Fit the tabs on the base back into the slots in the charger base. Push to “snap” in place.


# Battery Pack Installation

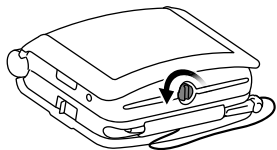

 
- Using a slotted screwdriver or coin, turn the battery compartment fastener on the side of the iXL™ Handheld Device (sold separately) to unlock .

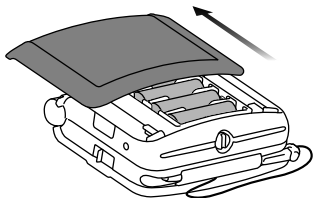

 
- **Slide** the battery compartment door to remove it.

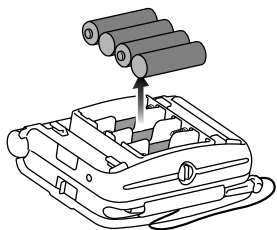

 - Remove the batteries from the battery compartment.

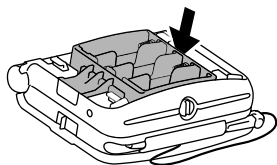


- Pull up on the gray tab.

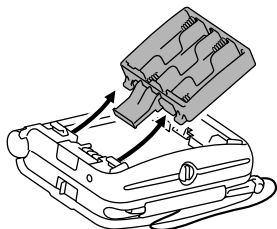 


- While pulling up on the tab, lift the battery tray.


# Battery Pack Installation

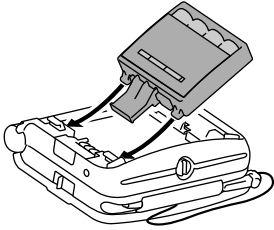 

 
- Fit the tabs on the rechargeable battery pack into the slots in the battery compartment.

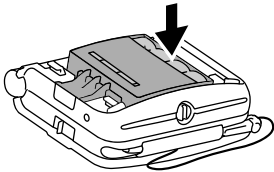

- Push to “**snap**” in place.

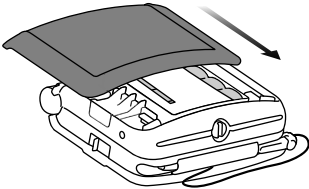 

 
- Fit the tabs on the underside of the battery compartment door into the grooved tabs on the handheld. **Slide** the battery compartment door to close.

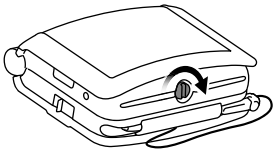

- Using a slotted screwdriver or coin, turn the fastener to lock .

# Battery Tray Storage

 **Note:** You can store the battery tray in the bottom of the charging base for future use.


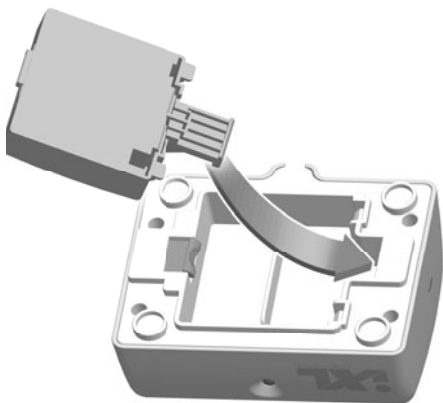


**IMPORTANT!** Remove the “AA” batteries from the battery tray.

- Fit the long tab on the battery tray into the slot on the bottom of the charging base. Push to secure the battery tray in the charging station.

# Charging Your Battery

  **IMPORTANT!** The rechargeable battery pack must be installed in the iXL™ Handheld Device to charge it. **Before** first-time use, charge the 4,8V NiMH rechargeable battery pack for 5 hours.

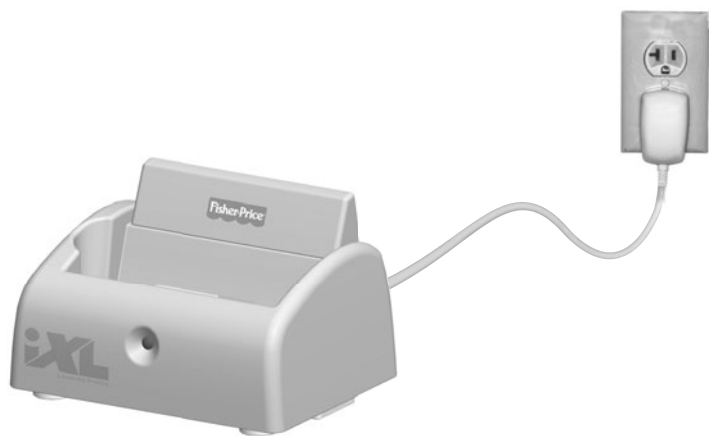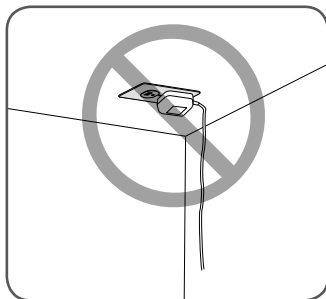

- Plug the charging station into a standard wall outlet.

**Notes:** If power flow to the wall outlet is controlled by a switch, make sure the switch is “ON”. Plug the charging station only in a wall outlet. Do not plug the charging station into a ceiling outlet. To connect to a supply that is not in the United States, use an adapter (not included and sold separately) with the proper configuration for the power outlet.

# Charging the Battery Pack



- Place the iXL™ Handheld Device into the charging base. The L.E.D. will flash and then turn red.
- Charge the iXL™ Handheld Device for **five hours**. The L.E.D. will turn green when the battery pack is fully charged.
- Remove the iXL™ Handheld Device from the charging station. Unplug the charging station from the wall outlet.
- When you see the low battery indicator on the iXL™ Handheld Device screen, it's time for an adult to charge the battery pack.



# Battery Safety Information

In exceptional circumstances, a battery pack may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Insert the battery pack as indicated inside the battery compartment.
- Remove the battery pack during long periods of non-use. Always remove an exhausted battery pack from the product. Dispose of the battery pack safely. Do not dispose of this product in a fire. The battery pack inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Use only the Fisher-Price® battery pack that came with this product.

# Troubleshooting and Care

Problem	Solution
Charging station begins to operate erratically	The charging station may need to be reset. Unplug it from the wall outlet. Wait 10 seconds and plug it back in
L.E.D. turns green before battery is fully charged	If you quickly the iXL™ Handheld Device from the charging station and replace within 4 seconds, the L.E.D. will turn green. Remove the iXL™ Handheld Device from the charging station wait 10 seconds and replace it
The L.E.D. does not light	You may have dirt on the charging contacts. Wipe the charging station and the iXL™ Handheld Device with a cloth to remove
4,8V NiMH rechargeable battery pack feels warm	It is normal for the battery pack to get warm during charging and is not reason for concern.

- Wipe this product with a clean cloth dampened with a mild soap and water solution. Do not use bleach. Do not use harsh or abrasive cleaners. Do not immerse in water. Immersing this product can result in electric shock.
- This product has no consumer serviceable parts. Do not take this product apart.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

# Consumer Information

## **FCC Statement (United States Only)**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **ICES-003**

- This Class B digital apparatus complies with Canadian ICES-003.
- Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **NMB-003**

- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.
- L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

# Consumer Information



## CONSUMER ASSISTANCE

1-888-892-6123 (US & Canada)

1300 135 312 (Australia)



[service.fisher-price.com](http://service.fisher-price.com)

**Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.**

**Hearing-impaired consumers: 1-800-382-7470.**

---

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk)

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

Fisher Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.  
©2011 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.