



Please keep this instruction sheet for future reference,  
as it contains important information.

Requires four "C" (LR14) **alkaline** batteries (not included) for operation.

Adult assembly is required.

Tool required: Phillips screwdriver.

Wipe this toy with a clean, damp cloth. Do not immerse.

This toy has no consumer serviceable parts. Do not take apart.

# Consumer Information



## CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)  
1300 135 312 (Australia)

**service.fisher-price.com**

---

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers: 1-800-382-7470.

**Outside the United States:**

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk)

Mattel Europa B.V., Gonde 1, 1186MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

## FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.


## ICES-003

- This Class B digital apparatus complies with Canadian ICES-003.
- Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## NMB-003

- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.
- L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

# Battery Installation

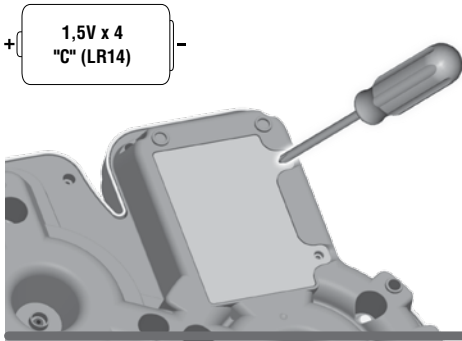

- Locate the battery compartment door on the bottom of the toy.
  - Loosen the screws in the battery compartment door and remove the door.
  - Insert four “C” (LR14) **alkaline** batteries.
- Hint:** We recommend using **alkaline** batteries for longer battery life.*
- Replace the battery compartment door and tighten the screws.
  - If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.
  - When you see the red traffic light flash (for approximately four seconds) or you notice sounds, lights or motion become faint, slow or stop, it's time for an adult to change the batteries.



Protect the environment by not disposing of this product with household waste (2002/96/EC).

Check your local authority for recycling advice and facilities.

# Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

# Assembled Parts



## CAUTION

This package contains small parts.  
For adult assembly only.

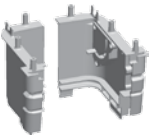

Police Station  
Walls (2 pieces)



Police Station  
Roof



 
Ramp



Door



Arch



Garage  
Walls (2 pieces)



Garage Roof



Traffic Light



Gas Pump



 
Stop Sign



Gear Shifter



Base




M3,5 x 12mm Screws - 12

**SHOWN ACTUAL SIZE**


**Note: Tighten and loosen all screws  
with a Phillips Screwdriver. Do not  
over-tighten the screws.**

# Assembly

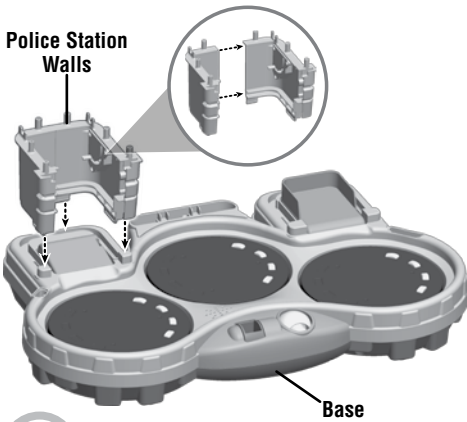


1

- While holding the police station walls together, fit the tabs on the bottom of the police station walls into the opening in the base, as shown.
- Push to **“snap”** the walls in place.

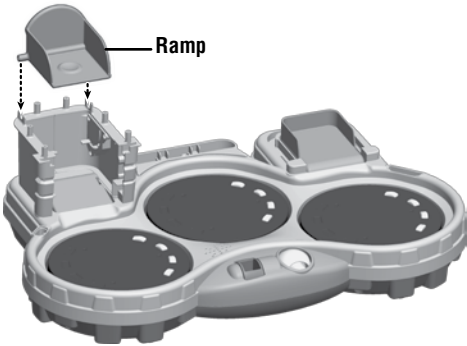


2

- Set the pegs on the ramp into the retainers on top of the police station walls.

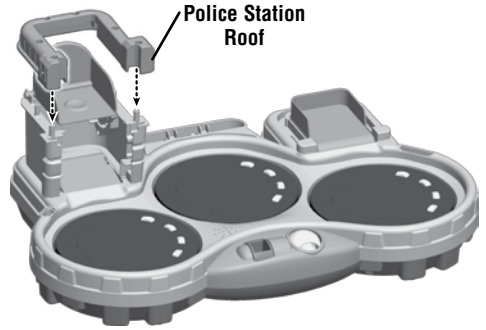

3


- Fit the police station roof on top of the police station.

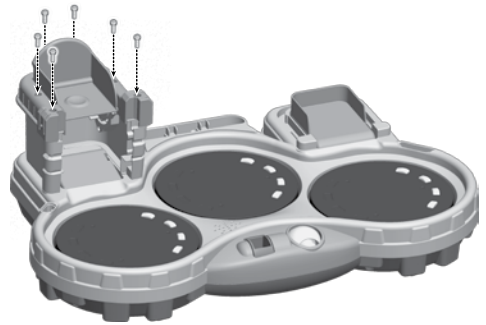

4


- Insert six screws into the police station roof and tighten.

# Assembly

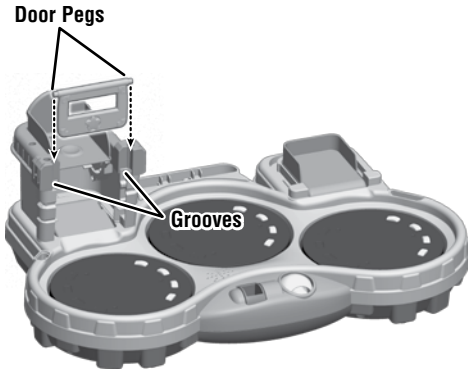


5

- Fit the pegs on the door into the grooves in the police station roof.

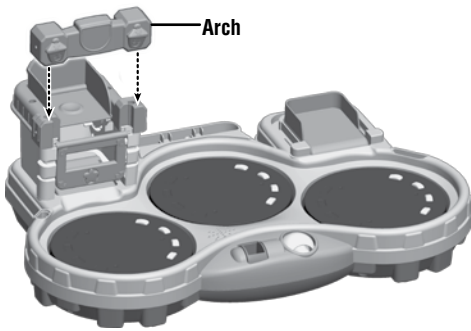


6

- Fit the arch on top of the police station assembly. Push to “snap” in place.

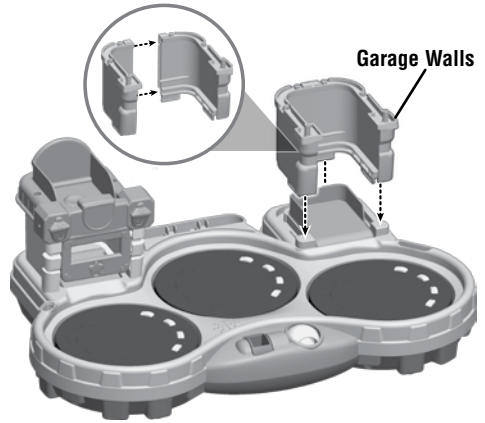

7


- While holding the garage walls together, fit the tabs on the bottom of the garage walls into the opening in the base, as shown.
- Push to “snap” the walls in place.

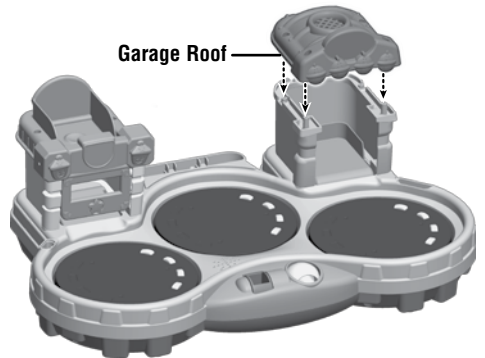

8


- Fit the garage roof onto the garage walls.

# Assembly

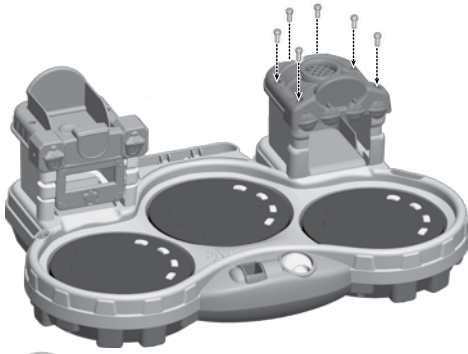


9

- Insert six screws into the garage roof and tighten.

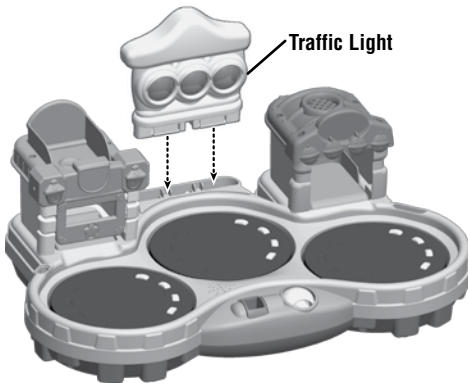


10

- Fit the tabs on the traffic light into the large slot in the center of the base.
- Hint: The traffic light is designed to fit into the base one way. If it does not seem to fit, turn it around and try again.*
- Push to “**snap**” in place.

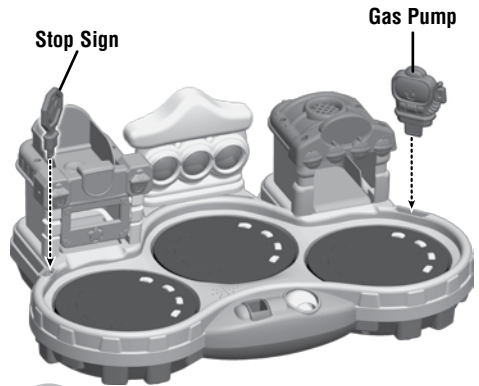

11


- “**Snap**” the gas pump and stop sign into the small slots in the base.
- Hint: The gas pump and stop sign are designed to fit into the base one way. If they do not seem to fit, try the other slot.*

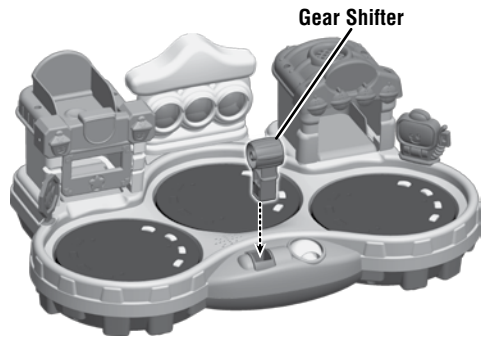






12

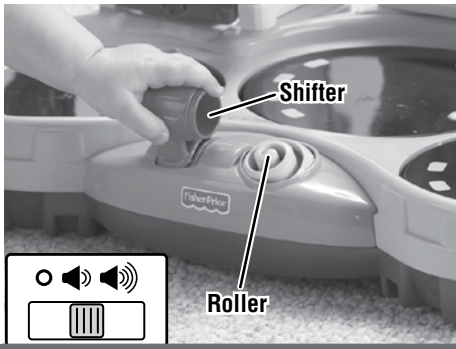- “**Snap**” the gear shifter into the socket in the front of the base.

# Chasin' Racin' Action



- Slide the power/volume switch to ON with low volume  or ON with high volume .
- Place a vehicle on the roadway and pull the gear shifter for racing action with music and lights!
- Drop a car through the police station ramp to activate a high speed chase!
- When you are finished playing with this toy, slide the power/volume switch OFF .

**Hint:** Pull the gear shifter down  for high speed or push up  for low speed!

- Spin the roller for more fun sounds and lights!