

Fisher-Price®

W9859



www.fisher-price.com
www.fisher-price.com.cn

Consumer Information

消费者信息

- Please keep this instruction sheet for future reference, as it contains important information.
- Requires four “AA” (LR6) **alkaline** batteries (not included) for operation.
- Adult assembly is required. Tool required: Phillips screwdriver (not included)
- Wipe this toy with a clean, damp cloth. Do not immerse.
- This toy has no consumer serviceable parts. Do not take apart.
- 此说明书包含重要信息，请保留以备日后察看。
- 需要4节1.5伏5号**碱性**电池（不含）。
- 需由成年人组装。需要的工具：十字螺丝刀（不含）
- 用干净的湿布擦拭玩具，不得将玩具浸入水中。
- 此玩具的任何零件均不得由消费者自行维修。切勿拆分。

Assembled Parts 组装部件

CAUTION 注意

This package contains small parts. For adult assembly only.

本包装内含小零件。须由成人安装。



Top
顶部



2 Ramps
2个坡道



2 Rails
2个栏杆



3 Feet
3个底座



3 Legs
3个桌脚




M4, 5 x 19 mm Screw – 6
Shown Actual Size

Tighten and loosen all screws with a Phillips screwdriver.
Do not over-tighten.

M4, 5 x 19mm螺丝-6个
按实际尺寸显示
使用十字螺丝刀拧紧或旋开螺丝。请勿拧得过紧。

Assembly 组装

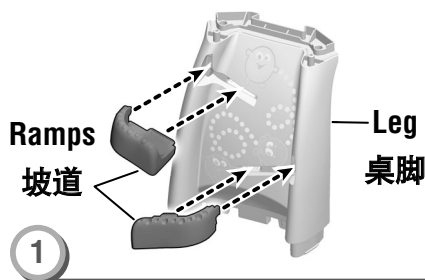

- 将坡道上的耳片对准桌脚的槽口，向里推直至听到“咔嚓”一声即可。

提示：坡道设计是一一对应的。如果一条坡道不适合要插入的桌脚，请用另一个坡道再试。


- Fit the tabs on each ramp into the slots in the leg. Push to "snap" in place.

Hint: The ramps are designed to fit one way. If the ramp does not seem to fit in the leg, try the other ramp.

Assembly 组装




- Insert the tabs on a leg into the slots on a foot. Push to “snap” in place.
- Repeat this procedure to assemble the remaining legs and feet.
- 将桌脚上的耳片插入底座的槽口内，向下推直至听到“咔嚓”一声即可。
- 重复这一步骤对其它的桌脚和底座进行组装。

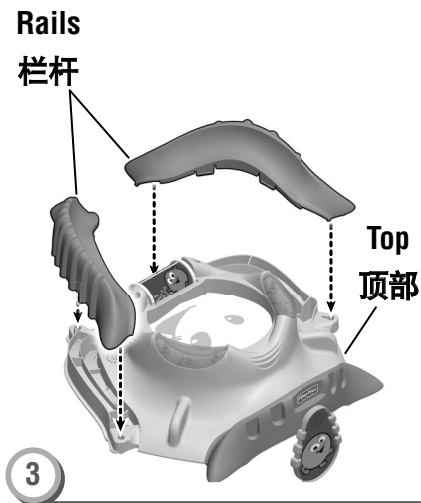


- Fit the rails onto the top, as shown.
- 如图所示，将栏杆安装在顶部。

Assembly 组装

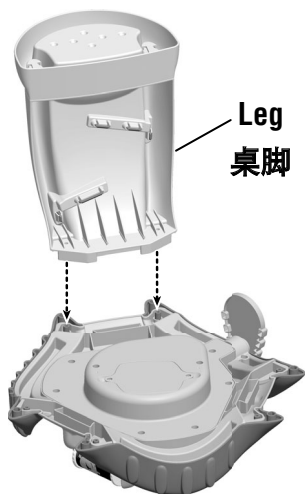

4

- Carefully turn the top over and place on a flat surface.
- Fit the tabs on a leg into the grooves in the top.
- 小心将顶部翻转并放在平面上。
- 将桌脚上的耳片装入顶部的凹槽里。

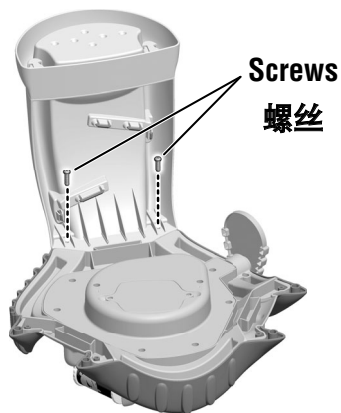


5

- Insert two screws into the leg and tighten.
- Repeat this procedure to assemble the remaining legs.
- 将两个螺丝插入桌脚并拧紧。
- 重复这一步骤对其它的桌脚进行组装。

Battery Installation

电池安装

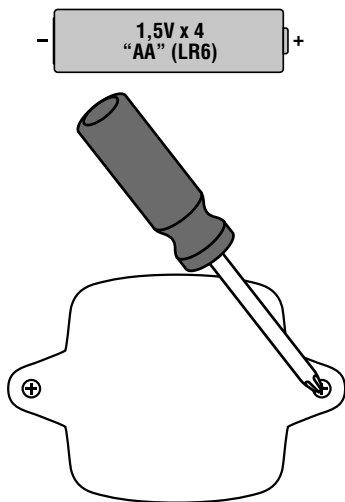

- 用十字螺丝刀松开电池盒盖的螺丝，拆下盒盖。
- 插入四节五号（LR6）**碱性**电池。

提示：为获得更长的电池使用寿命，建议使用**碱性**电池。

- 重新安上电池盒盖并拧紧螺丝。
- 如果玩具无法正常使用，则需重设电子器件。将移动电源/音量开关调至关闭位置然后再打开。
- 声音、灯光或动作变弱或停止时，需由成年人更换电池。

- Loosen the screws in the battery compartment door with a Phillips screwdriver and remove the door.
- Insert four “AA” (LR6) **alkaline** batteries.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.
- When sounds, light or motion become faint or stop, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.
- 为保护环境，请勿将此玩具当作普通生活垃圾处理（2002/96/EC）。请咨询当地权威环境保护机构获取循环使用建议及相关弃置设施。

Battery Safety Information

电池安全信息

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

异常情况下可能会发生电池液体泄漏，电池液体泄漏会导致化学烧伤或产品损坏。为避免电池液体泄漏：

- 请勿将新旧电池或不同类型的电池混合使用，如：碱性电池，标准（碳锌）电池或充电（镍镉）电池。
- 请按照说明将电池放入电池盒内。
- 长时间不使用，请取出电池。用尽的电池应从玩具中取出。请妥善丢弃电池。请勿燃烧销毁本品。可能会导致本品内的电池漏液或爆炸。
- 电池端子不得短路。
- 本品只能使用本说明书所建议的电池或与其相同规格的电池。
- 非充电电池不能充电。
- 充电电池在充电前应从玩具中取出。
- 如果使用可取出的充电电池，则只能在成人监护下充电。

Erupting Action!

开始游戏！



Power/Volume Switch
电源/音量开关



- Slide the power/volume switch to ON with low volume  or ON with high volume .
- Swing the paddle for sounds and lights!
- Place the balls in the center of the toy. Then, bat the roller to watch them erupt!
- When finished playing with this toy, slide the power/volume switch OFF .

- 调节电源/音量开关， 表示低音量， 表示高音量。
- 转动手动遥控杆调节声音与灯光！
- 将球放在玩具的中心，然后，击打小滚筒，看它们怎样开始游戏！
- 在不玩玩具时，调节电源/音量开关至关闭位置 .



service.fisher-price.com

Taiwan: Mattel Taiwan Corporation, 9F, No.188, Nan King East Road, Sec.5, Taipei, Taiwan
Customer Care line:

0800-212-797

美泰兒股份有限公司
台北市南京東路五段188號9樓
免付費諮詢專線: **0800-212-797**

Hong Kong: Mattel East Asia Ltd., Room 1106-08, South Tower, World Finance Centre, Harbour City, 17 Canton Road, Tsimshatsui, HK, China
Customer Care line:

+852 - 3185 6500

香港九龍尖沙咀廣東道十七號
海港城環球金融中心南座十一樓一一零六至八室
免付費諮詢專線:
+852 - 3185 6500

Mattel Barbie (Shanghai) Trading Co., Ltd. Room 2201, 2207, 22/F., Ascendas Plaza, 333 Tian Yao Qiao Road, Shanghai
200030, P.R.C.

美太芭比(上海)貿易有限公司
上海市天鈞橋路333號
2201、2207室

中国消费者免费咨询专线:
800-820-6939

Malaysia & Singapore: Mattel Southeast Asia Pte Ltd, Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Resort, 47410 Petaling Jaya.
Customer Care line:

+603-3341 9052 (Malaysia),
+65-62350667 (Singapore)