

Fisher-Price®

X0056



www.fisher-price.com
www.fisher-price.com.cn

Consumer Information

消费者信息

- Please keep this instruction sheet for future reference, as it contains important information.
- Adult assembly is required.
- Requires three button cell (LR44) **alkaline** batteries (included). Batteries are non-replaceable.
- Tool required for battery removal: Phillips screwdriver (not included).
- 说明书中包含重要内容，请妥善保管以供日后参考。
- 产品须由成人安装。
- 产品须由三节碱性纽扣电池驱动（内含）。
电池不能更换。
- 移除电池所需工具：螺丝起子（内不含）。

Care 保养

- Wipe with a clean, damp cloth. Do not immerse the train.
- This toy does not have any consumer serviceable parts.
Do not take apart.
- 请用干净的湿布擦拭本品。请勿将车浸入水中。
- 玩具没有可供消费者使用的零件。请勿拆卸本品。




- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.
- 为保护环境，请勿将本产品与家庭垃圾一起丢弃（2002/96/EC）。
请与当地权威机构联系，以获取循环利用的建议和设备。


Assembled Parts 已安装的配件




Farm House
农场小屋

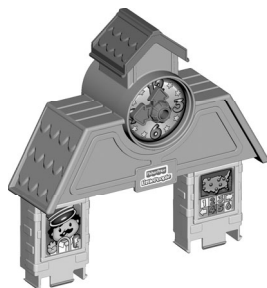


Station
车站

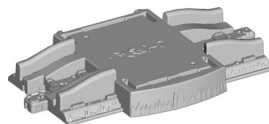

Farm House Base
农场小屋底座

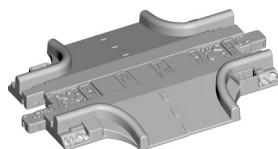

Cross Track
横向轨道

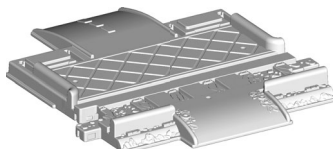


Station Base
车站底座



Gate
门



4 Curved Tracks
4个弯道

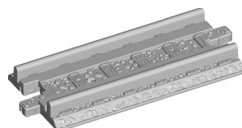


Straight Track
直行轨道




Fruit Stand
水果摊

Assembly 安装

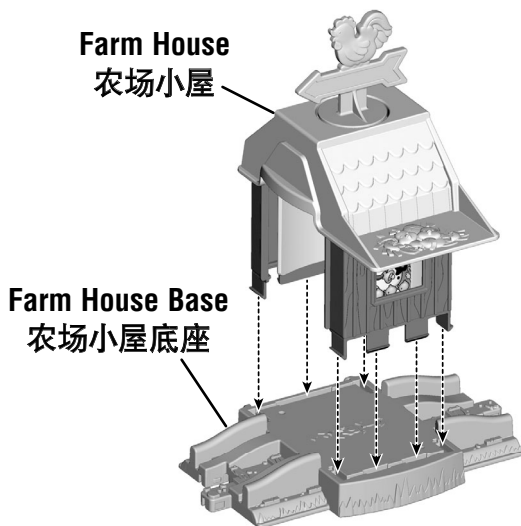


- Fit the tabs on the farm house into the slots in the base. Push to “snap” in place.
- 将农场小屋的凸起部分插入底座的槽口内。推入并听到“咔嗒”声即可。

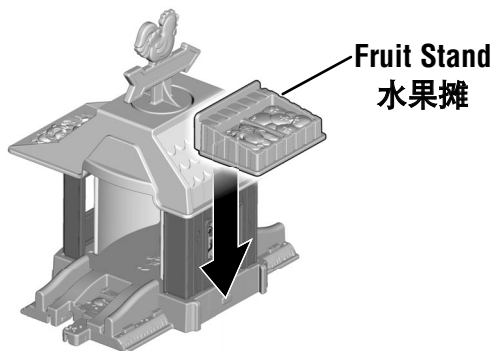


- Slide the fruit stand onto the farm house, as shown.
- 如图所示，将水果摊推入农场小屋。

Assembly 安装

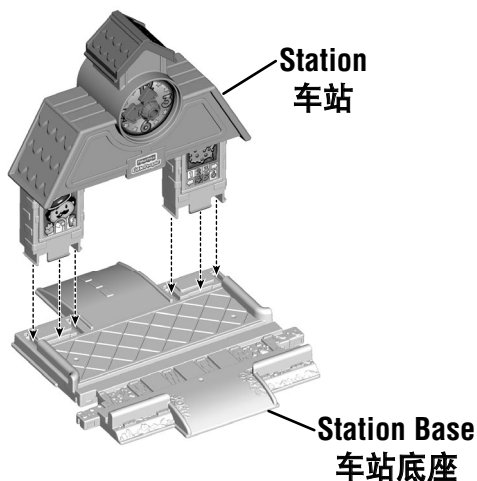

3

- Fit the tabs on the station into the slots in the base. Push to “snap” in place.
- 将车站的凸起部分插入底座的槽口内。推入并听到“咔嗒”声即可。

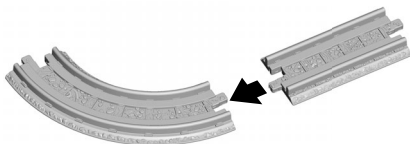

4

- Track pieces easily snap together.
- 轨道配件能够很容易地拼接起来。



Taiwan: Mattel Taiwan Corporation, 9F, No.188, Nan King East Road, Sec.5, Taipei, Taiwan

Customer Care line: **0800-212-797**

美泰兒股份有限公司
台北市南京東路五段188號9樓
免付費諮詢專線: **0800-212-797**

Hong Kong: Mattel East Asia Ltd., Room 1106-08, South Tower, World Finance Centre, Harbour City, 17 Canton Road, Tsimshatsui, HK, China

Customer Care line: **+852 - 3185 6500**

香港九龍尖沙咀廣東道十七號
海港城環球金融中心南座十一樓一一零六至八室
免付費諮詢專線: **+852 - 3185 6500**

Mattel Barbie (Shanghai) Trading Co., Ltd.
Room 2201, 2207, 22/F., Ascendas Plaza, 333 Tian Yao Qiao Road, Shanghai 200030, P.R.C.

美太芭比(上海)貿易有限公司
上海市天鈞橋路333號2201、2207室
中國消費者免費諮詢專線: **800-820-6939**

Malaysia & Singapore: Mattel Southeast Asia Pte Ltd, Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Resort, 47410 Petaling Jaya. Customer Care line: **+603-3341 9052** (Malaysia), **+65-62350667** (Singapore)

Track Layout 轨道平面图

Station Assembly 车站安装

Farm House Assembly 农场小屋安装

Curved Track 弯道

Curved Track 弯道

Gate
门

Cross Track
橫向軌道

Curved Track
弯道

Straight Track
直行軌道

Curved Track
弯道


Choo choo!
轰轰！



- Press the smokestack on the train for fun sounds!
- 按下火车上的烟囱，火车会发出有趣的声音哦！

Battery Removal

移除电池

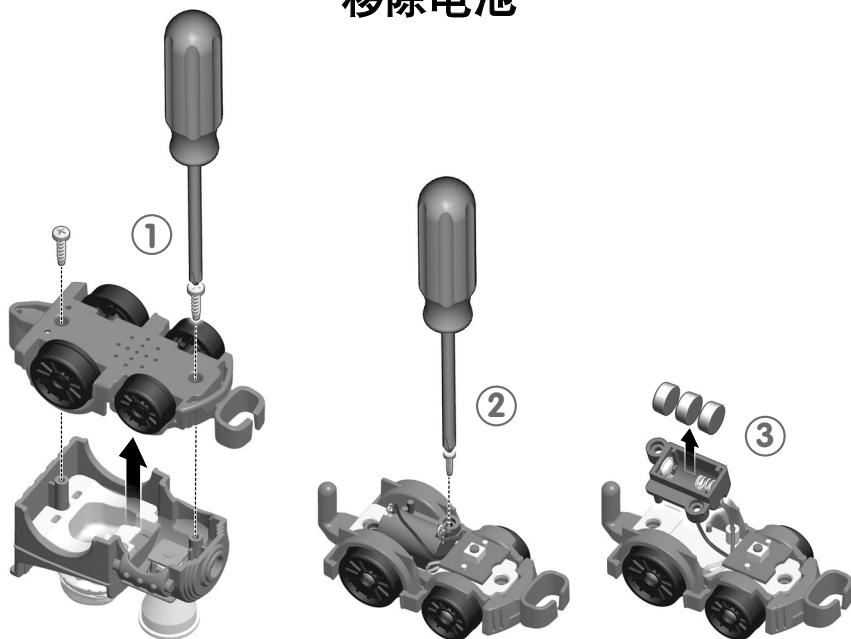

-
- Before disposing of the train, please remove the batteries.
 - First, loosen the screws in the bottom of the train to remove the chassis ①.
 - Turn the chassis over and loosen the screw in the battery compartment ②.
 - Remove the battery compartment and dispose of the batteries properly ③.
-
- 在丢弃火车前，请先移除火车中的电池。
 - 首先，松开火车底部的螺丝，移除底盘 ①。
 - 将底盘掀开，松开电池盒的螺丝 ②。
 - 移除电池盒，请以适当的方式取出废弃电池 ③。

Battery Safety Information

电池安全使用信息

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision

在少数情况下，可能出现电池漏液现象，造成化学性灼伤或损坏产品。为了避免电池泄漏：

- 请勿混用新旧电池或不同类型的电池：碱性电池、标准（碳-锌）电池或充电电池（镍-镉）。
- 请按电池盒内的指示放入电池。
- 如果长时间不使用本产品，请取出电池。请从产品中取出没有电的电池。请妥善处理废弃电池。请勿将废弃电池丢入火中。电池可能会爆炸或泄漏。
- 切勿造成电池接头短路。
- 仅使用推荐的相同或同等类型的电池。
- 请勿给非充电电池充电。
- 在充电前请将充电电池从产品中取出。
- 如果使用移动式充电电池，请务必在成人的协助下进行充电。