

BATTERY INSTALLATION

Unscrew and lift cover away from the products.
Install batteries as indicated inside the battery compartment.
For longer life use only alkaline batteries.
Requires 3 'AAA' (LR03) batteries for James, 2 'AA' (LR03) batteries for Searchlight.
If this toy begins to operate erratically, you may need to reset the electronics.
Remove the batteries from the toy and replace it.

 
BATTERY SAFETY INFORMATION

- In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:
- Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
 - Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Do not mix old and new batteries.
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Batteries are to be inserted with the correct polarity.
 - Exhausted batteries are to be removed from the product.
 - The supply terminals are not to be short-circuited.
 - Dispose of battery(ies) safely.
 - Do not dispose of this product in a fire. The batteries inside may explode or leak.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.
NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
• THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.
• CET APPAREIL NUMERIQUE DE LA CLASSE B EST CONFORME A LA NORME NMB-003 DU CANADA.
• Operation is subject to the following two conditions: (1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.
• Utilisation de ce produit est sujette aux conditions suivantes : (1) il ne doit pas produire de brouillage et
(2) il doit pouvoir tolérer tout brouillage reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



Searchlight

Required tool:
Phillips screwdriver
(not included)

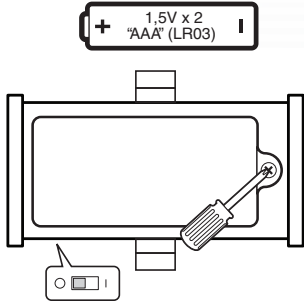

James

  1.5V x 3
'AAA' (LR03)

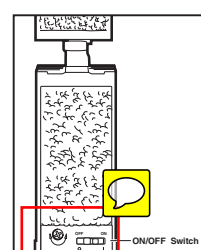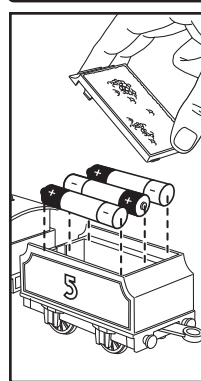

NOTE:
When switch is ON the engine will move around the track and phrases will automatically play every 10 seconds.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Thomas the Tank Engine & Friends™



CREATED BY BRITT ALLCROFT

Based on the Railway Series by The Reverend W Awdry.
© 2011 Gullane (Thomas) Limited.
Thomas the Tank Engine & Friends and Thomas & Friends are trademarks of Gullane (Thomas) Limited.
© HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.
Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052, U.S.A.
PRINTED IN CHINA. Manufactured for Fisher-Price.
© 2011 Mattel, Inc. All Rights Reserved.
® and ™ designate U.S. trademarks of Mattel, Inc., unless otherwise indicated.
Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

X0464



Fisher-Price®

THOMAS & FRIENDS
TRACKMASTER
MOTORIZED RAILWAY

TALKING JAMES
& THE SEARCHLIGHT

 
INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.



Sign Assembly

Insert the rotating sign into the slot, as shown.

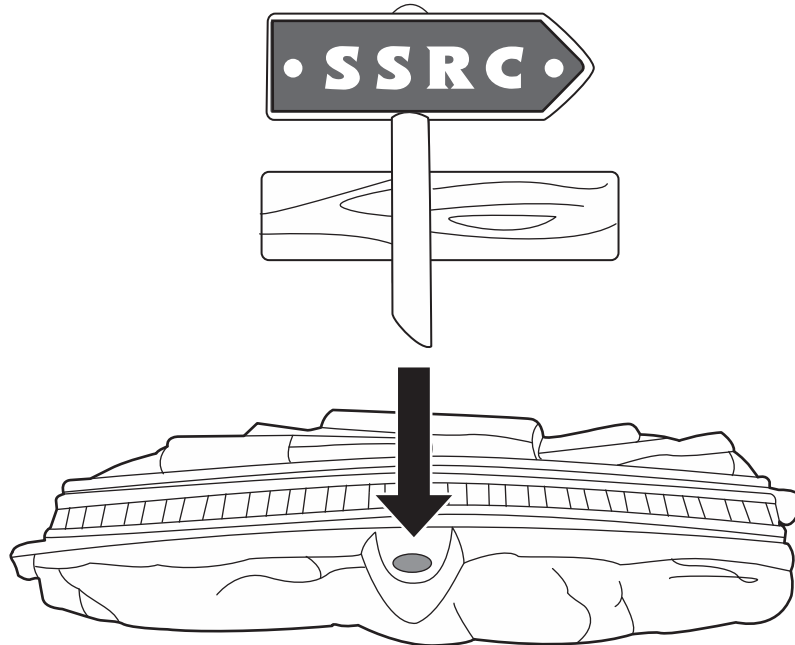


MOTORIZED


ADULT ASSEMBLY REQUIRED. No tools required for assembly.

Searchlight Assembly

 
1. Attach the searchlight to the base, as shown. Once these pieces are snapped together, they cannot be taken apart.

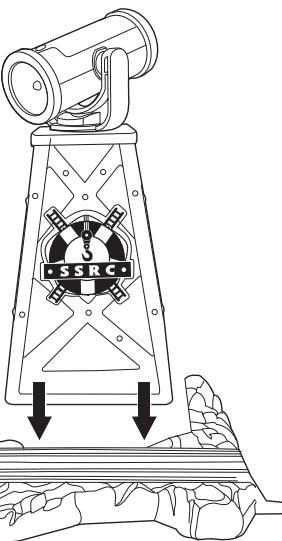

2. Attach the base to the track layout.

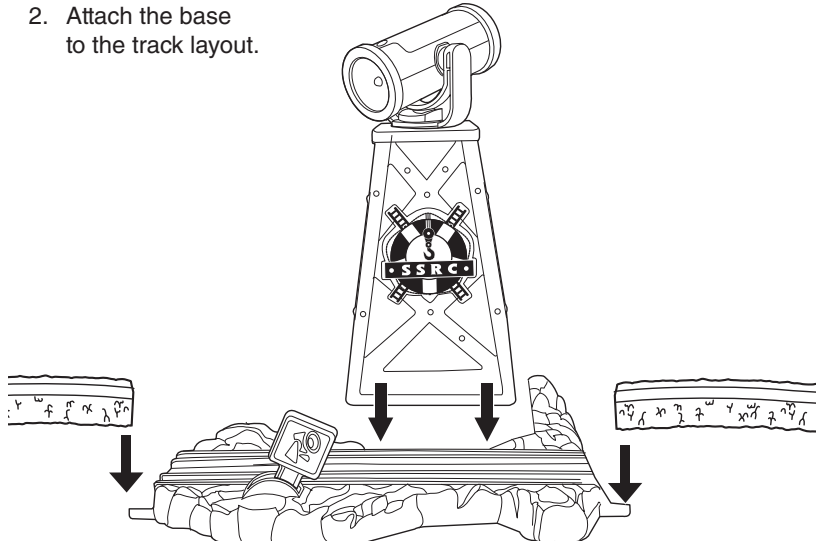 

Track Layout

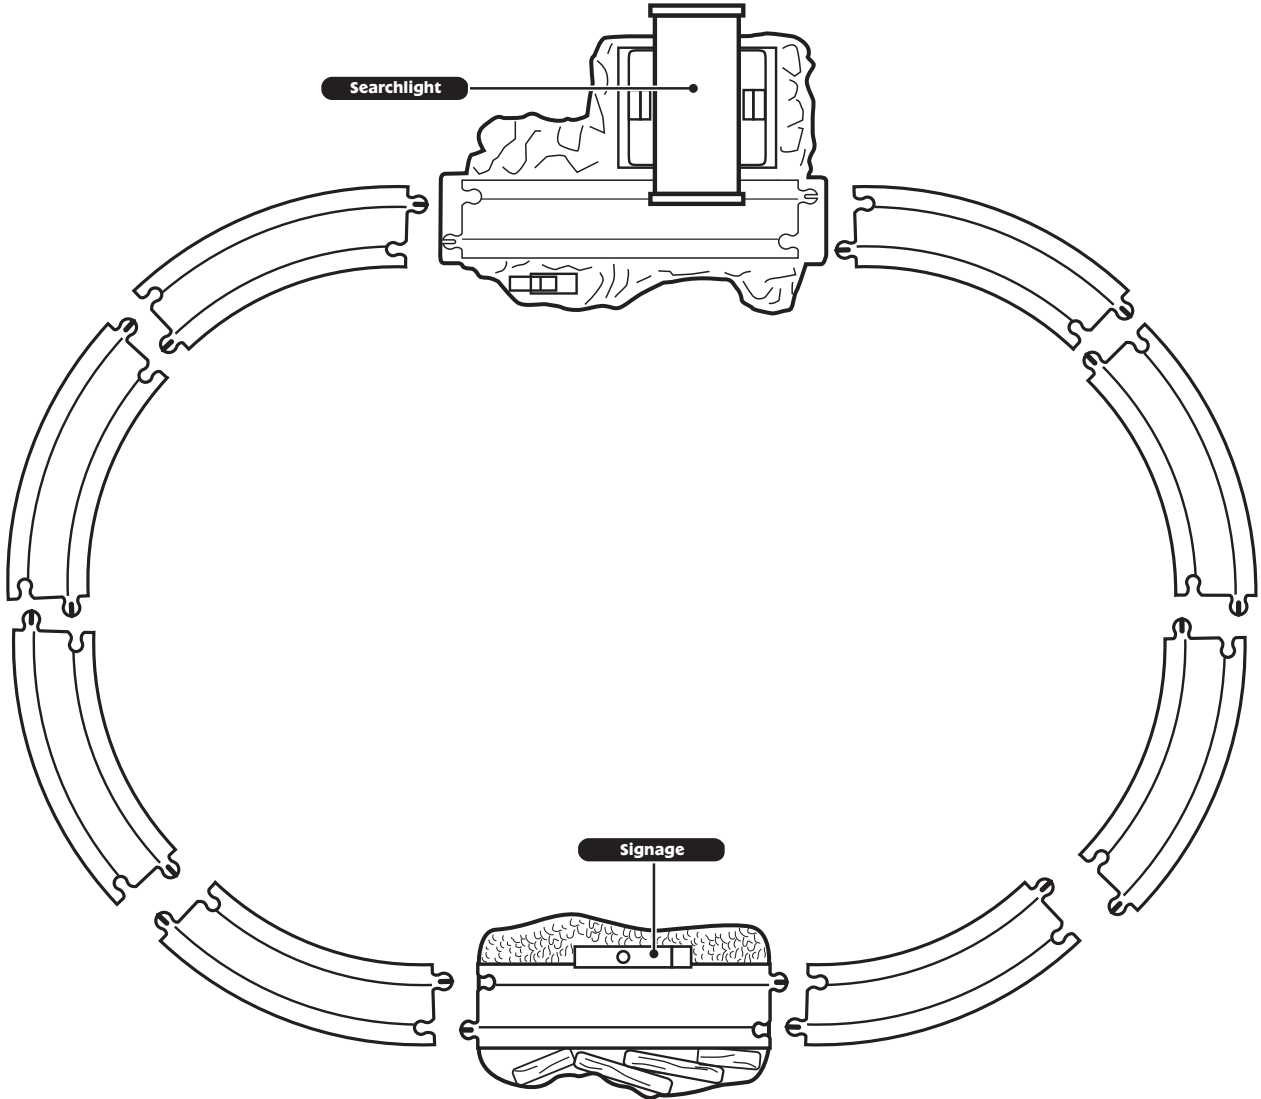 


How To Play

1. Set the switch on top of the searchlight to the ON position to turn on the light.


Attach the searchlight to any existing Trackmaster track layout (sold separately).

Set the brake lever to the STOP position. As the engine approaches, the brake switch will cause it to stop in front of the searchlight.

 
While the engine is stopped in front of the searchlight, the wheels of the engine will power the searchlight to spin around.

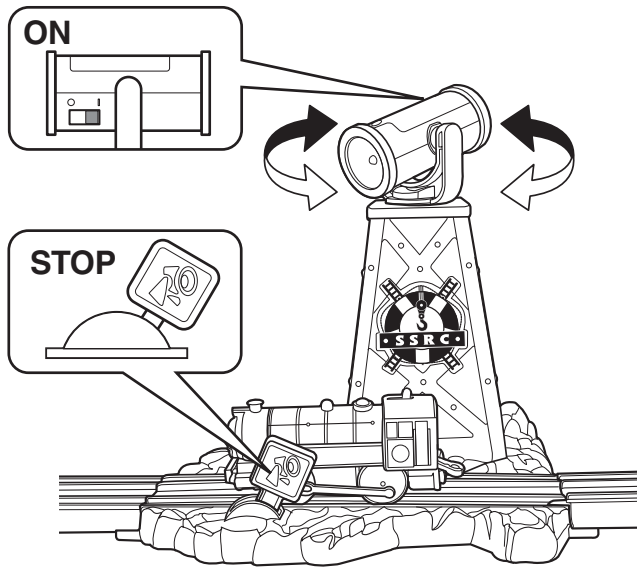

 2. Set the brake lever to the GO position to send the engine on its way around the track.

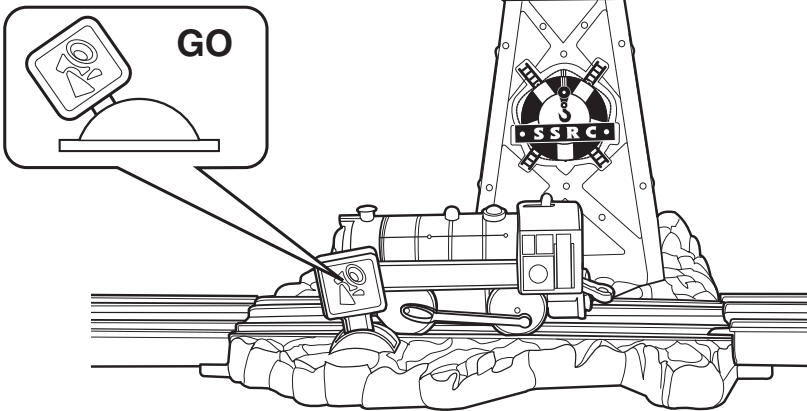

 3. You can point and shine the searchlight manually when the engine is not powering it. Set the switch to the GO position. Do not touch the spinning searchlight while the engine is powering it.

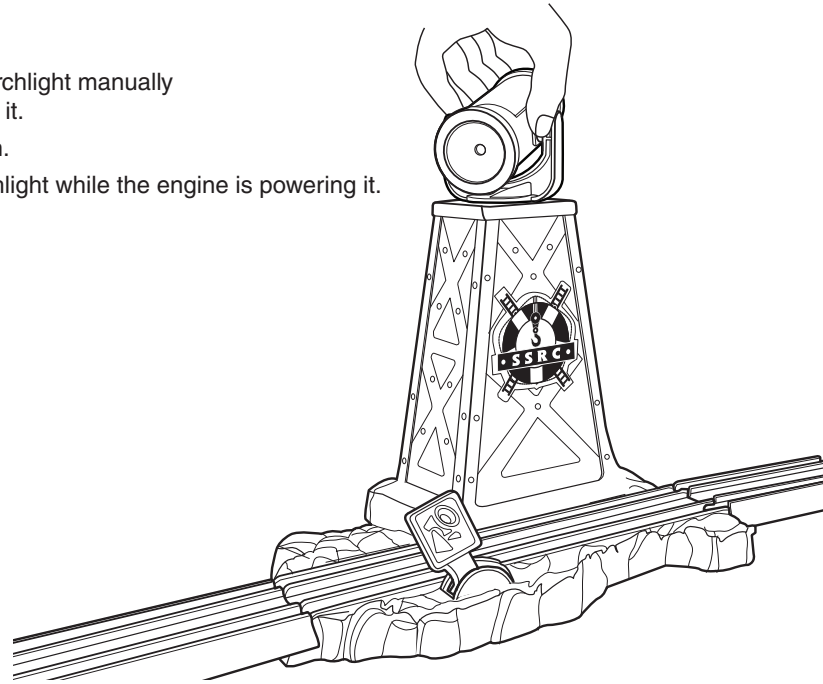

NOTE: Adults should remove & discard rubber bands holding tracks together.

Item No : X0464-0920
Version : EL
Size : 16.54" x 11.69" (A3)
Paper : Woodfree paper 70 gsm
Color : Black
Date : June. 1, 2011 (BC)