



Please keep this instruction sheet for future reference,  
as it contains important information.

Requires three AA and three button cell batteries (included) for operation.  
The AA batteries included are for demonstration purposes only.

Adult assembly is required for battery replacement.  
Tool required for battery replacement: Phillips screwdriver (not included).

# Consumer Information



## CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)

1300 135 312 (Australia)

[service.fisher-price.com](http://service.fisher-price.com)

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.

Hearing-impaired consumers: 1-800-382-7470.

### Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

 
Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk)

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

## Let's Play!

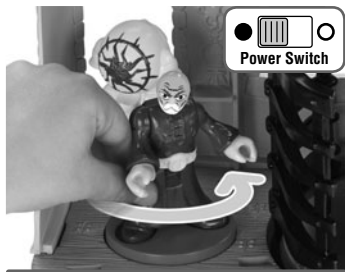

- Slide the power switch on the tower to ON ● or OFF ○.
- Turn the disk to make the Wizard's crystal ball spin.



- Take the dragon to the front of the tower. Then, press the button on the dragon and the tower will respond!

### Recognition Tips:

 
 
- The maximum range between the tower and dragon is 12 feet (3,7 m).
- Bright sunlight or fluorescent lights may affect this range. Try dimming the light in the room you are playing in.
- Make sure there is a clear path between dragon and tower and there are no obstructions between them.
- If the tower does not respond to the dragon when you press the button, you may need to replace the batteries in the dragon with three, new button cell (LR44) **alkaline** batteries.



- Turn the disk to open the chamber and make the dragon glow!

# Battery Replacement

For longer life, use **alkaline** batteries.

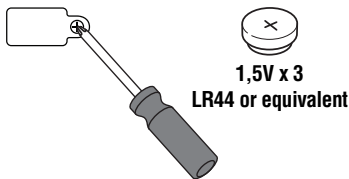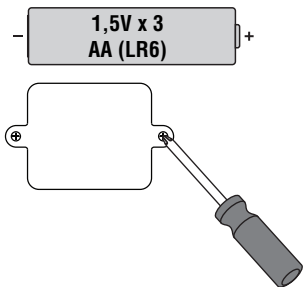

## Tower

For best performance, we recommend replacing the batteries that came with the tower with three, new AA (LR6) alkaline batteries.

- Locate the battery compartment on the tower.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door. Remove the exhausted batteries and dispose of them properly.
- Insert three new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If the tower begins to operate erratically, you may need to reset the electronics. Slide the power switch off and back on.
- When sounds/light from this toy become faint or stop, it's time for an adult to change the batteries.

## Dragon

- Locate the battery compartment on the dragon.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Remove the exhausted batteries and dispose of them properly.
- Insert three, new button cell (LR44) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If the dragon begins to operate erratically, you may need to reset the electronics. Remove the batteries and reinstall them.
- When interaction between the tower and dragon becomes faint or stops, it's time for an adult to change the batteries.

## Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

## FCC Statement

### (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

# Consumer Information

## ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## NMB-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

## Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse.
- This toy has no consumer serviceable parts. Do not take apart.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.