

Back

Cover

©2012 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ, Tel: 03-78803817, Fax: 03-78803867. Mattel Europa B.V., Gondel 1, 1186MJ Amstelveen, Nederland.

Safari and iPad are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

We reserve the right to terminate digital Apptivity™ applications after September 1, 2014.

service.mattel.com

Y0427, Y0428, Y0429, Y3286, Y8902

Y0427-0920

MATTEL

app  
tivity


6+

MONSTER HIGH™

FINDERScreepers™

INSTRUCTION SHEET SPECIFICATIONS	
Toy:	APPTIVITY™ MONSTER HIGH™ FINDERS CREEPERS™
Toy No.:	Y0427
Part No.:	0920
Trim Size:	5"W x 2.5" H
Folded Size:	2.5" W x 2.5" H
Type of Fold:	Fold 1 times (W)
# colors:	One
Colors:	Black
Paper Stock:	White Offset
Paper Weight:	70 lb.
EDM No.:	001

FOLDING DIAGRAM

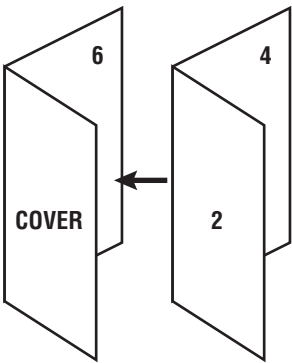

1

2

DOWNLOAD & PLAY

**STEP 1** Open the Safari® browser on your iPad®.

**STEP 2** Visit “www.mattel.com/MHApptivity”

**STEP 3** Tap the “FREE” icon to install the App.

**STEP 4** Once installed, tap the new App icon from your Home Screen to launch.

THE FIGURE

Figure

Base

Bottom of Base

Contact Points

Wipe off contact points and iPad screen before placing figure on iPad.

3

4

FINGER GRIPS

Hold base with two fingers as shown or figure may not function properly. Hold base lightly against the screen of your iPad.

ACTION BUTTON

While holding figure as shown, press the Action Button to select features in the app during game play.

5

6

MULTITASKING GESTURES

For best performance, disable Multitasking Gesture recognition on your iPad.

- Tap the “Settings” icon on your Home Screen.
- Go to “General Settings.”
- Find “Multitasking Gestures” and select “Off.”

TROUBLESHOOTING

- If iPad screen does not respond, **make sure you hold the figure as shown and contact points connect with the screen.**
- Consumer should periodically check the product for damage that could scratch the screen. If damaged, discontinue use.
- For further help, visit [www.MattelApptivity.com](http://www.MattelApptivity.com)